

**Thermo Scientific AquaSensors™
AV38 Local Display and
Controller (RDO® Pro Model)
User Guide**



ROSS and the COIL trade dress are trademarks of Thermo Fisher Scientific Inc. U.S. patent 6,793,787.

AQUAfast, Cahn, ionplus, KNIpHE, No Cal, ORION, perpHect, PerpHecT, PerpHecTion, pHISA, pHuture, Pure Water, Sage, Sensing the Future, SensorLink, ROSS, ROSS Ultra, Sure-Flow, Titrator PLUS and TURBO2 are registered trademarks of Thermo Fisher.

1-888-pHAX-ION, A+, All in One, Aplus, AQUAsnap, AssuredAccuracy, AUTO-BAR, AUTO-CAL, AUTO DISPENSER, Auto-ID, AUTO-LOG, AUTO-READ, AUTO-STIR, Auto-Test, BOD AutoEZ, Cable-Free, CERTI-CAL, CISA, DataCOLLECT, DataPLUS, digital LogR, DirectCal, DuraProbe, Environmental Product Authority, Extra Easy/Extra Value, FAST QC, GAP, GLPcal, GLPcheck, GLPdoc, ISEasy, KAP, LabConnect, LogR, Low Maintenance Triode, Minimum Stir Requirement, MSR, NISS, One-Touch, One-Touch Calibration, One-Touch Measurement, Optimum Results, Orion Star, Pentrode, pHuture MMS, pHuture Pentrode, pHuture Quatrode, pHuture Triode, Quatrode, QuiKcheK, rf link, ROSS Resolution, SAOB, SMART AVERAGING, Smart CheK, SMART STABILITY, Stacked, Star Navigator 21, Stat Face, The Enhanced Lab, ThermaSense, Triode, TRIUMpH, Unbreakable pH, Universal Access are trademarks of Thermo Fisher.

© 2009 Thermo Fisher Scientific Inc. All rights reserved. All trademarks are the property of Thermo Fisher Scientific Inc. and its subsidiaries.

The specifications, descriptions, drawings, ordering information and part numbers within this document are subject to change without notice.

This publication supersedes all previous publications on this subject.

Preface

This instruction manual serves to explain the use of the Thermo Scientific AquaSensors AV38 Local Display and is written to cover as many applications as possible. Please do not hesitate to contact Thermo Fisher Scientific or an authorized representative with questions or concerns.

The information presented in this instruction manual is subject to change without notice as improvements are made, and does not represent any commitment whatsoever on the part of Thermo Fisher Scientific.

Thermo Fisher Scientific cannot accept any responsibility for damage or malfunction of the product due to improper use.

Contact Information

To contact Thermo Scientific AquaSensors Technical Support:

Within the United States call 1.800.225.1480 or fax 978-232-6015.

Outside the United States call 978.232.6000 or fax 978.232.6031.

In Europe, the Middle East and Africa, contact your local authorized dealer.

Visit us on the web at www.thermo.com/processwater

Safety Information



The Thermo Scientific AquaSensors AV38 Local Display shall be installed and operated only in the manner specified. Only a skilled, trained or authorized person should carry out installation, setup and operation of the sensor system.

Before using the display, make sure that the sensor cable is connected as specified. Failure to do so may result in permanent damage to the system or its components.

Protection against electric shock will be achieved only by observance of the corresponding installation rules.

TABLE OF CONTENTS

1.	INTRODUCTION.....	6
1.1.	GENERAL INFORMATION	6
1.2.	INTENDED USE	7
2.	PRODUCT DESCRIPTION	8
2.1.	SYSTEM OVERVIEW	8
2.2.	BASE PART NUMBERS.....	9
2.3.	SENSOR MAPPING	9
2.4.	MOUNTING.....	10
2.5.	WIRING	13
2.6.	MEASURE SCREEN OVERVIEW	18
3.	MENU STRUCTURE AND NAVIGATION.....	21
4.	CALIBRATE MENUS	26
4.1.	1-POINT BUFFER CALIBRATION (SENSOR TYPE: pH)	28
4.2.	2-POINT BUFFER CALIBRATION (SENSOR TYPE: pH)	30
4.3.	ABORTED CALIBRATION (SENSOR TYPE: ALL)	33
4.4.	1-POINT SAMPLE CALIBRATION (SENSOR TYPE: ALL).....	34
4.5.	2-POINT SAMPLE CALIBRATE (SENSOR TYPE: pH).....	36
4.6.	ZERO CALIBRATE (SENSOR TYPE: CONDUCTIVITY, DO, OZONE, DRINKING WATER TURBIDITY, RAW WATER TURBIDITY, SUSPENDED SOLIDS).....	39
4.7.	AIR CALIBRATION (SENSOR TYPE: DISSOLVED OXYGEN, RDO PRO)	41
4.8.	TEMPERATURE 1-POINT SAMPLE CALIBRATION	43
5.	CONFIGURE MENU	46
5.1.	MAIN CONFIGURE MENUS.....	47
5.2.	NAVIGATING SENSOR FILTER CONFIGURATION.....	48
5.3.	NAVIGATING THE USER-ENTERED CONCENTRATION TABLE SCREENS	50
6.	HOST COMMUNICATIONS	56
7.	DATASTICK COMMUNICATIONS SETUP.....	57
7.1.	SETTING DATASTICK STATION NUMBER	58
7.2.	AV38 COMMUNICATIONS SETTINGS	58
7.3.	FINDING DATASTICKS	61
8.	CHLORINE CONFIGURATION MENU.....	66
9.	HOLD OUTPUTS SCREEN.....	68
10.	ANALOG OUTPUTS	69
10.1.	ASSIGNING 4 MA AND 20 MA PARAMETER VALUES	69
10.2.	CALIBRATING ANALOG OUTPUT CURRENT.....	71
11.	PID CONTROLLER MENU.....	73
12.	RELAYS	75
12.1.	CONTROL RELAY ACTIVATION.....	76

12.2.	ALARM RELAY ACTIVATION	77
12.3.	WASH RELAY ACTIVATION	78
13.	DIAGNOSE MENU	80
14.	HELP MENU	81
15.	RESET AV38.....	81
16.	LIMITED WARRANTY	82
17.	TERMS AND CONDITIONS.....	83

TABLE OF FIGURES

Figure 1: The elements of the AV38 user interface.	18
Figure 2: The "H" indicates that hold mode is active.	19
Figure 3: The initial measure screen when the DataStick is absent.	20
Figure 4: The initial measure screen when the Sensor Head is absent.	20
Figure 5: The complete calibrate menu for pH sensors.	27
Figure 6: The complete calibrate menu for D.O sensors.	27
Figure 7: The complete calibrate menu for conductivity and turbidity sensors.	27
Figure 8: The pH sensor value is dynamically updated during a 1-point buffer calibration.	28
Figure 9: The pH sensor value is dynamically updated during a 2-point buffer calibration.	30
Figure 10: Dynamic display of the conductivity value during calibration.	35
Figure 11: The conductivity calibration edit screen.	35
Figure 12: Entering the conductivity calibration value.	35
Figure 13: Dynamic display of the pH value during calibration.	37
Figure 14: The pH calibration edit screen.	37
Figure 15: Entering the pH calibration value.	38
Figure 16: The complete calibrate menu for conductivity.	39
Figure 17: Zero is Calibrating.	40
Figure 18: The user is prompted to place the sensor in air.	41
Figure 19: The temperature calibration value is presented for editing.	43
Figure 20: The complete configure menu for conductivity.	47
Figure 21: The complete configure menu for pH.	47
Figure 22: The complete configure menu for D.O., Ozone and Chlorine.	47
Figure 23: The complete configure menu for turbidity.	47
Figure 24: The complete DataStick Comms menu.	57
Figure 25: The wash cycle showing when the relay is activated and the outputs are held.	78

TABLE OF TABLES

Table 1: AV38 base part numbers.	9
Table 2: Main menu items.	21
Table 3: Calibration methods.	26
Table 4: The Configure menu.	46
Table 5: A typical concentration table with four points.	50
Table 6: Record the table values here before entering them.	51
Table 7: Summary of concentration table key actions.	55
Table 8: The default concentration table.	55
Table 9: Host protocol vs. user's manual.	56
Table 10: Summary of Find Datasticks key actions.	61
Table 11: PID Controller functions for pH.	73
Table 12: PID Controller functions for conductivity.	74
Table 13: Control relay functions.	76
Table 14: Alarm relay functions.	77
Table 15: Wash relay functions.	78

1. INTRODUCTION

1.1. General Information

Thank you for purchasing the Thermo Scientific AquaSensors AV38 Local Display.

The product is designed for continuous use in industrial process applications and complies with safety regulations currently in force. Improper use could lead to hazards for the user or a third-party, and/or adverse effects to the plant or other equipment.

Thermo Fisher Scientific does not accept any liability for damage that may arise if information in this manual is not followed. Therefore, the operating instructions and specifications must be read and understood by all persons involved in installation and operation of this equipment.

This manual identifies safety instructions and additional information by means of the following symbols:



This symbol draws attention to safety instructions and warnings of potential danger, which if neglected, could result in injury to persons and/or damage to property.



This symbol identifies additional information and instructions, which if neglected, could lead to inefficient operation and possible loss of production.

It is recommended that this manual be made accessible to everyone who may need it as a reference.

Please contact Thermo Fisher Scientific or an authorized representative with any questions.

1.2. Intended use

The Thermo Scientific AquaSensors AV38 Local Display is used to monitor, configure, calibrate and diagnose any DataStick measurement system configured with a Modbus communications adapter or RDO Pro Optical Dissolved Oxygen System in accordance with the technical product specifications in Section 2 of this manual. See MAN032RDO for more information about the RDO Pro.

Data is reported through a scalable 4-20 milliamp analog output or through one of several digital protocols. Options include a second analog output and up to 2 relays. PID control is a standard function when pH or conductivity measurements are connected. Hypochlorous acid (HOCl) and free chlorine concentrations are automatically available when a chlorine sensor is connected.

Any other use, or use not mentioned here, that is incompatible with the technical specifications is deemed inappropriate. The operator is solely responsible for any damage arising from such use.

Other prerequisites for appropriate use include:

- Observing the instructions, notes and requirements set out in this instruction manual.
- Observing all local safety regulations.
- Observing all warnings and cautions in the documentation regarding all products used in this measurement system, including the sensor, mounting hardware, AV38 electronics and cabling.
- Observing the prescribed environmental and operational conditions.
- Observing chemical compatibility with all wetted materials.

1.3. Safety Instructions

The AV38 Local Display should be installed and operated only by personnel familiar with the sensor and qualified for such work.



A defective AV38 should be returned to Thermo Fisher Scientific for repair or replacement. Contact Thermo Fisher Scientific to obtain a Return Material Authorization (RMA) number.

No modifications to the AV38 are allowed. The manufacturer/supplier accepts no responsibility for damage caused by unauthorized modifications. The risk is borne entirely by the user.

1.4. Removal from Service / Correct Disposal of the AV38 Local Display

Removal from Service

- Disconnect the cable wiring from the controller terminal block.
- Remove the AV38 from the mounting hardware.

Correct Disposal of Unit

When the AV38 is taken out of service, observe the local environmental regulations for correct disposal.

2. PRODUCT DESCRIPTION

2.1. System Overview

The AV38 is a universal display interface for DataStick measurement systems. The enclosure has ¼-DIN dimensions for easy mounting and is rated NEMA 4X for outdoor use. It uses a liquid crystal display (LCD) with a high-contrast backlight for best readability and is powered with 24 volts DC. A line-powered version is also available.



Up to 240 DataStick measurement systems can be connected to a single AV38 on a Modbus RTU communications network. Up to two of the DataSticks connected can be mapped to “Channel 1” or “Channel 2” for direct local display, calibration, configuration and diagnosis. All DataSticks can be accessed remotely when the host communications hardware is present.

The AV38 automatically recognizes the type of DataStick connected to it and provides the appropriate calibration, configuration and diagnostic menus. A 10-point user-entered concentration table in the DataStick can be edited and used to convert measured conductivity into % concentration. PID control is a standard function when pH or conductivity DataSticks are connected. Hypochlorous acid (HOCl) and free chlorine concentrations are automatically available when a

chlorine sensor is connected. The AV38 supports up to two 4-20 analog outputs, two alarm/control/wash relays and network communications to a host computer.

The AV38 can operate in two different modes:

1. **Analyzer Mode:** Map up to two DataSticks to the display, analog outputs and relays. Switch the display between the two DataSticks using the RIGHT and LEFT arrow keys. Access all DataSticks on the network for local calibration, configuration or diagnostics using the menu system. When host communications hardware is present, a host computer can simultaneously be used to acquire data or remotely calibrate, configure or diagnose the DataStick that is locally selected for display. This mode is primarily used when analog output, PID and relay functions are needed with a small network of DataSticks.
2. **Gateway Mode:** The host computer has access to all measure, configure, calibrate and diagnose commands for all connected DataSticks. In this mode the AV38 suspends all local functions including menu access, data display, analog outputs and relays. This mode is primarily used when the host computer collects digital data and analog outputs and relays are not needed. The AV38 allows local configuration and calibration of DataSticks when the application requires it. Gateway mode is switched to Measure Mode with a RIGHT arrow or LEFT arrow key press. It is not possible to enter Gateway mode using the RIGHT or LEFT arrow keys when the Measurement is ppmFCL2 (free chlorine concentration). This is because the AV38 needs to continuously acquire data from the chlorine DataStick and, if necessary, the pH DataStick, in order to perform the free chlorine concentration calculation.

When there is no DataStick present at the selected station address, the measure screen will indicate that the DataStick is absent. When the sensor head is removed from the DataStick, the measure screen will indicate that the sensor head is absent.

Host communication options include, Modbus, DeviceNet, and others. The host protocol is independent of the Modbus RTU protocol used by the AV38 to communicate with the DataSticks.

There are seven keys for menu navigation. The MENU key is used to toggle between the menu and the measure screen. Pressing the MENU key provides options for calibration, configuration, communications, analog outputs and relays.

2.2. Base Part Numbers

Part numbers can be easily decoded to give descriptive information about included functions. The part number is printed on the AV38 terminal block overlay where detailed information is provided on the host communications protocols. The base part number and firmware version are displayed at power-up and in the HELP menu. For example, if the display shows “AV38-CBYC, V4.00”, the AV38 has two analog outputs, two relays and host communications, and is operating with version 4.00 firmware.

Base part numbers are decoded as follows:

Table 1: AV38 base part numbers.

Base Part Number	Analog Output(s)	Relays	PID	Host Comms Indicated by second to last character in base part number
AV38BB0A	1	0	Yes	None
AV38BB-Y-A	1	0	Yes	(Y=1) RS-232 ASCII (Y=4) Modbus RTU (Y=5) DeviceNet (Y=7) EtherNet/IP, Modbus TCP, PCCC
AV38CB0C	2	2	Yes	None
AV38CB-Y-C	2	2	Yes	(Y=1) RS-232 ASCII (Y=4) Modbus RTU (Y=5) DeviceNet (Y=7) EtherNet/IP, Modbus TCP, PCCC

Profibus DPV0/V1 Host communications can be obtained using an AV38 with Modbus RTU Host communications (Y=4) connected to a Profibus-to-DataStick Communications Adapter (CA26R).

2.3. Sensor Mapping


Multiple DataStick sensors can be connected to a single AV38 and any number of them can be accessed directly via digital host communications. To simplify local operation only two sensors can be mapped to the display, the analog outputs and the relays at any one time. This is done by selecting the appropriate station number for DataStick 1 (DS1) and DataStick 2 (DS2).

2.4. Mounting

The AV38 can be mounted on a wall or panel mounted in ¼-DIN or ½-DIN forms. A gasket is built into the display for a NEMA 4X seal. Mounting instructions must be followed to maintain seals. The AV38 can be pipe mounted and panel mounted with optional mounting hardware.


2.4.1. Conduit Box Wall Mount

The AV38 conduit box is mounted to a wall or plate with #8 or M4 screws through the mounting holes as shown. There are seven Pg11 and Pg16 knockouts in the conduit box. Two cord grips are supplied and it is recommended that they be used in the conduit holes on the bottom side of the box to prevent rain or moisture from settling at the conduit interface. It is also possible to mount the box using interior breakouts. Four plastic caps are provided to seal the interior mounting screws. NEMA 4X ratings will be maintained only when the #8 mounting screws are used in the holes outside the conduit box gasket.

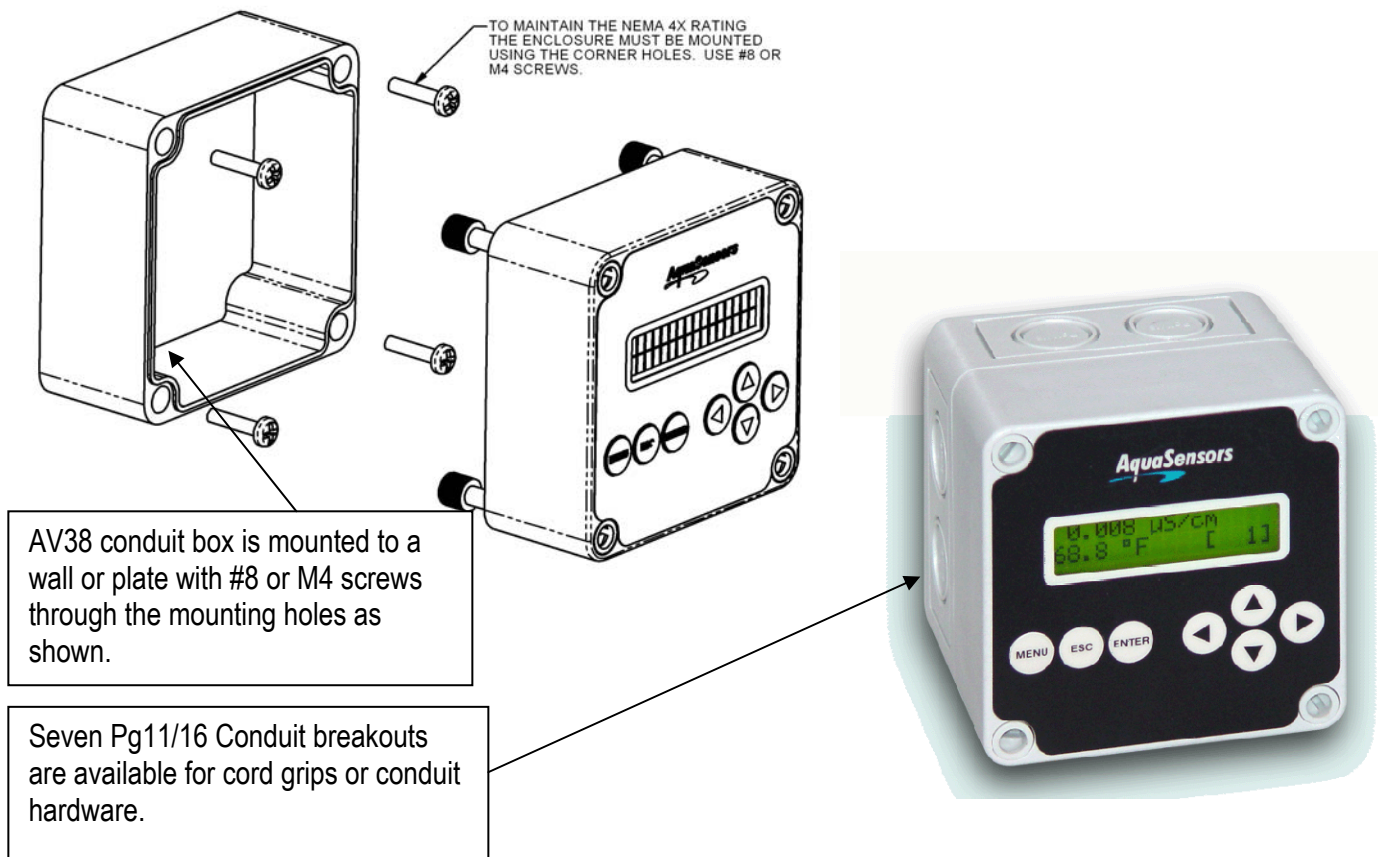


2.4.2. 1/2-DIN Panel Mount (PN: AV38-1/2DIN)

A 1/2-DIN panel-mount bezel and gasket can be ordered to fit the AV38 as shown. The AV38 display is tightened down to the bezel using the four captured screws in the AV38. The bezel is then mounted to a 1/2-DIN square opening with the hardware shown in the figure below.

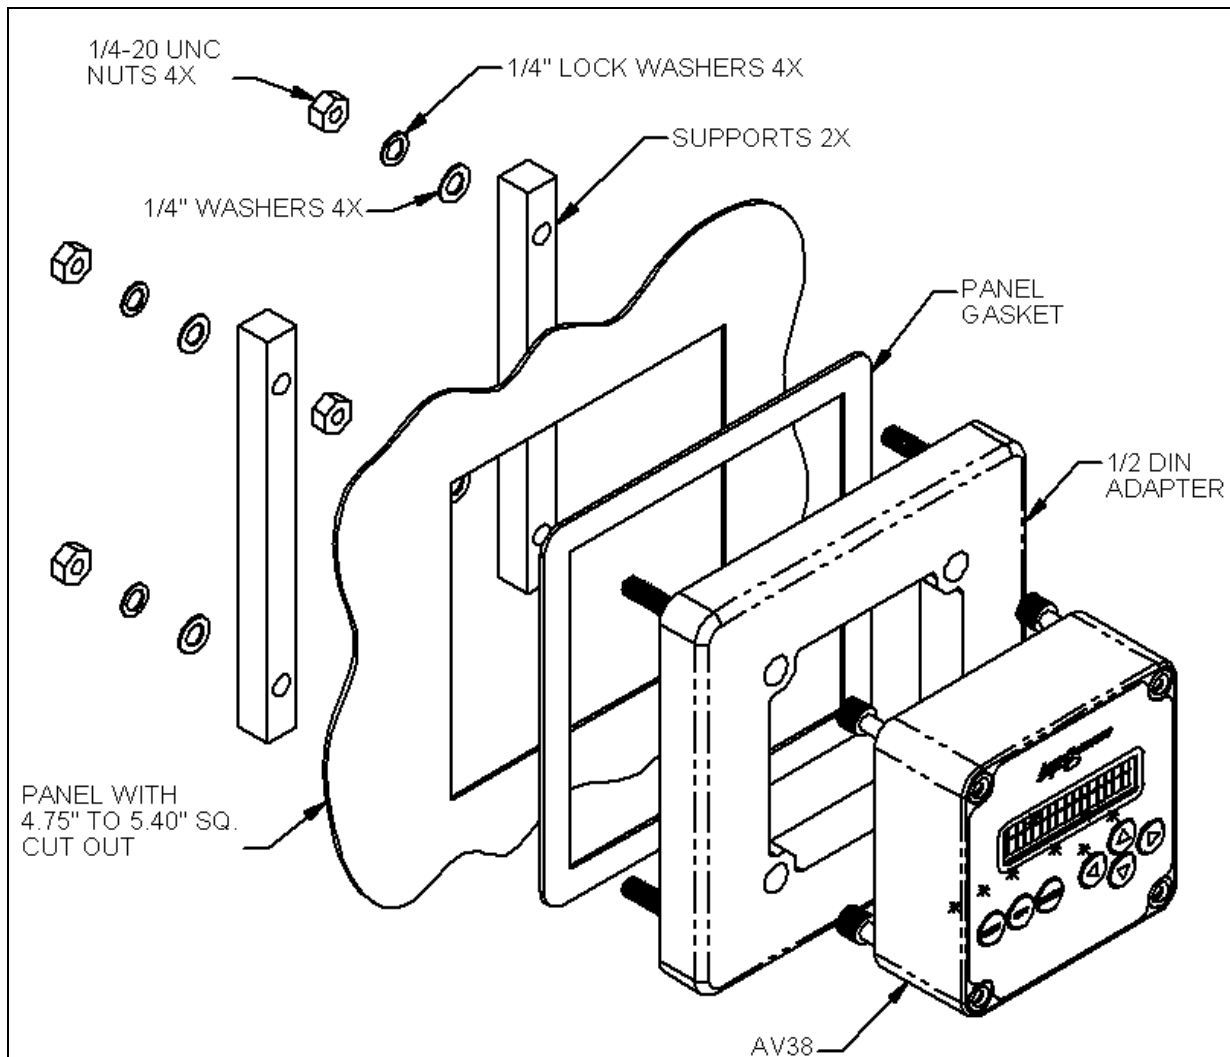

2.4.3. 1/4-DIN Panel Mount (PN: AV38-1/4DIN)


The AV38 Display can be mounted directly to a 1/4-DIN panel opening using the captive mounting screws in the AV38 and the 1/4-DIN supports as illustrated in the figure below. A 1/4-DIN bezel gasket can be provided to ensure a NEMA 4X seal on the panel.

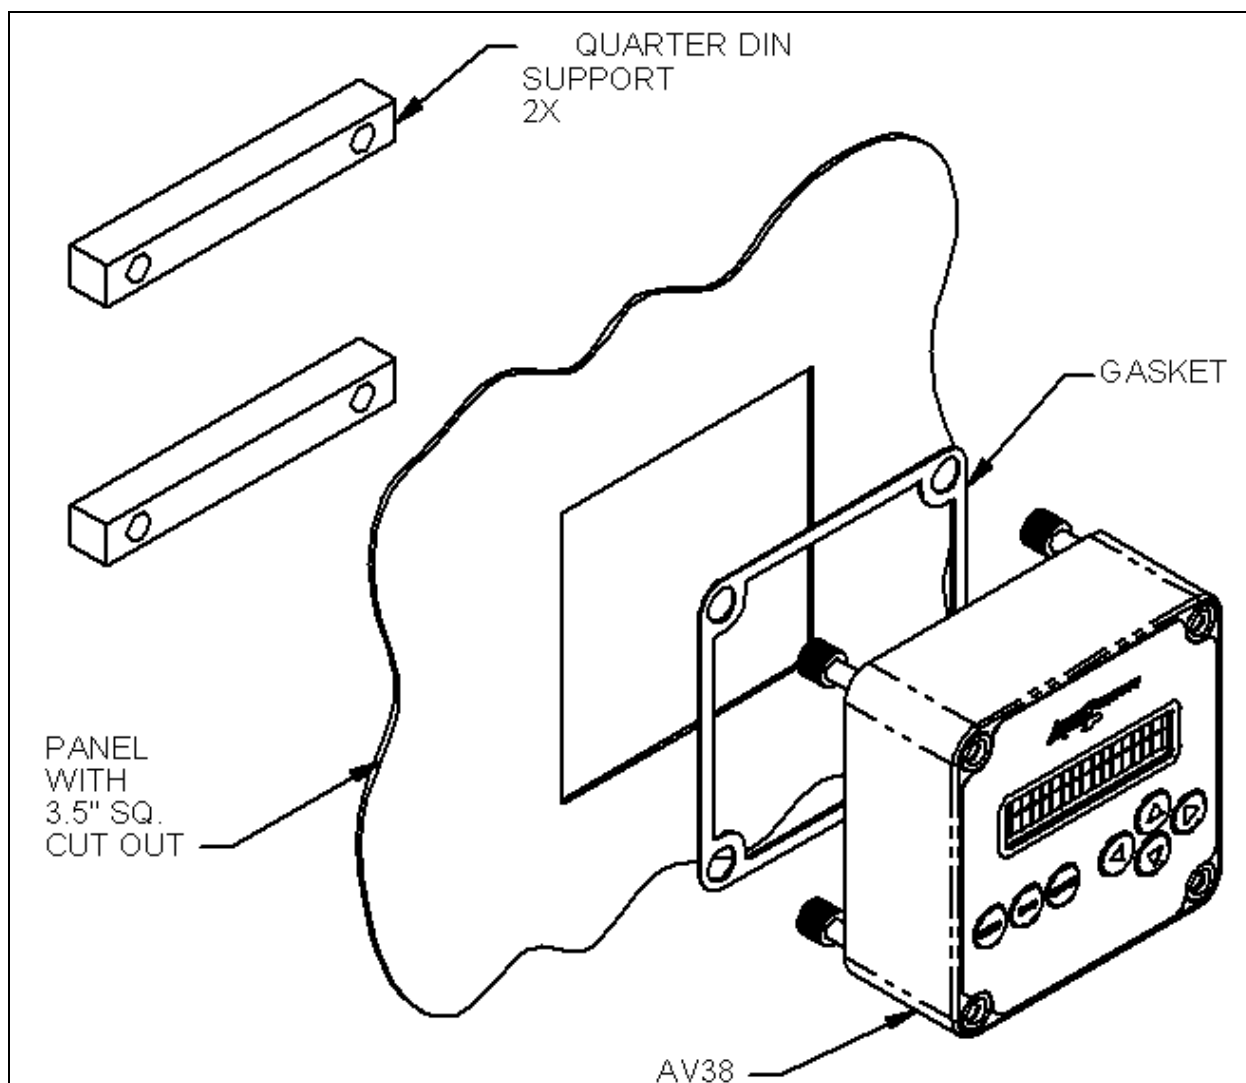

2.5. Wiring

DC-Powered Version (AV38-XBXXX1)

The DC-powered AV38 Display comes with two terminal blocks when ordered with one or two 4-20mA analog outputs and/or host communications. If relays are ordered, a third terminal block is present. The figure below shows an AV38 with the DeviceNet host communications option present.

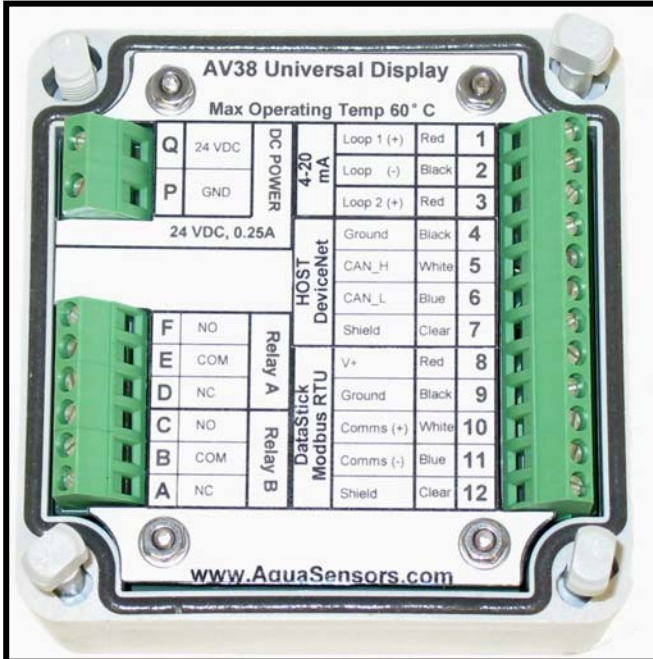

DC-powered AV38 with DeviceNet host comms wiring

The current loops (analog outputs) should be wired as follows:

Terminal	DC-Powered AV38 Current Loop Wiring
1	Current Loop 1 (+) (Power provided by AV38)
2	Current Loop 1 (-)
	Current Loop 2 (-)
3	Current Loop 2 (+) (Power provided by AV38)

The cable from the DataStick should be wired as follows:

Terminal	DC-Powered AV38 with DeviceNet Wiring
8	Red wire from DataStick
9	Black wire from DataStick
10	White wire from DataStick
11	Blue wire from DataStick
12	Clear wire from DataStick

The cable from the RDO Pro should be wired as follows:

Terminal	DC-Powered AV38 Wiring
8	Red wire from RDO Pro
9	Black wire from RDO Pro
10	Blue wire from RDO Pro
11	Green wire from RDO Pro
12	Clear wire from RDO Pro

The DeviceNet cable from the host should be wired as follows:

Terminal	DC-Powered AV38 with DeviceNet Wiring
4	Ground from DeviceNet Power Supply (Black) ¹
5	CAN_H (White)
6	CAN_L (Blue)
7	Shield (Clear)
Q	24VDC from DeviceNet Power Supply (Red)

The relays should be wired as follows:

Terminal	DC-Powered AV38 with DeviceNet Wiring
A	Relay B: Normally Closed Contact
B	Relay B: Common
C	Relay B: Normally Open Contact
D	Relay A: Normally Closed Contact
E	Relay A: Common
F	Relay A: Normally Open Contact

¹ Terminal 4, Ground (Black), is electrically the same as terminal P, GND, so the ground from the DeviceNet power supply can be connected to either terminal.

DC-Powered Legacy Version (AV38-XBXXX)

The DC-powered legacy version of the AV38 Display comes with a single terminal block when ordered with one 4-20mA analog output and/or host communications. If a second analog output or relays are ordered, a second terminal block is present.

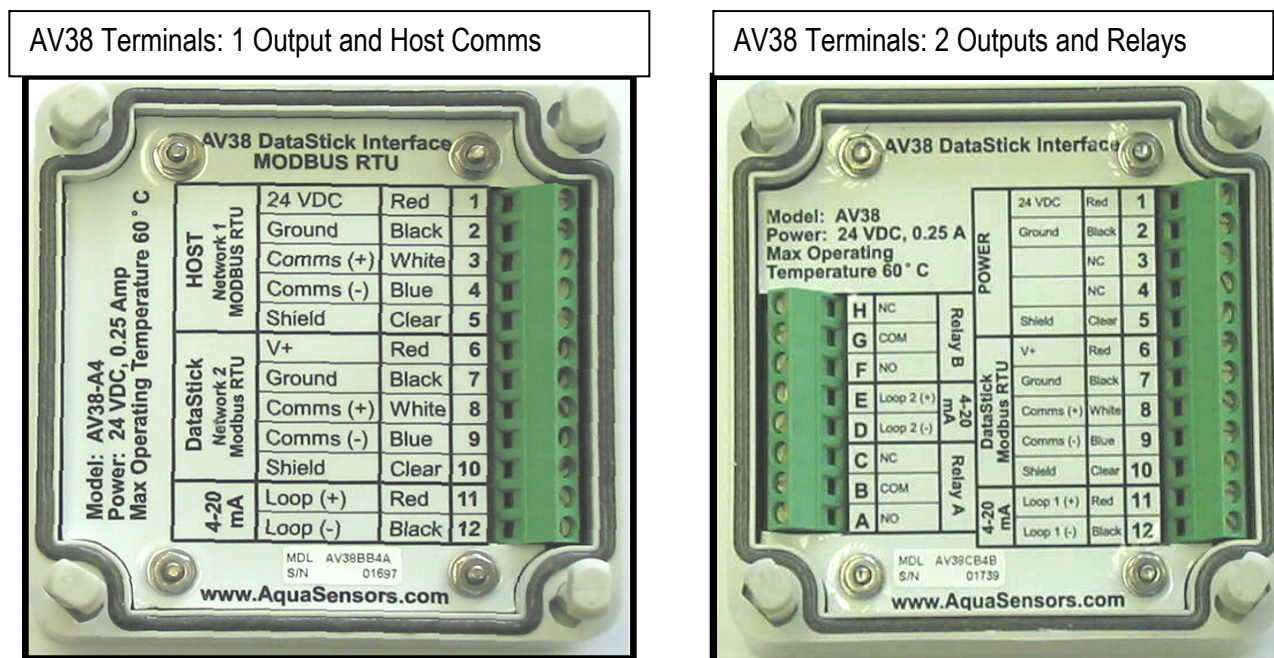


Figure 2.1: AV38 Wiring
One or Two Terminal Blocks Depending on Features

In either configuration:

1. 24 VDC Power is wired to Pins 1 and 2 as shown above. The power supply should be rated to deliver 0.25 amps when the AV38 is used with one DataStick.
2. The DataStick(s) are wired to Pins 6 through 10.
3. Analog Output 1 is wired to Pins 11 and 12.
4. When Host Comms are used they are wired to Pins 3, 4 and 5. Be sure that the communications ground is at the same potential as the 24 VDC power ground.

The DC-powered AV38 wiring will vary depending on the options provided.

Model AV38-BB0A1: One 4-20mA Analog Output, No Relays and No Host Comms


Terminal	DC-Powered AV38 Wiring
1	24 VDC from Power Supply
2	Ground from Power Supply
3	No connect
4	No connect
5	Earth Ground from Power Supply
6	Red wire from DataStick
7	Black wire from DataStick
8	White wire from DataStick
9	Blue wire from DataStick
10	Shield wire from DataStick
11	Current Loop + (Power provided by AV38)
12	Current Loop –

Model AV38-CB5C1: DC-Powered, DeviceNet Host, Two Relays and Two 4-20mA Analog Outputs

Terminal	Wiring
1	24VDC from Power Supply
2	Ground from Power Supply and Network
3	DeviceNet Network CAN_HI: White Wire
4	DeviceNet Network CAN_LO: Blue Wire
5	Shield wire from Host Network
6	Red wire from DataStick cable
7	Black wire from DataStick cable
8	White wire from DataStick cable
9	Blue wire from DataStick cable
10	Shield wire from DataStick cable
11	Current Loop 1 (+)
12	Current Loop 1 (-)
A	Relay A: Normally Open Contact
B	Relay A: Common
C	Relay A: Normally Closed Contact
D	Current Loop 2 (+)
E	Current Loop 2 (-)
F	Relay B: Normally Open Contact
G	Relay B: Common
H	Relay B: Normally Closed Contact

AC-Powered (AV38-XBXXX2)

The AC-powered AV38 Display comes with two terminal blocks when ordered with one or two 4-20 mA analog outputs and/or host communications. If relays are ordered, a third terminal block is present.

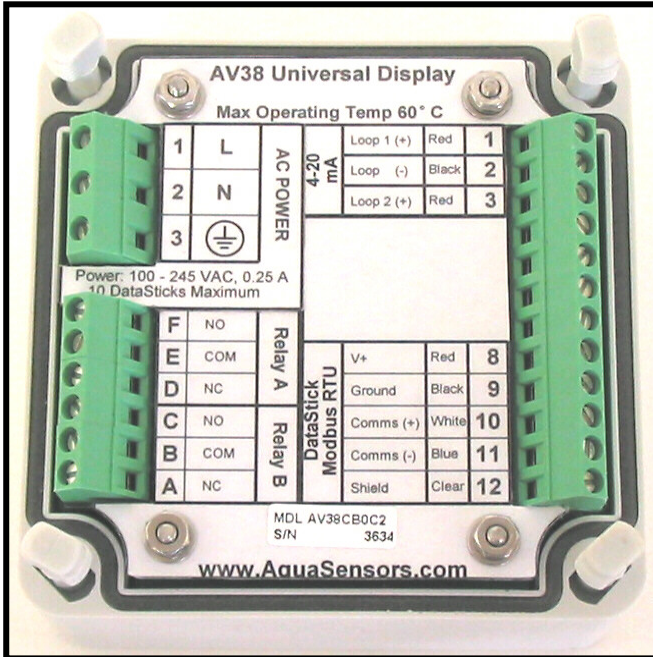

AC-powered AV38 wiring:

1. Analog Outputs 1 and 2 are wired to Pins 1, 2 and 3 as shown above.
2. The DataStick(s) are wired to Pins 8 through 12.
3. Relays A and B are wired to Pins A-F.
4. 100-240 VAC, 50/60 Hz power is wired to the wider-spaced Pins G, H and J.

The AC-powered AV38 wiring will vary depending on the options provided.

Model AV38-CB0C2: Two 4-20mA Analog Outputs, two Relays and No Host Comms

Terminal	AC-Powered AV38 Wiring
1	Current Loop 1 + (Power provided by AV38)
2	Current Loop -
3	Current Loop 2 + (Power provided by AV38)
8	Red wire from DataStick
9	Black wire from DataStick
10	White wire from DataStick
11	Blue wire from DataStick
12	Shield wire from DataStick
A	Relay B, Normally Closed
B	Relay B, Common
C	Relay B, Normally Open
D	Relay A, Normally Closed
E	Relay A, Common
F	Relay A, Normally Open
G	100-240 VAC, 50/60 Hz
H	Neutral
J	Earth Ground

The cable from the RDO Pro should be wired as follows:

Terminal	AC-Powered AV38 Wiring
8	Red wire from RDO Pro
9	Black wire from RDO Pro
10	Blue wire from RDO Pro
11	Green wire from RDO Pro
12	Clear wire from RDO Pro

2.6. Measure Screen Overview

The AV38 user interface is shown in Figure 1. It consists of an LCD module that contains two lines of 16 alphanumeric characters and seven keys to navigate the menu. The contrast of the LCD module can be adjusted by simultaneously pressing the ESC and UP-arrow keys (for more contrast) or the ESC and DOWN-arrow keys (for less contrast).

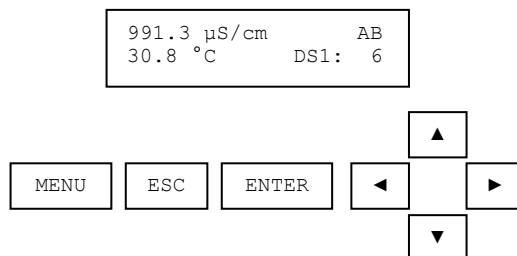



Figure 1: The elements of the AV38 user interface.

For illustration of menu navigation in this manual, a pressed key is identified by a gray background, e.g., When the AV38 is equipped with host communications hardware, the measure screens will toggle between channel 1, channel 2 and Gateway Mode using RIGHT and LEFT arrow keys.



The sensor measurement is displayed on the top line and the temperature measurement is displayed on the bottom line. The “AB” indicators on the top right indicate activation of relays A and B. An underscore indicates that the corresponding relay is not activated. The “DS1: 6” indicates that Channel 1 is connected to the DataStick with a Modbus address of 6. The “DS2: 7” indicates that Channel 2 is connected to the DataStick with a Modbus address of 7. Calibration and configuration functions are accessed by pressing the MENU key from the appropriate measure screen. For example, the DataStick with a Modbus address of 6 can be calibrated and configured if the MENU key is pressed while the screen shows “DS1: 6”. Correspondingly, the DataStick with a Modbus address of 7 can be calibrated and configured if the MENU key is pressed while the screen shows “DS2: 7”. The Gateway Mode screen shows a bracketed number in the lower right corner to indicate which DataStick is being accessed by the host. The MENU key does not present menu functions while in the Gateway mode.

 When the AV38 is not equipped with host communications hardware, the Gateway mode is not available. The two measure screens are accessed with the RIGHT and LEFT arrow keys.



When a sensor head of the same type is replaced in a DataStick, analog output and relay settings are maintained. If a sensor head of a new type is installed, analog output and relay settings are automatically set to default conditions.

The example in Figure 2 illustrates HOLD MODE as indicated in the measure screen. The “H” in front of the “DS1: 6” in the lower right corner of the display indicates that outputs and relays are on hold.

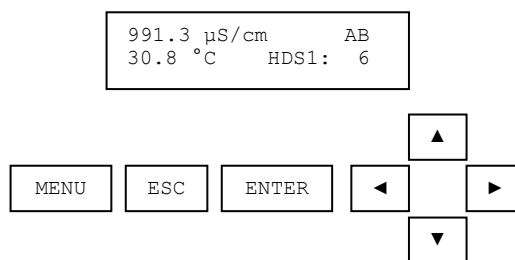


Figure 2: The “H” indicates that hold mode is active.

Figure 2, the measure screen, also shows the sensor value, sensor units, temperature value, and temperature units. Relays A and B are activated. The measurements are on hold and the Modbus station address for the DataStick is 6.

When the DataStick is absent the display will read “DataStick Absent” as shown in Figure 3. If the sensor is wired correctly and the “DataStick Absent” message appears, be sure that the DataStick Sensor has the correct station number as indicated by the number in the lower right corner of the measure screen. If that is correct, also check that baud rate and parity are set up correctly in the DataStick.

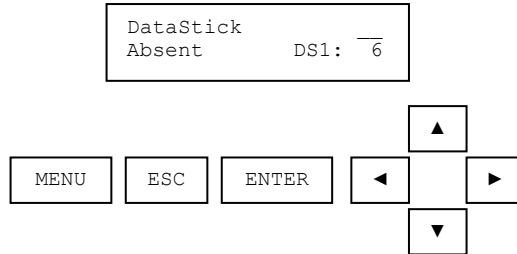


Figure 3: The initial measure screen when the DataStick is absent.

When the sensor head is absent, the condition will be indicated by “Sensor Head Absent” on the measure screen as shown in Figure 4.

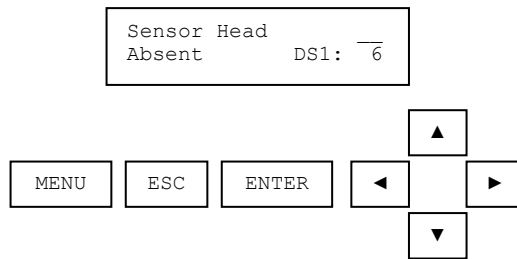


Figure 4: The initial measure screen when the Sensor Head is absent.

3. MENU STRUCTURE AND NAVIGATION

The Main Menu is accessed by pressing the MENU key when the AV38 is in Analyzer Mode (measure screen).

The menu structure is navigated using ENTER, UP/DOWN arrows, and ESC keys.

- Use the UP/DOWN arrow keys to scroll through the list of Menu options.
- Use the ENTER key to select an option.
- Use the ESC key to move up in the structure.

The end of the list of menu options is always the EXIT function. Pressing ENTER on the EXIT screen will bring up the MEASURE screen.

The (≡) symbol is used to indicate that the user is in the menu structure. At the leaf of each branch of the menu structure, the user is able to enter a value or make a choice. The value to be entered or the choice to be made will be surrounded by parentheses (()). The name of the value being entered or choice being made will appear on the upper line of the screen and be appended with a question mark (?) to indicate that the user is to provide input.

The RIGHT arrow symbol (➤) on the screen indicates that downward navigation through the menu structure is possible. The LEFT arrow symbol (➤) on the screen indicates that upward navigation through the menu structure is possible.

Calibration and configuration of a specific sensor is accessed by pressing the MENU key from the measure screen for that sensor. Main menu items are listed as follows:


Table 2: Main menu items.

Main Menu Item	Function
Calibrate (Station Number)	Sensor calibration choices are automatically available for installed sensor head. Enter the MENU from the measure display of interest – station in lower right.
Configure (Station Number)	Configuration choices are automatically available for the installed sensor head. Enter the MENU from the measure display of interest – station in lower right.
DataStick Comms	Set the station address, baud rate and parity for the Modbus DataStick of interest.
Chlorine Configure	Select free chlorine or HOCL concentration for output. Select pH compensation – fixed or active. (Only when Chlorine DataStick Present).
Hold Outputs	Holds the 4-20 mA and Relay outputs
Analog Output 1	Set 4 mA and 20 mA values. Calibrate and test the analog output with a milliammeter.
Analog Output 2 (option)	Set 4 mA and 20 mA values. Calibrate and test the current output with a milliammeter.
PID Controller	Set up PID control functions for analog outputs. Available with pH or Conductivity.
Relay A (option)	Set timer, alarm, or control functions. (Optional)
Relay B (option)	Set timer, alarm, or control functions. (Optional)
Diagnose (pH DataStick only)	Indicates the pH Sensor Head slope
Help	Indicates AV38 firmware version
Reset AV38	Resets AV38 configuration to default analog output, relay and PID settings.
Exit	Returns to the measure screen

MAIN MENU NAVIGATION

- Enter the Main Menu by pressing the MENU key.
- Scroll the listing with the UP/DOWN arrow keys.
- To select an item, press the ENTER key.


If there is no keypad activity for 15 minutes and the display is left on a menu screen, the measure screen will automatically re-appear. The exception to this rule is when the manual mode screen in the PID controller is displayed. In this case, there will be no function time-out. The AV38 remembers the last menu option used and will return to that menu option when re-entering the main menu from the measure screen. The list order is always the same, so, if pressing MENU displays analog output and the desired operation is calibration; the UP arrow will be used to move to the Calibrate menu.

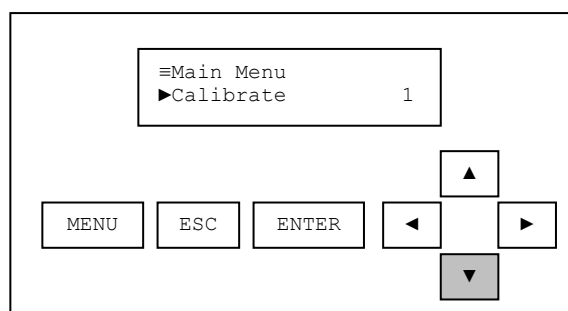

Select **CALIBRATE** with the ENTER key

- To calibrate the main parameter or temperature of the sensor previously displayed in the measure screen. In this example, the “1” in the lower right of the display indicates the sensor at Modbus Station 1.


Press the DOWN ARROW for next selection.

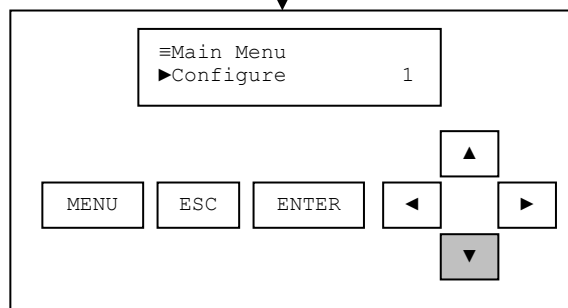

Select **CONFIGURE** with the ENTER key

- To display or change filters, units of measure, constants, tables and buffer standards of the sensor previously displayed in the measure screen. In this example, the “1” in the lower right of the display indicates the sensor at Modbus Station 1.


Press the DOWN ARROW for next selection.

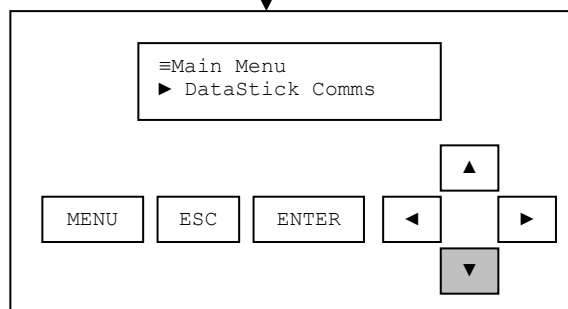

Select **DATASTICK COMMS** with the ENTER key

- To set up station address for the DataStick that is to be displayed in the AV38 measure screen.


Press the DOWN ARROW for next selection.

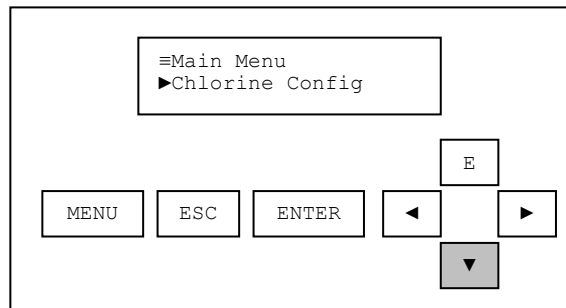

Select Chlorine Config with the ENTER Key

- Set Measurement: Free chlorine or HOCL
- Set pH Source: Fixed or active
- Set Fixed pH Value


Press the DOWN Arrow for next selection.

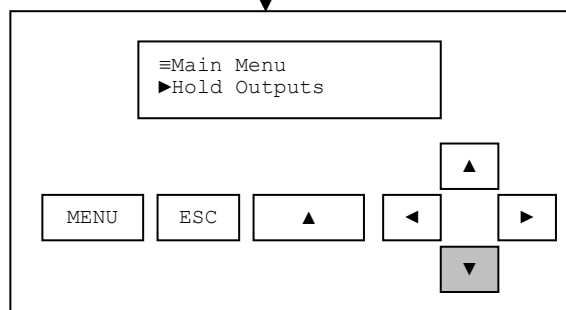

Select Hold Outputs with the ENTER key

- Put outputs and relays on hold. There is no timeout with this function.


Press the DOWN ARROW for next selection.

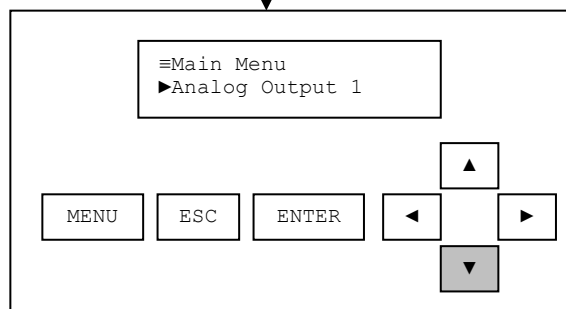

Select ANALOG OUTPUT 1 with the ENTER key

- To set up 4 to 20 mA Analog Output for sensor, temperature or PID.


Press the DOWN ARROW for next selection.

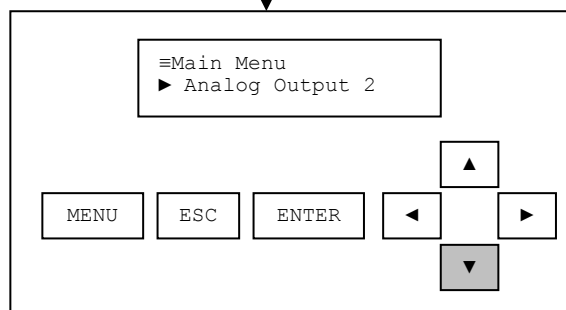

Select ANALOG OUTPUT 2 with the ENTER key

- To set up 4 to 20 mA Analog Output for sensor, temperature or PID.


Press the DOWN ARROW for next selection.

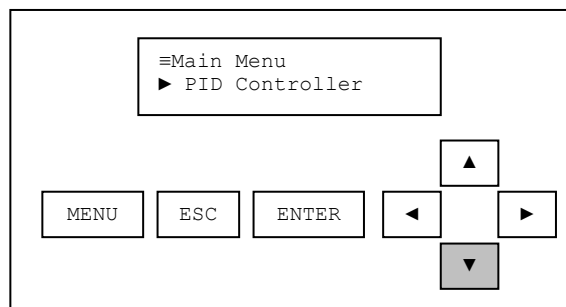

Select PID CONTROLLER with the ENTER key

- To set up ISA or Velocity Algorithm, Full-Scale, Zero-Scale, Setpoint, Proportion Gain, Integral Gain, Derivative Gain, Transit time, manual reset and manual mode.
(Standard function with pH or conductivity sensors)


Press the DOWN ARROW for next selection.

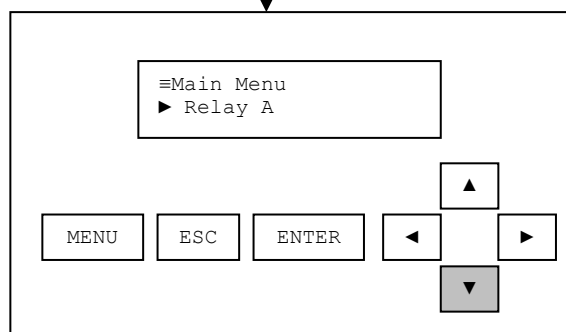

Select RELAY A with the ENTER key

- To set up Relay A for Alarm, Control or Wash functions.
(Available when relays hardware installed)


Press the DOWN ARROW for next selection.

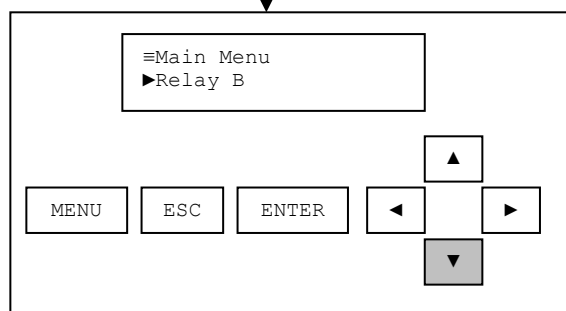

Select RELAY B with the ENTER key

- To set up Relay B for Alarm, Control or Wash functions.
(Available when relays hardware installed)


Press the DOWN ARROW for next selection.

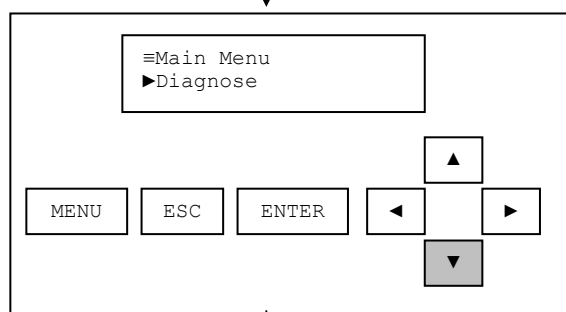

Select DIAGNOSE with the ENTER key

- To read the slope of the pH sensor head. This option appears only when a pH sensor head is installed in the DataStick body.


Press the DOWN ARROW for next selection.

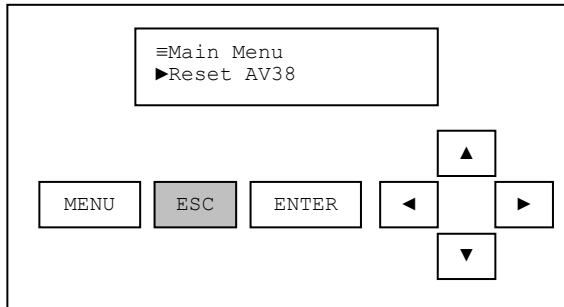

Select Reset AV38 with the ENTER key

- Set output, PID and relay functions to default values.


Press an UP ARROW to review the menu.
Press ESC for Measure (alternate method).

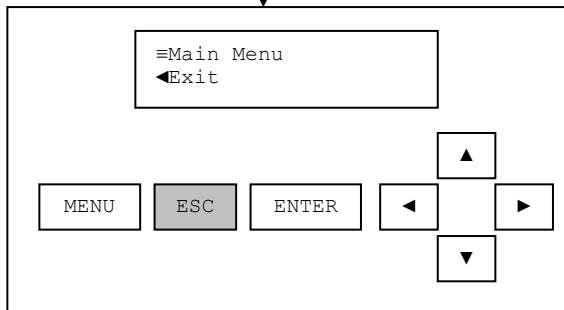

Select EXIT with the ENTER key

- Return to the measure screen.


Press an UP ARROW to review the menu.
Press ESC for Measure (alternate method).

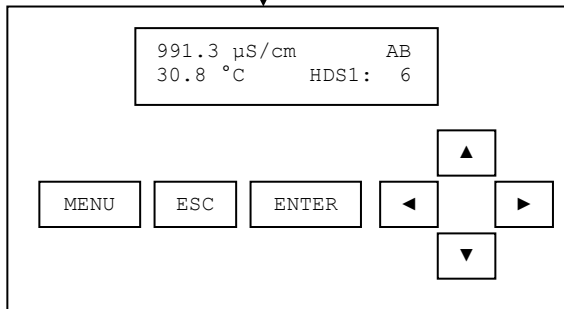

Measure Screen

Note: Station Address in lower right. The relay activity indicators “AB” show that both Relay A and Relay B are activated.

The “H” in front of “DS1: 6” indicate that outputs and relays are on HOLD.

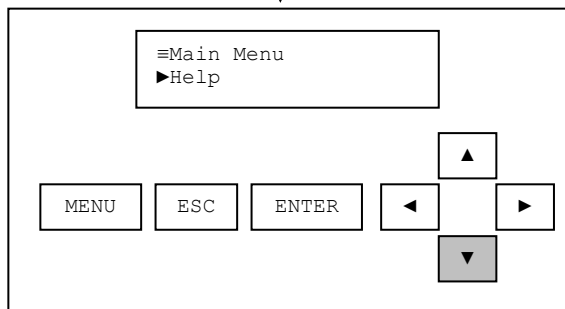

Select HELP with the ENTER key

- To read the AV38 firmware version.

Press the DOWN ARROW for next selection.

4. CALIBRATE MENUS

Calibration methods supported in the AV38 are automatically available depending on the sensor head connected to the DataStick. The supported calibration methods are listed below:

Table 3: Calibration methods.

Calibration Method	Description	Sensors Supported
1-Point Sample	Set measured reading to desired reading. Changes offset. Best done at high end of range.	All
2-Point Sample	Sets measured reading to desired reading for two points separated by more than 2 pH units. Changes span and offset.	pH
1-Point Buffer	Automatically sets measured pH reading to closest buffer standard point. Buffer standards are selected in the configuration menu. Changes offset.	pH
2-Point Buffer	Automatically sets measured readings to closest buffer standard. Two points separated by more than 2 pH units. Buffer standards are selected in the configuration menu. Changes span and offset.	pH
Zero	Set measured reading to zero. Measured reading must be close to zero.	Conductivity, Drinking Water Turbidity, Raw Water Turbidity, Dissolved Oxygen, Ozone, Suspended Solids.
Air	Adjust measured reading to calculated reading of oxygen in air with pressure and salinity configuration settings as well as temperature reading. Assumes sensor head is placed in air.	Dissolved Oxygen RDO Pro
Temperature 1-Point	Set measured reading to desired reading. Changes offset. Best done at high end of range.	All
Exit	Returns to the measure screen	

Calibration methods vary depending on which sensor head is connected to the DataStick.

For pH sensors, calibration methods are: 1-point Buffer, 2-Point Buffer, 1-Point Sample, 2-Point Sample and Temperature as shown in Figure 5.

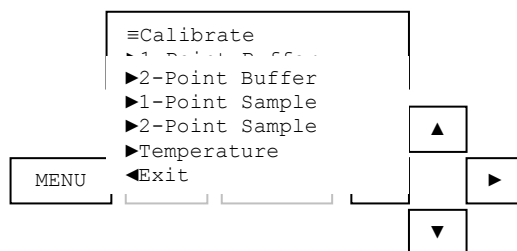


Figure 5: The complete calibrate menu for pH sensors.

For Dissolved Oxygen Sensors, calibration methods are: Air, 1-Point Sample and Temperature as shown in Figure 6. For Chlorine and Ozone sensors, calibration methods are: 1-Point Sample and Temperature.

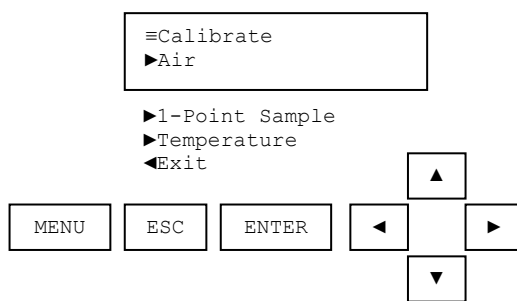


Figure 6: The complete calibrate menu for D.O. sensors.

For Conductivity and Turbidity sensors, calibration methods are: 1-Point Sample, Zero and Temperature as shown in Figure 7.


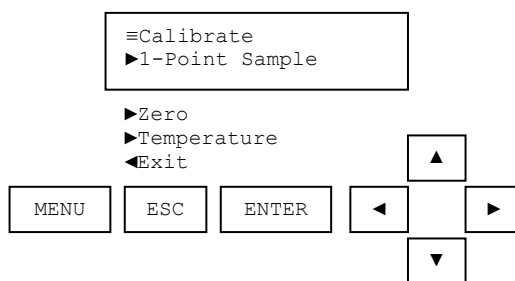


Figure 7: The complete calibrate menu for conductivity and turbidity sensors.

ORP sensors have only the 1-Point Sample calibration method and Temperature calibration.

4.1. 1-Point Buffer Calibration (Sensor Type: pH)

Find the 1-Point Buffer calibration in the CALIBRATE menu using the UP/DOWN arrows. Press ENTER to initiate this calibration process. Once the calibration has been initiated it can be aborted by pressing the escape key before the process is completed.

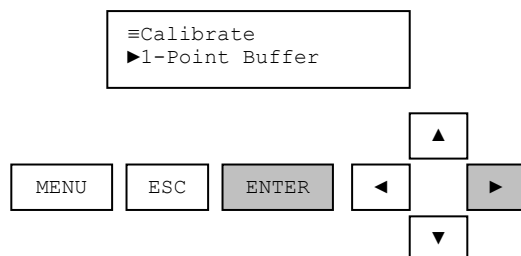

The sensor should be rinsed in DI water and wiped clean to remove any process solution that would otherwise contaminate the buffer solution. When the 1-point buffer calibration procedure is started, the analog output is placed into hold mode and the user is prompted to place the sensor in the buffer solution. The sensor value is dynamically updated during this step as shown in Figure 8.


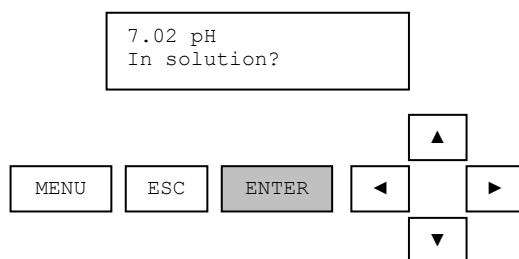



Figure 8: The pH sensor value is dynamically updated during a 1-point buffer calibration.

It is best to let the sensor value stabilize in the buffer solution before initiating the calibration. If the temperature of the sensor is very different from the temperature of the buffer sample, allow some time for the temperature to equilibrate before initiating the calibration. After the sensor is placed in the buffer, the ENTER key is pressed to start the calibration.

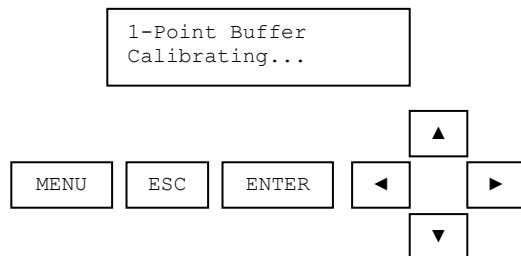


It takes between 5 seconds and two minutes depending on sensor and temperature measurement stability. Once the calibration has been initiated it can be aborted by pressing the escape key before the process is completed. See Section 4.3 for an example of an aborted calibration procedure.


After the calibration point has been stored, the user is prompted to confirm a successful calibration procedure.

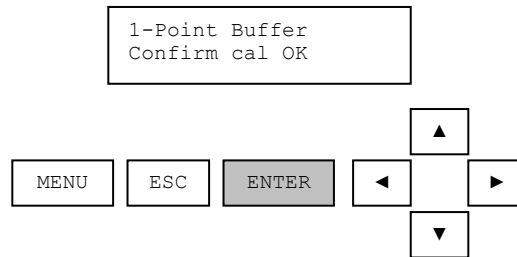


When the enter key is pressed to acknowledge that the calibration was successful, the analog output is placed into active mode and the monitoring of sensor and temperature values is resumed. This successfully completes the 1-point buffer calibration procedure.

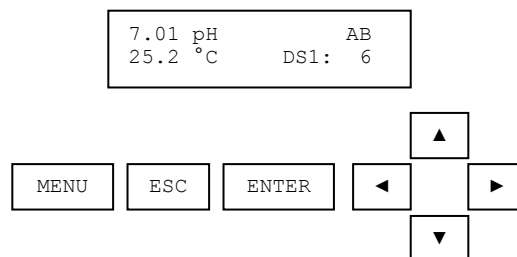

If an error occurs during calibration that causes the procedure to fail, the failure reason is shown on the screen.

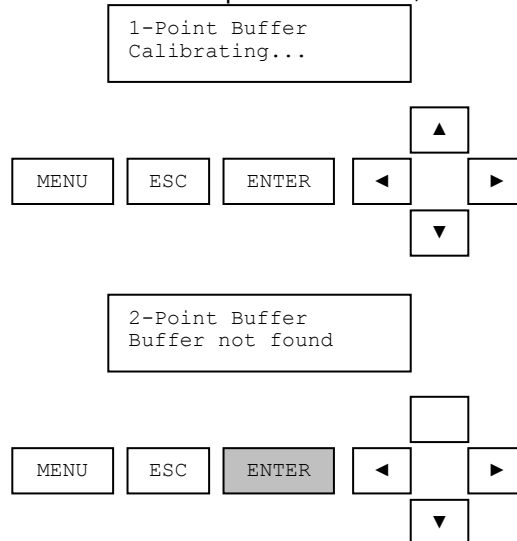


When the enter key is pressed, the calibrate menu is displayed. The analog output remains in hold mode. This ends the 1-Point Buffer calibration procedure. The user has the option of repeating the procedure if desired.

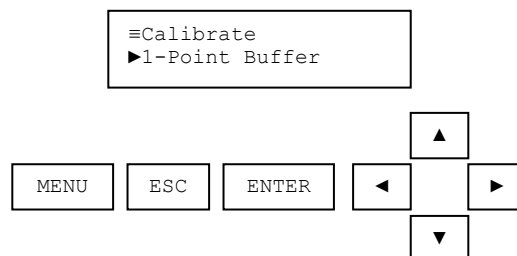

4.2. 2-Point Buffer Calibration (Sensor Type: pH)

Find the 2-Point Buffer calibration in the CALIBRATE menu using the UP/DOWN arrows. Press ENTER to initiate this calibration process. Once the calibration has been initiated it can be aborted by pressing the escape key before the process is completed.

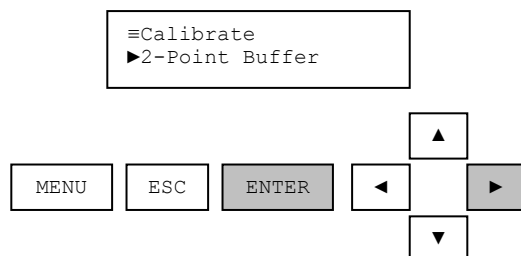

The sensor should be rinsed in DI water and wiped clean to remove any process solution that would otherwise contaminate the buffer solution. When the 2-point buffer calibration procedure is started, the analog output is placed into hold mode and the user is prompted to place the sensor in the first buffer solution. The sensor value is dynamically updated during this step as shown in .


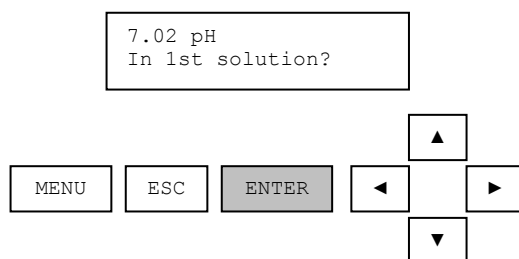



Figure 9: The pH sensor value is dynamically updated during a 2-point buffer calibration.

It is best to let the sensor value stabilize in the buffer solution before initiating the calibration. If the temperature of the sensor is very different from the temperature of the buffer sample, allow some time for the temperature to equilibrate before initiating the calibration. After the sensor is placed in the first buffer, the ENTER key is pressed to start the calibration of the first point.

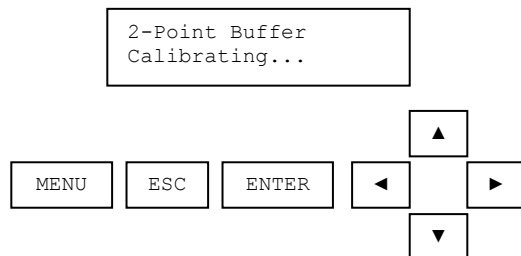


It takes between 5 seconds and two minutes depending on sensor and temperature measurement stability. Once the calibration has been initiated it can be aborted by pressing the escape key before the process is completed. See Section 4.3 for an example of an aborted calibration procedure.


After the first calibration point has been stored, the user is prompted to place the sensor in the second buffer. The sensor should be rinsed in DI water and wiped clean before it is placed in the second solution.

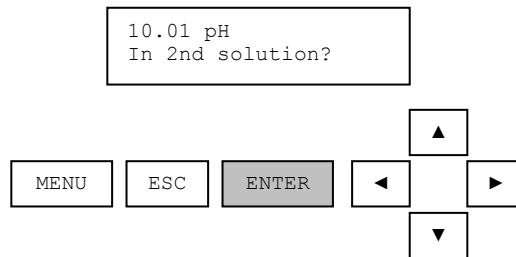


After the sensor is placed in the second buffer, the ENTER key is pressed to start the calibration of the second point.

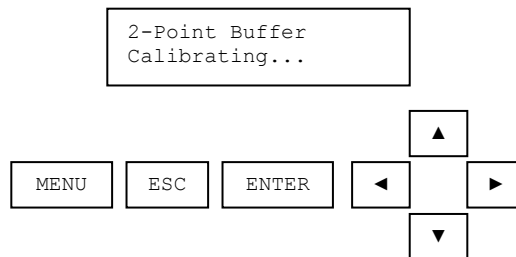



After the second calibration point has been stored, the user is prompted to confirm a successful calibration procedure.

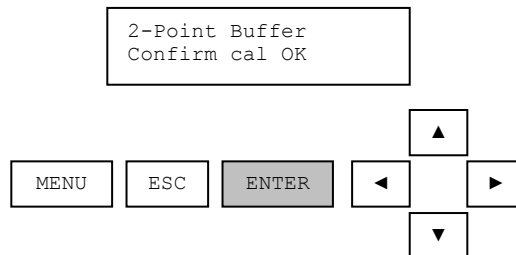


When the enter key is pressed to acknowledge that the calibration was successful, the analog output is placed into active mode and the monitoring of sensor and temperature values is resumed. This successfully completes the 2-point buffer calibration procedure.

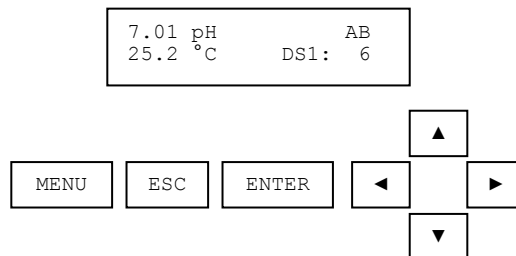

If an error occurs during calibration that causes the procedure to fail, the reason for the failure is shown on the screen.

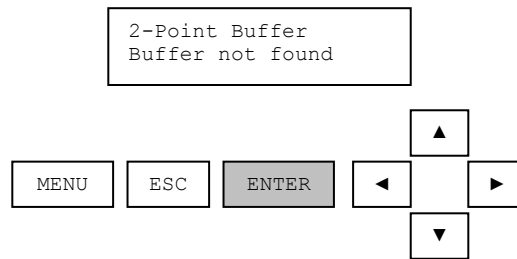
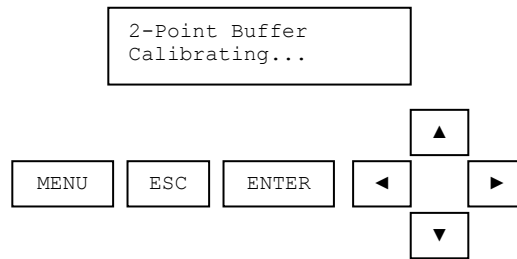


When the enter key is pressed, the calibrate menu is displayed. The analog output remains in hold mode. This ends the 2-point buffer calibration procedure. The user has the option of repeating the procedure if desired.

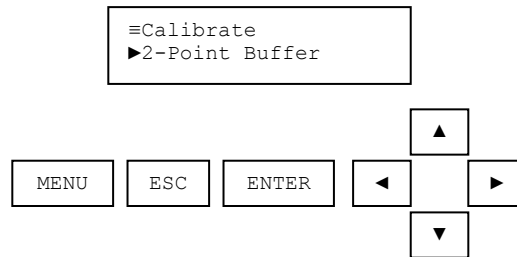


4.3. Aborted Calibration (Sensor Type: All)


If the ESC key is pressed while calibration is in progress, the procedure is aborted. A calibration cannot be aborted if the calibration process has completed.

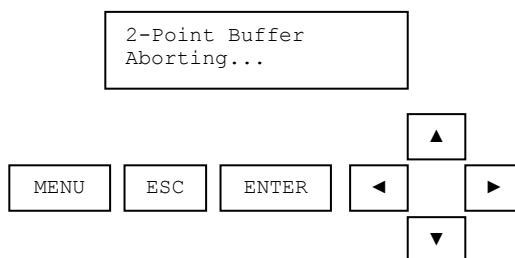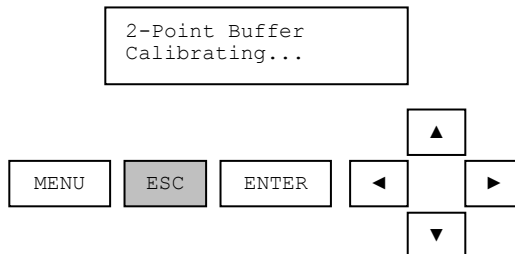

After the calibration procedure has been aborted, the user is prompted to confirm the abort.

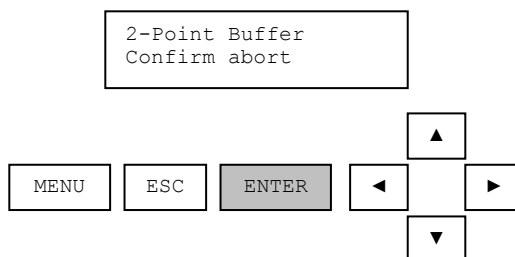


When the enter key is pressed, the analog output is placed into the active mode and the monitoring of sensor and temperature values is resumed. This ends the 2-point buffer calibration procedure.

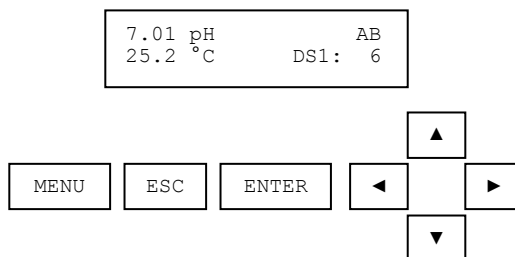


4.4. 1-Point Sample Calibration (Sensor Type: All)

The screen-by-screen example for a 1-point sample calibration is given for a conductivity sensor in this section. The same sequence is followed for any sensor type. Only the units of measure and range of acceptable values will change. When a 1-point sample calibration is applied to chlorine, the calibration value being adjusted will be for free chlorine even if HOCL is selected for measurement and outputs.


Press MENU from the Measure Screen:

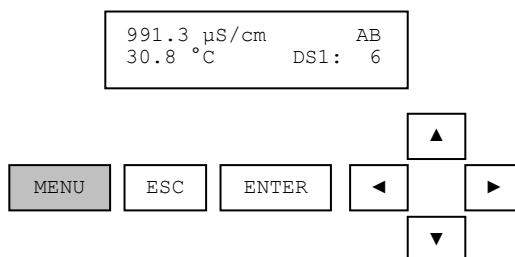

Scroll to CALIBRATE with the UP/DOWN Arrows and press ENTER:

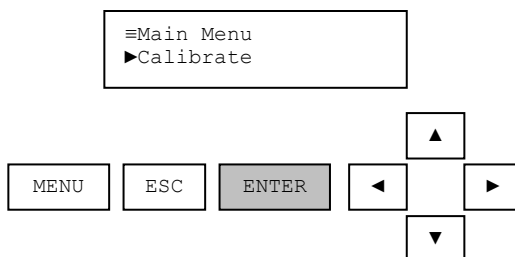

Scroll the list of CALIBRATE options with the UP/DOWN arrows and press ENTER to select 1-POINT SAMPLE.

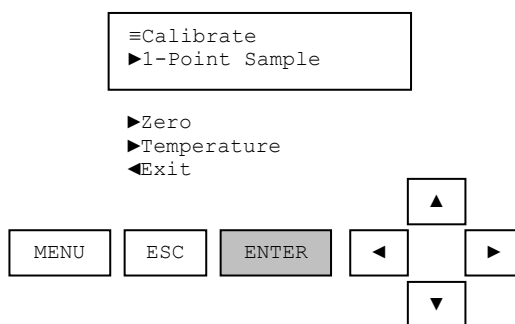

Be sure the sensor has been properly cleaned before calibration. Initiate the 1-point sample process by pressing ENTER.

The sensor value is dynamically displayed at this point in the calibration procedure as shown in Figure 10. When the reading has stabilized, press ENTER to initiate the calibration.

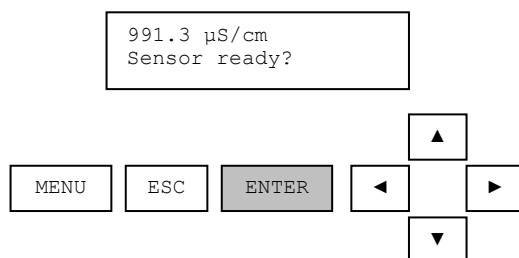


Figure 10: Dynamic display of the conductivity value during calibration.

When the user presses enter, the current sensor value is captured and shown in the edit field of the next screen as shown in Figure 11.

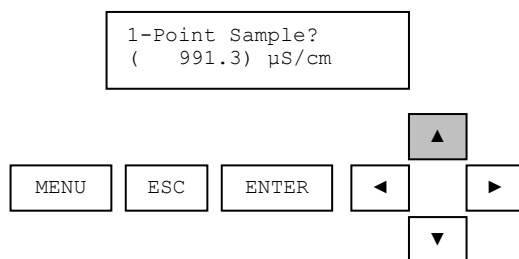


Figure 11: The conductivity calibration edit screen.

The calibration value can be adjusted with the UP and DOWN arrow keys. After the calibration value is adjusted, the enter key is pressed to calibrate the DataStick as shown in Figure 12.



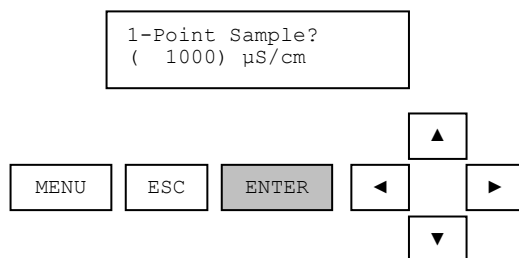



Figure 12: Entering the conductivity calibration value.

After the calibration process is complete, the user is asked to confirm the result before releasing the analog outputs, relays and measure screen.

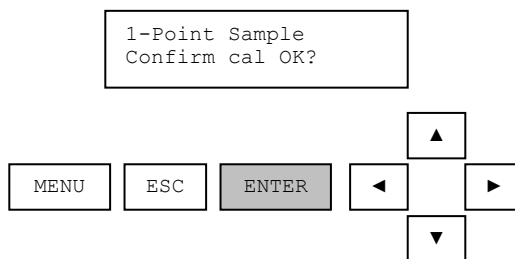

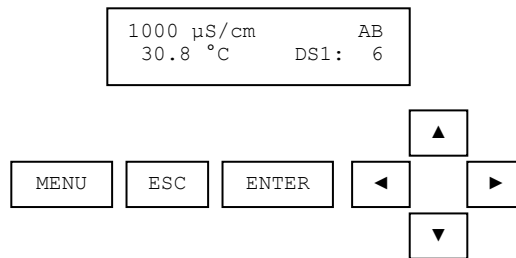


If an error occurs during calibration, the reason for the failure is shown.

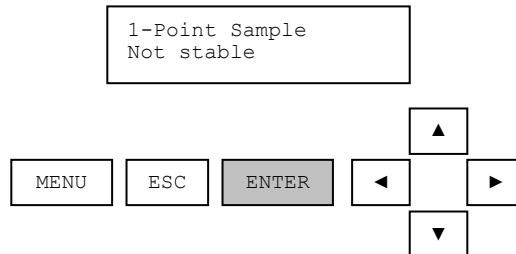


4.5. 2-Point Sample Calibrate (Sensor Type: pH)


Press MENU from the Measure Screen:

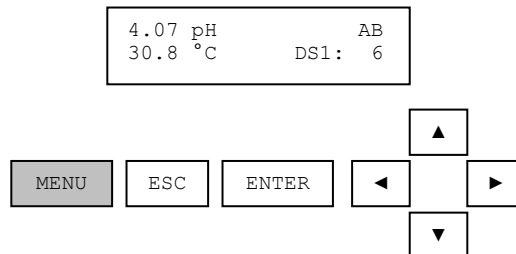

Scroll to CALIBRATE with the UP/DOWN Arrows and press ENTER:

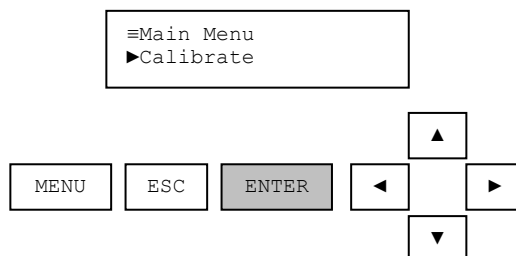

Find the 2-Point Sample calibration in the CALIBRATE menu using the UP/DOWN arrows. Press ENTER to initiate this calibration process. Once the calibration has been initiated it can be aborted by pressing the escape key before the process is completed.

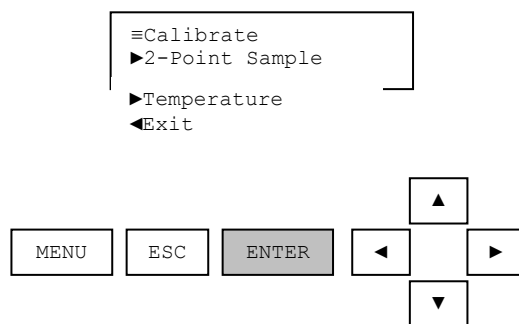

The sensor should be rinsed in DI water and wiped clean to remove any process solution that would otherwise contaminate the sample. When the 2-point sample calibration procedure is started, the analog output is placed into hold mode and the user is prompted to place the sensor in the first sample solution. The sensor value is dynamically updated during this step as shown in Figure 13.

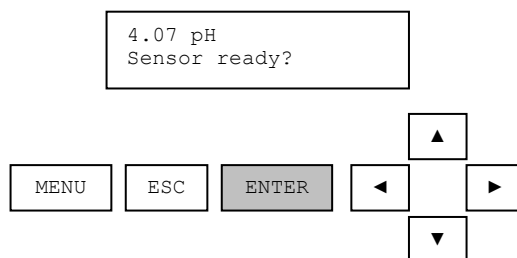


Figure 13: Dynamic display of the pH value during calibration.

It is best to let the sensor value stabilize in the sample solution before initiating the calibration. If the temperature of the sensor is very different from the temperature of the sample, allow some time for the temperature to equilibrate before initiating the calibration. After the sensor is placed in the first sample, the ENTER key is pressed to start the calibration of the first point.

When the user presses enter, the current sensor value is captured and shown in the edit field of the next screen as shown in Figure 14.

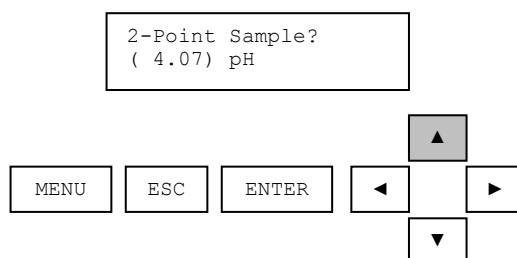


Figure 14: The pH calibration edit screen.

The calibration value can be adjusted with the UP and DOWN arrow keys. After the calibration value is adjusted, the enter key is pressed to calibrate the DataStick as shown in Figure 15.



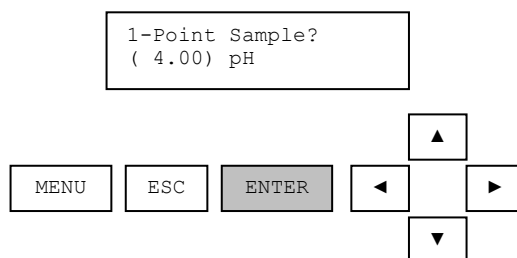


Figure 15: Entering the pH calibration value.


After the first calibration point has been stored, the user is prompted to place the sensor in the second sample. The sensor should be rinsed in DI water and wiped clean before it is placed in the second sample.

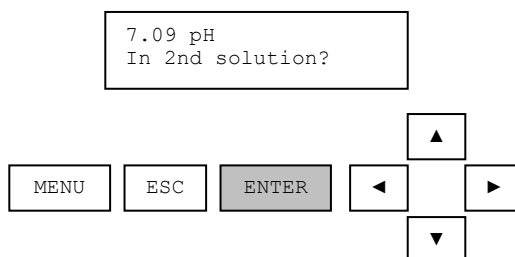


After the sensor is placed in the second sample, the ENTER key is pressed to start the calibration of the second point.

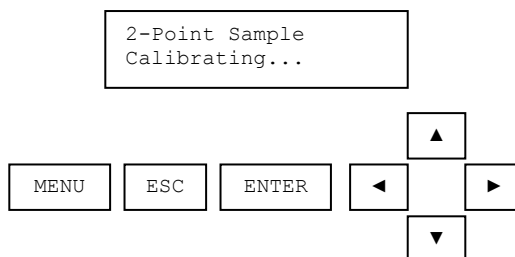


After the second calibration point has been stored, the user is prompted to confirm a successful calibration procedure.

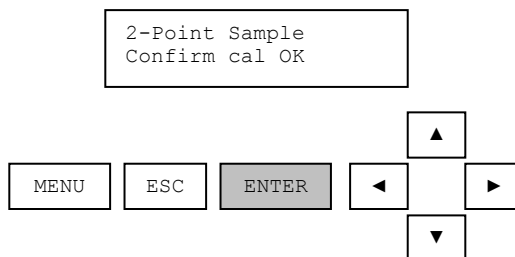

When the enter key is pressed to acknowledge that the calibration was successful, the analog output is placed into active mode and the monitoring of sensor and temperature values is resumed. This successfully completes the 2-point sample calibration procedure.

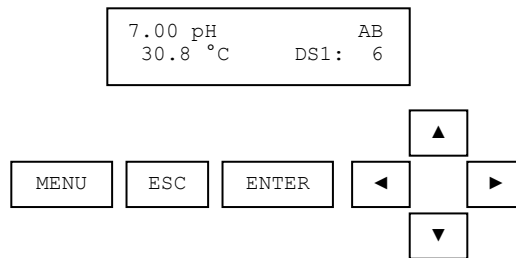

If an error occurs during calibration, the reason for the failure is shown.

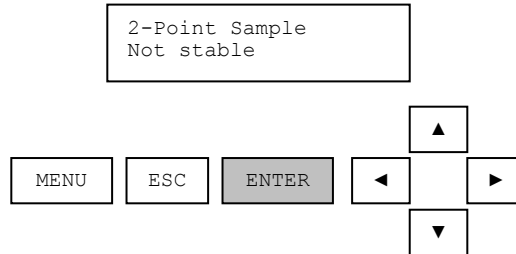

4.6. Zero Calibrate (Sensor Type: Conductivity, DO, Ozone, Drinking Water Turbidity, Raw Water Turbidity, Suspended Solids)

The complete Calibrate menu for conductivity is shown in Figure 16. The same calibration sequence also applies to dissolved oxygen, ozone, drinking water turbidity, raw water turbidity, and suspended solids.

From the Calibrate menu, use the UP/DOWN arrows to display ZERO calibration. Press ENTER to select.


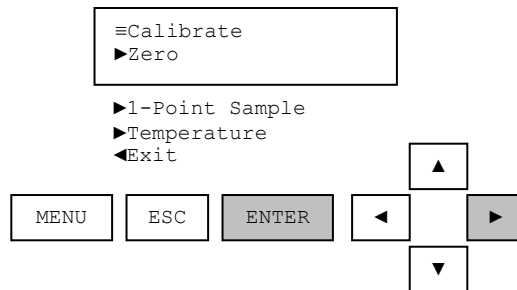


Figure 16: The complete calibrate menu for conductivity.

Be sure conductivity sensors are dry and suspended away from objects that could affect the measurement in air. Press ENTER to initiate zero calibration.

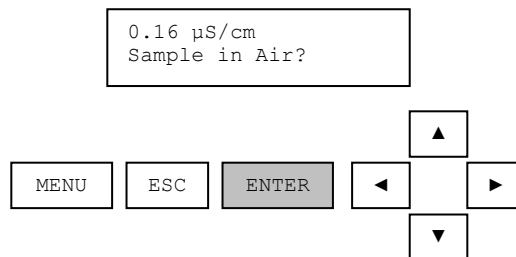

A zero calibration may take some time, as the zero must be calibrated over a wide dynamic range. During this process the Calibrating... message is shown in Figure 17.



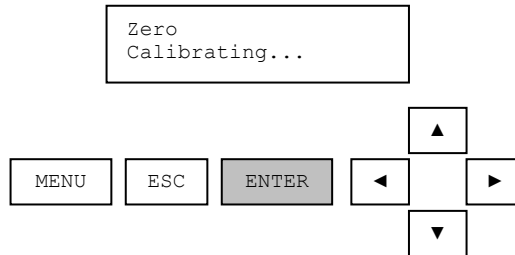


Figure 17: Zero is Calibrating...


When the zero calibration is complete the user will be asked to confirm the result with the ENTER key.

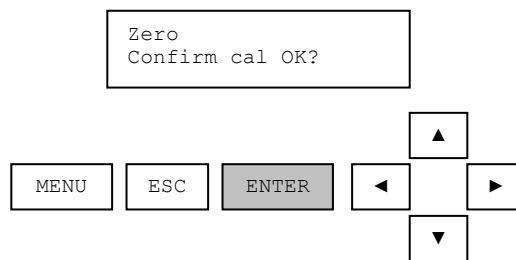


After pressing ENTER to confirm Calibration is okay, the Measure screen will be displayed.

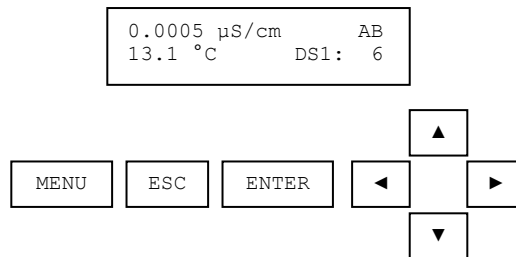

If an error occurs during calibration, the reason for the failure is shown.

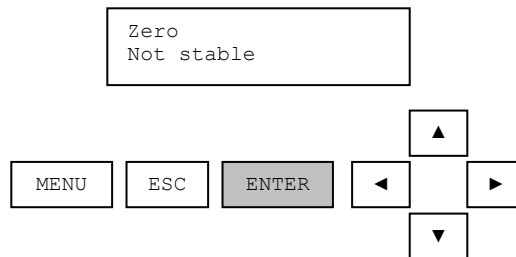


Press ENTER to acknowledge the calibration failure and return to the measure screen.

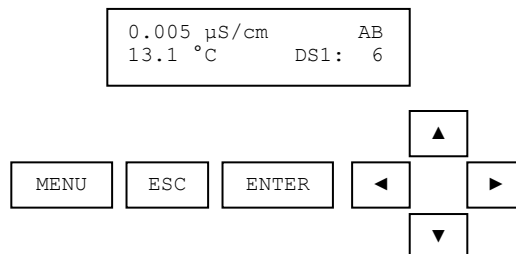

4.7. Air Calibration (Sensor Type: Dissolved Oxygen, RDO Pro)

An AIR CALIBRATION computes the oxygen content measured in air based on the setting for PRESSURE, SALINITY and the measured temperature. View or change the Pressure and Salinity settings in the CONFIGURE menu.

Initiate the AIR CALIBRATION process by pressing ENTER.

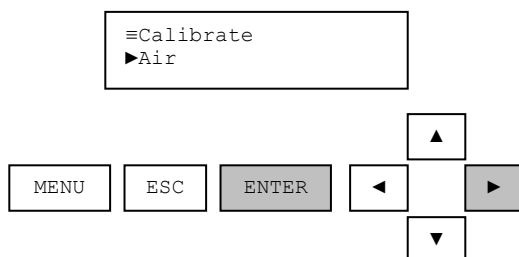

When the air calibration procedure is initiated, the analog output is placed into hold mode. The user is prompted to place the sensor in air as shown in the Figure 18.


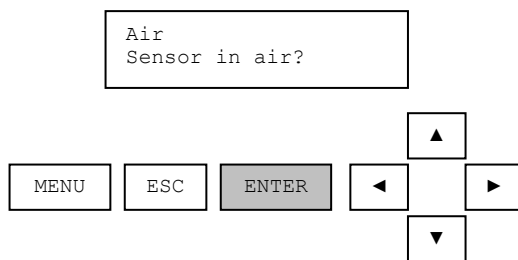



Figure 18: The user is prompted to place the sensor in air.

After the sensor is placed in air, press the ENTER key to start the calibration.

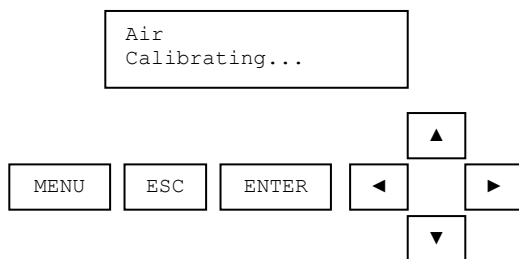


It takes between 5 seconds and two minutes depending on sensor and temperature measurement stability. During this time, the calibration procedure can be aborted by pressing the escape key. See Section 4.3 for an example of an aborted calibration procedure.



After the air calibration point has been stored, the user is prompted to confirm a successful calibration procedure.

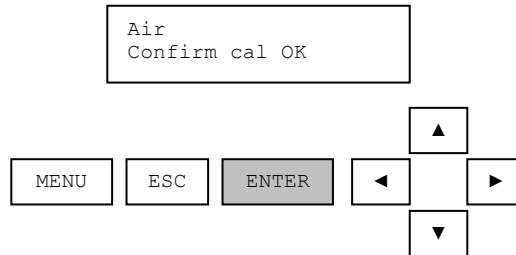


When the enter key is pressed, the analog output is placed into active mode and the monitoring of sensor and temperature values is resumed. This successfully completes the air calibration procedure.

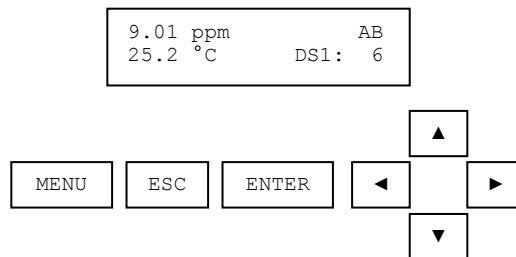

If an error occurs during calibration that causes the procedure to fail, the reason for the failure is shown on the screen.

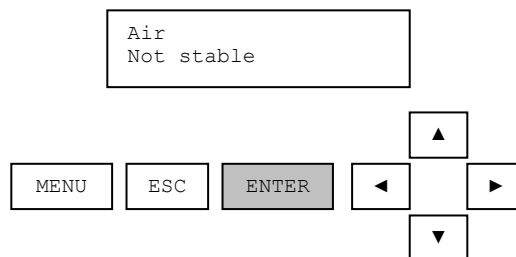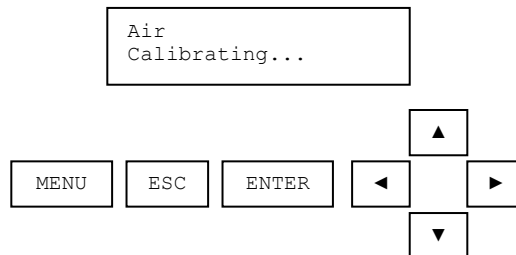


When the enter key is pressed, the calibrate menu is displayed. The analog output remains in hold mode. This ends the air calibration procedure. The user has the option of repeating the procedure if desired.

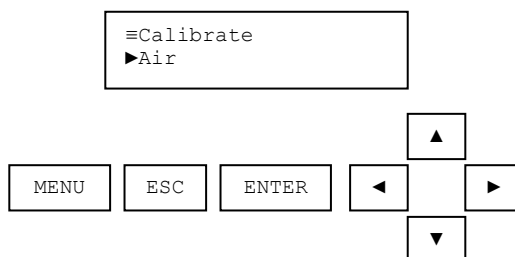

4.8. Temperature 1-Point Sample Calibration

Press the ENTER key from the TEMPERATURE calibration menu to initiate the calibration process.

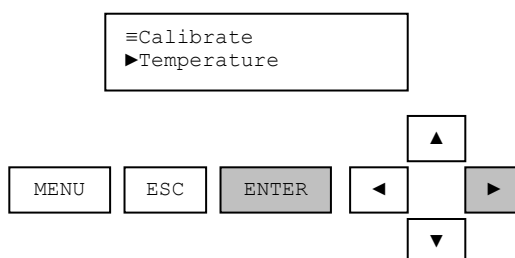

When the temperature calibration procedure is started, the analog output is placed into hold mode. The user is prompted to prepare the sensor. The sensor value is dynamically updated during this step as shown in Figure 4.13.

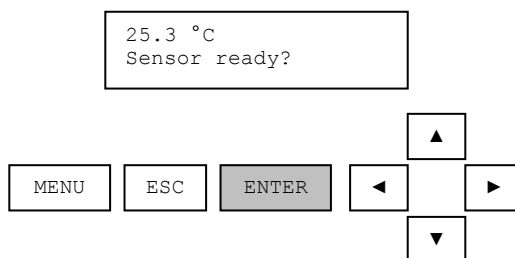


Figure 4.13: The temperature value is dynamically updated while the user is prompted to prepare the sensor.

When the sensor is ready, the ENTER key is pressed and the user is presented with a calibration value for editing as shown in Figure 19. Please note that it is best to calibrate temperature with the sensor head in an aqueous solution. Response time for calibration in air is slower.



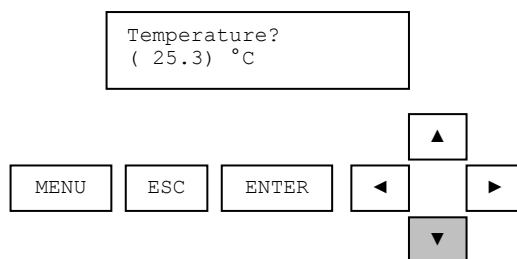


Figure 19: The temperature calibration value is presented for editing.


When the value has been edited as desired, the enter key is pressed and the calibration of the point is started.

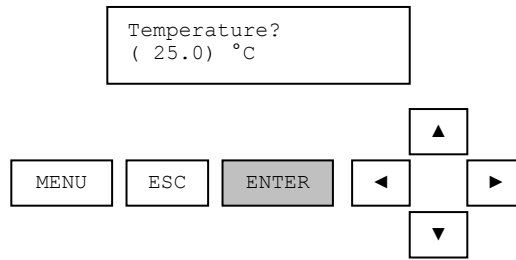


During this time, the calibration procedure can be aborted by pressing the escape key. See Section 4.3 for examples of an aborted calibration procedure.

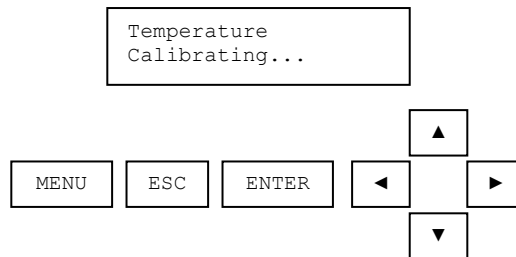



After the calibration point has been stored, the user is prompted to confirm a successful calibration procedure.

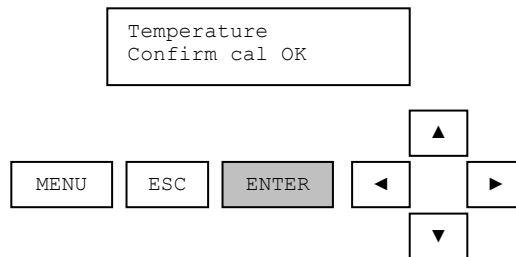


When the enter key is pressed, the analog output is placed into active mode and the monitoring of sensor and temperature values is resumed. This successfully completes the temperature calibration procedure.

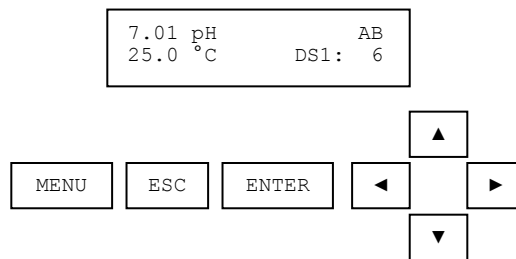

If an error occurs during calibration that causes the procedure to fail, the reason for the failure will be shown.

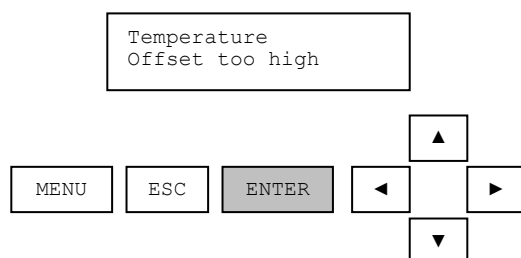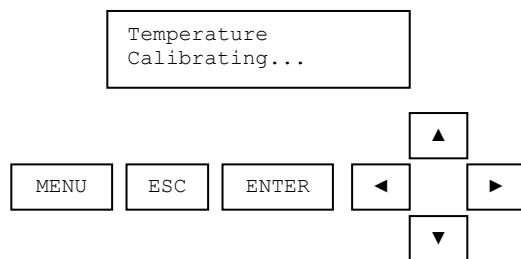

When the enter key is pressed, the calibrate menu is displayed. This ends the temperature calibration procedure. The user has the option of repeating the procedure if desired.

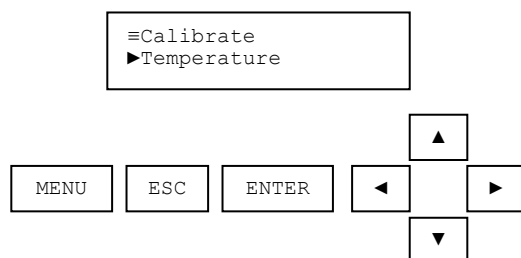

5. CONFIGURE MENU

The configuration menu allows viewing and editing of sensor constants and will depend on the type of sensor head that is installed in the DataStick.

Table 4: The Configure menu.

Configuration Type	Function	Sensors Supported
Sensor Filter	Filter main parameter in seconds. Set zero seconds for no filter. Set up to 100 seconds for time to reach 90% of final value. 1 to 5 seconds should be optimal for most applications.	All
Sensor Units	PH: pH or mV ORP: mV Conductivity: $\mu\text{S}/\text{cm}$, %, TDS, or $\text{M}\Omega\cdot\text{cm}$ D.O./Ozone/Chlorine: ppm Drinking Water Turbidity, Raw Water Turbidity: NTU Suspended Solids: mg/l, %, or ppm	All
Temperature Filter	Filter temperature in seconds. Set zero seconds for no filter. Set up to 100 seconds for time to reach 90% of final value. 1 to 5 seconds should be optimal for most applications. The temperature filter value should generally be set to the same value as the sensor filter.	All
Temperature Units	Select Celsius or Fahrenheit.	All
Buffer Standard	Select 4, 7, 10 pH or DIN Standard (1.09, 4.65, 6.79, 9.23 and 12.75).	pH
Cell Constant	View or change Cell constant	Two-Electrode Conductivity
Reference Temperature	Conductivity reference temperature is set from 0 °C to 100 °C	Conductivity
Compensation Slope	Slope is set from 0 to 9.9%/°C	Conductivity
TDS Conversion Factor	A factor is set from 0.01 to 99.99 ppm/ $\mu\text{S}/\text{cm}$ to convert measured conductivity to ppm	Conductivity
Salinity	Salinity compensation is set from 0 to 999.9 mS/cm	D.O., Ozone, RDO Pro
Pressure	Pressure is set from 539.2 to 792.4 mmHg	D.O., Ozone, RDO Pro
Concentration Table	A 10-point concentration table is entered to convert measured conductivity into % concentration	Conductivity
Exit	Returns to the measure screen	

5.1. Main Configure Menus

Configure menus dynamically change depending on the DataStick sensor type connected. Generally, all configure screens allow viewing and editing values in parentheses. Examples of top-level menus for conductivity, pH, DO and Turbidity are shown below.

The complete configure menu for Conductivity is shown in Figure 20.

```
≡Configure
▶Sensor Filter

▶Sensor Units
▶Temp Filter
▶Temp Units
▶Cell Constant
▶Reference Temp
▶Comp Slope
▶TDS Conv Factor
▶Conc Table
◀Exit
```

Figure 20: The complete configure menu for conductivity.

The complete configure menu for pH is shown in Figure 21.

```
≡Configure
▶Sensor Filter

▶Sensor Units
▶Temp Filter
▶Temp Units
▶Buffer Standard
◀Exit
```

Figure 21: The complete configure menu for pH.

The complete configure menu for D.O., Ozone, Chlorine and RDO Pro is shown in Figure 22.

```
≡Configure
▶Sensor Filter

▶Sensor Units
▶Temp Filter
▶Temp Units
▶Salinity
▶Pressure
◀Exit
```

Figure 22: The complete configure menu for D.O., Ozone and Chlorine.

The complete configure menu for turbidity is shown in Figure 23.

```
≡Configure
▶Sensor Filter


▶Temp Filter
▶Temp Units
◀Exit
```

Figure 23: The complete configure menu for turbidity.


5.2. Navigating Sensor Filter Configuration

The following sequence shows how the sensor filter configuration is viewed and set. The gray key is pressed to move to the next screen. This sequence is an example for all configuration menus.


From the Measure Screen, Press the MENU key:

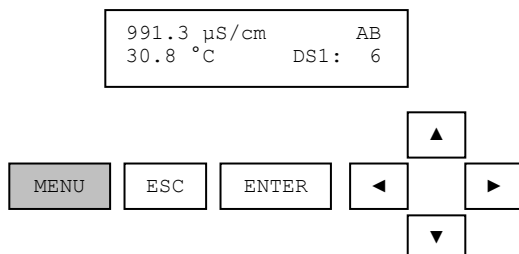


Scroll to the CONFIGURE Menu with the UP and DOWN arrows:

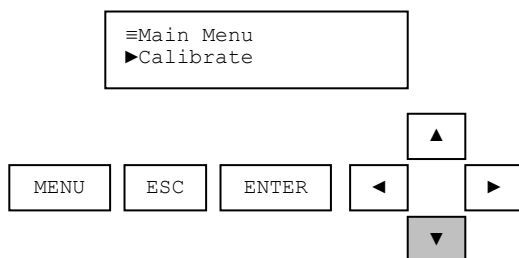


Select ENTER when CONFIGURE is displayed:

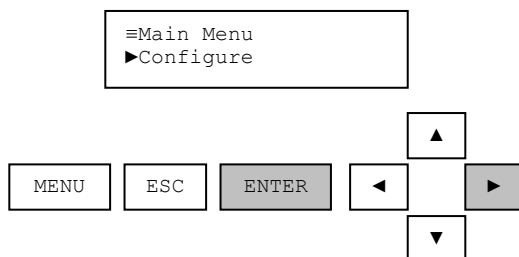


Scroll to SENSOR FILTER using the UP and DOWN arrows:

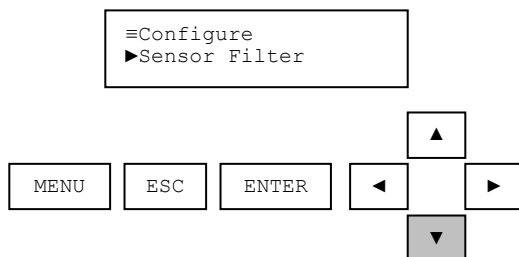


Select SENSOR FILTER using the ENTER key:

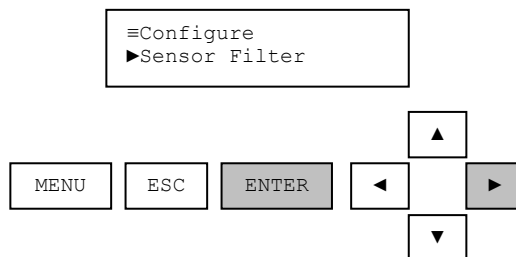


Use the UP and DOWN arrow keys to change the number in parentheses to the desired sensor filter (in seconds):

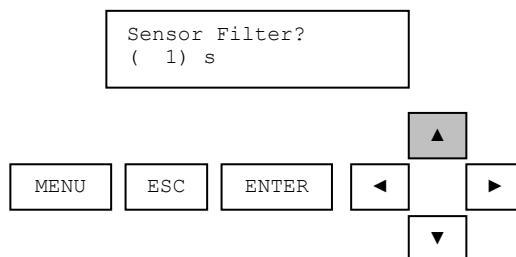


Press the ENTER key to keep the filter setting currently in parentheses. Or press the ESC key to leave the filter setting unchanged.

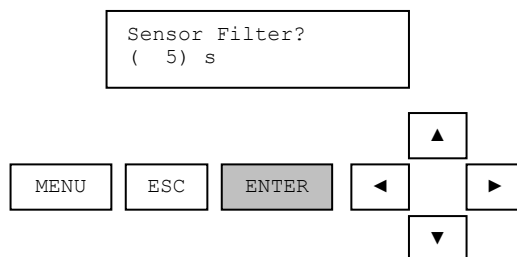


After editing or viewing the filter setting return to the Main Configure screen with the ESC key.

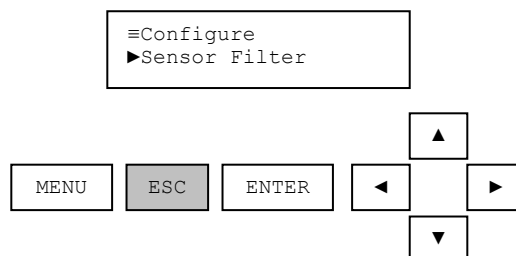

When finished with MENU functions return to the Main Configure screen with the ESC key.

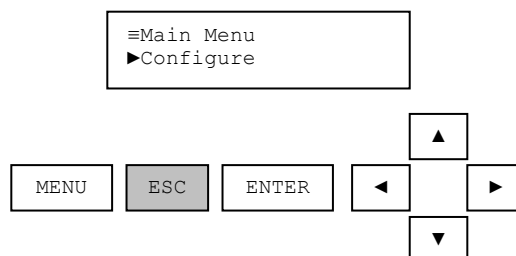


Observe the response time of the measurement. The temperature filter should also be changed to the same filter value.

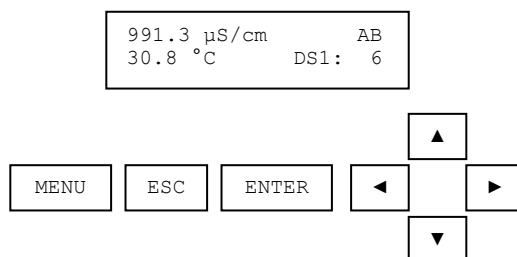

5.3. Navigating the User-Entered Concentration Table Screens

The DataStick can convert measured conductivity into % concentration based on a 10-point user-entered concentration table. This feature is available for contacting and toroidal conductivity only. To enable this feature, set the Sensor Units to % in the Configure menu. The measured values will be displayed as shown below:

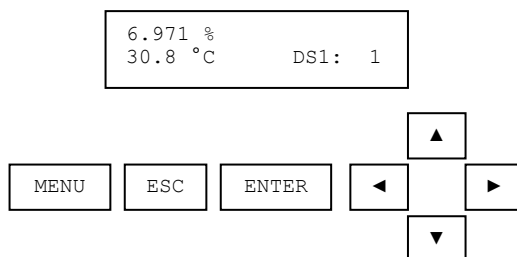

The table can be accessed using the AV38's user interface. Each point in the table is composed of two coordinates, conductivity and concentration. The conductivity coordinate is also known as the X coordinate, and the concentration coordinate is also known as the Y coordinate.

Concentration Table Requirements

The table can have up to 10 points. If the table has fewer than 10 points, the last point in the table must be set to 0 µS/cm and 0%. Thus a typical table with four points will have the form shown in Table 5:

Table 5: A typical concentration table with four points.

Point	Conductivity X Coordinate (µS/cm)	Concentration Y Coordinate (%)
1	0	0
2	1,000	10
3	5,000	50
4	10,000	99.99
5	0	0
6	0	0
7	0	0
8	0	0
9	0	0
10	0	0

Note: The coordinate values of 0 $\mu\text{S}/\text{cm}$ and 0% in point 5 indicate the end of the table. Because point 5 is the end of the table, points 6-10 are ignored.

- The conductivity coordinates must be monotonic² over the range of interest and increasing in value and be between 0 and 2,000,000 $\mu\text{S}/\text{cm}$.
- The concentration coordinates must also be monotonic² over the range of interest, but can be either increasing or decreasing and must be between 0 and 99.99%.

Before entering the concentration table values, use Table 6 to record the values to be entered.


Table 6: Record the table values here before entering them.

Point	Conductivity X Coordinate ($\mu\text{S}/\text{cm}$)	Concentration Y Coordinate (%)
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		


² Monotonic means consistently increasing and never decreasing or consistently decreasing and never increasing in value.

Entering the Concentration Table


The concentration table editing screen can be reached by navigating to the Configure menu, scrolling down to the Conc Table item, and then pressing Enter.

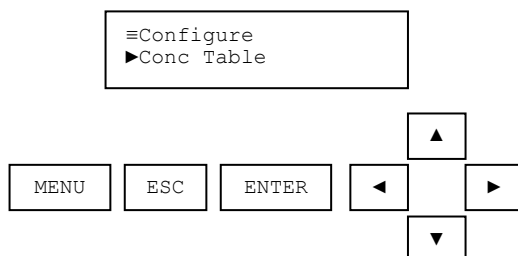


When the Conc Table screen is first entered, all ten points in the table are read. While the points are being read, the screen counts down from 10 to 1.

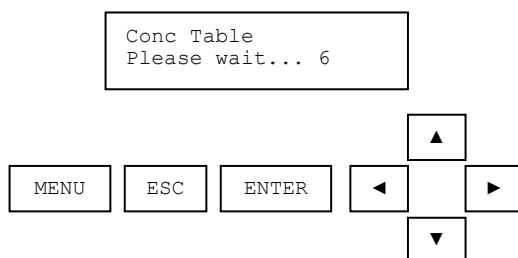


After all ten points have been read, the conductivity coordinate for the first point is shown.

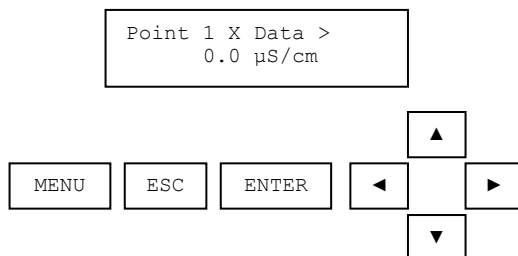

To view the corresponding concentration coordinate, press the RIGHT arrow key.

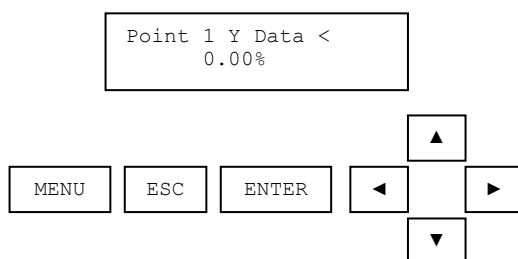


To view the second point in the table, press the DOWN arrow key.

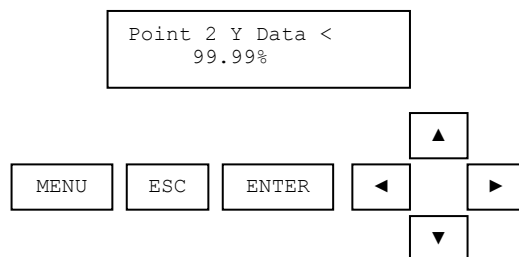

All of the points in the table can be reviewed by using the UP, DOWN, LEFT, and RIGHT arrow keys.


To edit a coordinate, navigate to the desired coordinate using the UP, DOWN, LEFT, and RIGHT arrow keys and press ENTER. The present value of the coordinate will appear within parentheses. The parentheses indicate that the value can be edited.

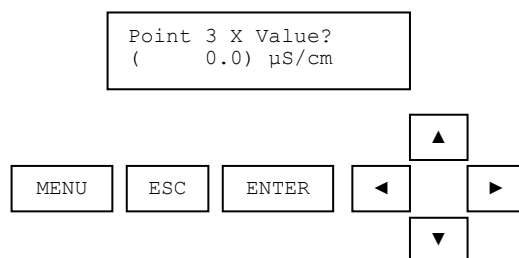


Use the UP, DOWN, LEFT, and RIGHT arrow keys to change the coordinate value as desired.

- The UP and DOWN arrow keys increment and decrement, respectively, the value by a small amount. Pressing and holding the UP or DOWN key increments and decrements the value by a slightly larger amount and at a higher rate. These keys provide a fine adjustment.
- The RIGHT and LEFT arrow keys increment and decrement, respectively, the value by a large amount. Pressing and holding the RIGHT or LEFT arrow key increments and decrements the value by an even larger amount and at a higher rate. These keys provide a coarse adjustment.

When the desired points have been entered, press the ESC key. You will be prompted to exit the table.

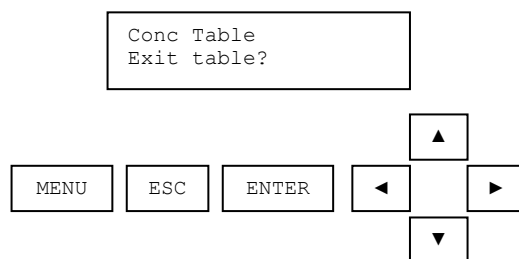


Press ENTER to exit the table or press ESC to return to the table to do more editing. If ENTER is pressed and one or more points have been changed, you will be prompted to save the changes.

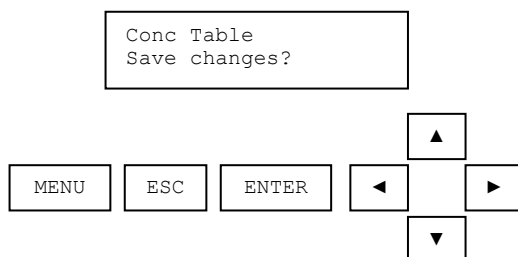


Press ENTER to save the changes or ESC to discard them.


If the changes do not meet the Concentration Table Requirements listed above, you will be informed.

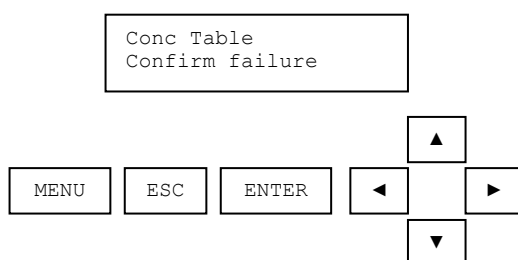

To abort the changes, press the ESC key and then press the ENTER key to confirm the abort.

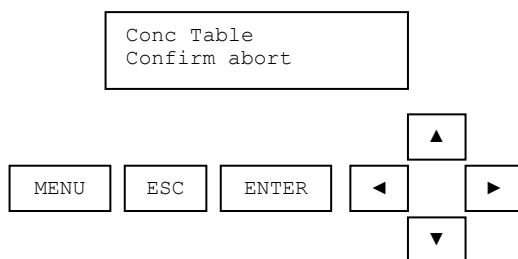

To return to the edit screen and make corrections, press the ENTER key.

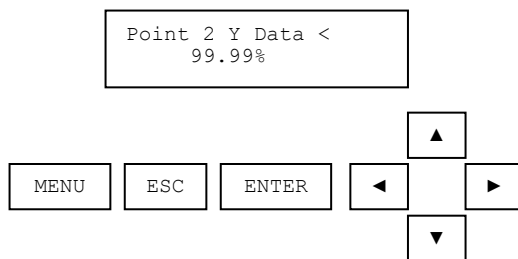

A summary of the actions of the various keys for the viewing and editing modes is shown in Table 7.

Table 7: Summary of concentration table key actions.

Mode	Action	Press
Viewing	Scroll X and Y	LEFT and RIGHT arrow
	Scroll point	UP and DOWN arrow
	Edit coordinate (enter editing mode)	ENTER
	Leave the table	ESC
Editing	Change coordinate value	UP and DOWN (fine change) LEFT and RIGHT (gross change)
	Save new value and return to viewing mode	ENTER
	Leave coordinate value unchanged (return to viewing mode)	ESC

Default Concentration Table

The default concentration table is shown in Table 8:

Table 8: The default concentration table.

Point	Conductivity X Coordinate ($\mu\text{S}/\text{cm}$)	Concentration Y Coordinate (%)
1	0	0
2	20,000	99.99
3	0	0
4	0	0
5	0	0
6	0	0
7	0	0
8	0	0
9	0	0
10	0	0

Using the default table, if the measured conductivity is 10,000 $\mu\text{S}/\text{cm}$, then the concentration will be 50%.

6. HOST COMMUNICATIONS

The AV38 can be set up to communicate with a Host Computer system. The protocol selected is independent of the Modbus protocol used by the AV38 to communicate with the DataSticks. When using Host Communications, please refer to the selected communications manual for specific protocol setup and use.

Table 9: Host protocol vs. user's manual.

Host Protocol	User's Manual to Set up Address, Baud Rate and Parity
Modbus RTU	Modbus Communications Adapter Users Manual (MAN021CA)
DeviceNet	DeviceNet Communications Adapter Users Manual (MAN022CA)
RS-232	DataStick Instruction Manual (MAN011DS): 9600 bps, no parity, 8 data bits, 1 stop bit
Profibus	Profibus-to-DataStick Communications Adapter Instruction Manual (MAN033CA).
Other	Look for addendums on setting up other protocols that may be configured.

When Host Communications hardware is present, a host computer can communicate with the DataSticks connected to the AV38.

There are two basic host communication modes; Gateway and Analyzer. When using either mode, it is better to program the host device to respond to events rather than perform desired operations based on elapsed time. This is because there is a limited bandwidth between the AV38 and the DataSticks connected to it, and any host commands not handled by the AV38 must be forwarded to a DataStick. If the host makes a request too often, the system will slow down. Hard-coded timers are rigid, and it is difficult for the programmer to know how often is too often. If the host waits for a response from the AV38 before sending the next request, slow-downs can be avoided and the system will be more flexible.

Gateway Mode

Gateway mode is selected by setting the measure screen to Gateway using the LEFT and RIGHT arrow keys. This disables all output and relay functions and allows the host computer to access all DataSticks connected to the AV38 for remote measurement, calibration, configuration and diagnostics.

It is not possible to enter Gateway mode using the RIGHT or LEFT arrow keys when the Measurement is ppmFCL2 (free chlorine concentration). This is because the AV38 needs to continuously acquire data from the chlorine DataStick and, if necessary, the pH DataStick, in order to perform the free chlorine concentration calculation. To enter Gateway mode in this case, first set the Chlorine Config | Measurement to ppmHOCL. If a pH-compensated free chlorine concentration measurement is required, the host will have to perform the calculation.

Analyzer Mode

It is also possible to communicate digitally with the DataSticks in the Analyzer mode where analog outputs and relays remain active. In this mode it is possible for the host computer to communicate only with the two DataSticks being displayed locally, i.e., mapped to the AV38's two channels.

7. DATASTICK COMMUNICATIONS SETUP

Up to 240 DataSticks can be connected to a single AV38. Any two of these DataSticks can be mapped to “Channel 1” (DS1) or “Channel 2” (DS2) for direct local display, calibration, configuration and diagnosis. The DataStick station address that is mapped to each channel is displayed in the lower right corner of the corresponding MEASURE screen. By default, the DataStick at station address 1 is mapped to both channels. The SET DS1 STATION and SET DS2 STATION screens are used to change this mapping. Please see Section 7.1, Setting DataStick Station Number, for more information.

For communications to work properly, the AV38 and the DataSticks must use the same data type, Baud rate and parity. The AV38 SETTINGS screen is used to set these parameters in the AV38. Please see Section 7.2, AV38 Communications Settings, for more information. The default AV38 and Modbus Communications Adapter parameters are:

1. Data Type of Little Endian Word Swap, 1
2. Baud rate of 19.2 kbps
3. Parity of ODD

If “DataStick Absent” is displayed in a MEASURE screen, it is likely that the corresponding DataStick is set up for the wrong station address, Baud rate or parity.

The FIND DATASTICKS screen is used to find connected DataSticks and to change their station addresses. This is useful when commissioning a network, resolving a “DataStick Absent” message on a MEASURE screen, troubleshooting or determining the station address of a DataStick when it’s not known. Please see Section 7.3, Finding DataSticks, for more information.

All of these screens can be reached from the DataStick Comms menu. The complete DataStick Comms menu is shown in Figure 24.


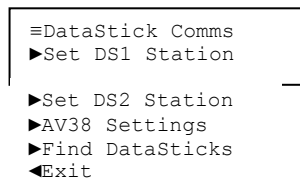



Figure 24: The complete DataStick Comms menu.

7.1. Setting DataStick Station Number

The DataStick Station Number used by the AV38 to communicate with a DataStick is displayed in the lower right corner of the MEASURE screen. It can be viewed or changed in the DataStick Comms Menu by selecting “SET DS1 Station” or “Set DS2 Station” with the ENTER key. The default Station Number for both measure screens is 1.

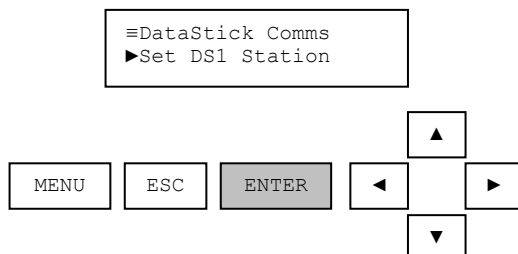


Edit the Station number in parentheses using the UP and DOWN arrows. Select a new number with the ENTER key. To be sure that a new number is NOT selected, press the ESC key to leave the station number unchanged. The station number selected must match the number programmed into the Modbus Comms Adapter of the DataStick wired to the AV38.

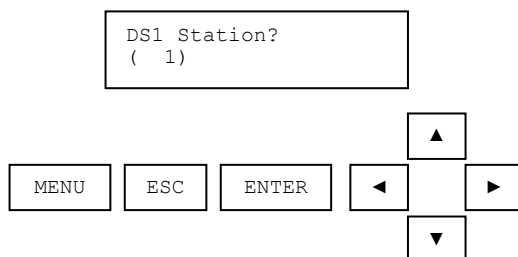


7.2. AV38 Communications Settings

Use the AV38 Settings menu to set the AV38’s data type, Baud rate and parity. The complete AV38 Settings menu is shown below.

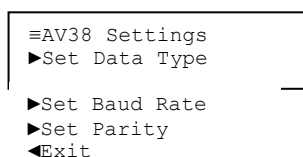


1. Setting the AV38 Data Type

All DataSticks connected to the AV38 must be set up with the same Data Type. To view or edit the current AV38 Data Type setting, press ENTER on the Data Type screen as shown. The default setting is Little Endian/Word Swap 1.

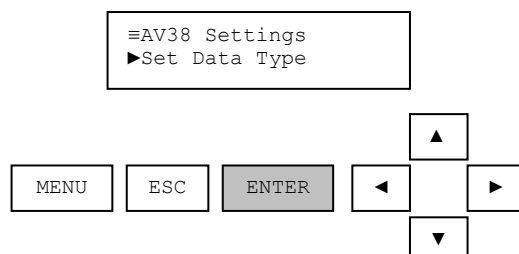


Use the UP/DOWN arrows to edit the AV38 Data Type. "Little Endian/Word Swap 1" and "Big Endian 2" are the two data types supported in the AV38. The default data type is "Little Endian Word Swap 1" as it is most commonly used. If measurement data is displayed but does not make sense then it is very likely that the Data Type should be switched.

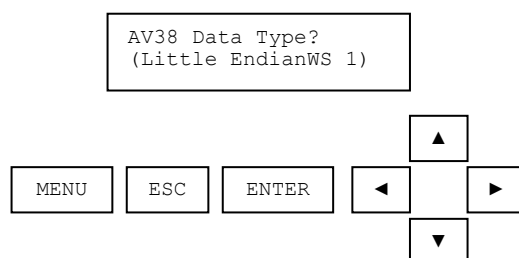

Select a new data type with the ENTER key. To be sure that a new data type is NOT selected, press the ESC key to leave the data type unchanged. The data type selected must match the data type programmed into the Modbus Comms Adapter of the DataStick wired to the AV38.

2. Setting the AV38 Baud Rate


All DataSticks connected to the AV38 must be set up with the same Baud rate. To view or edit the current AV38 Baud rate setting, press ENTER on the SET BAUD screen as shown. The default setting is 19.2 kbps.

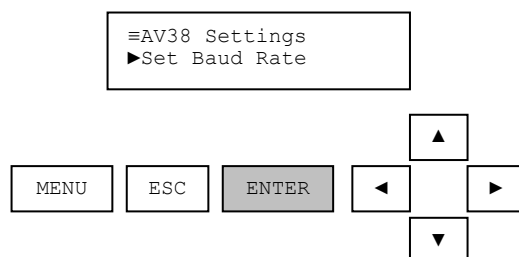

Use the UP/DOWN arrows to edit the AV38 Baud rate. Baud rate options include the following (kbps):


- 2.4
- 4.8
- 9.6
- 14.4
- 19.2
- 28.8
- 38.4
- 57.6
- 76.8
- 115.2
- 230.4

The Baud rate selected in the AV38 must match the Baud rate programmed in all connected DataSticks. Press ENTER to select a new value. Press ESC to leave the Baud rate unchanged.

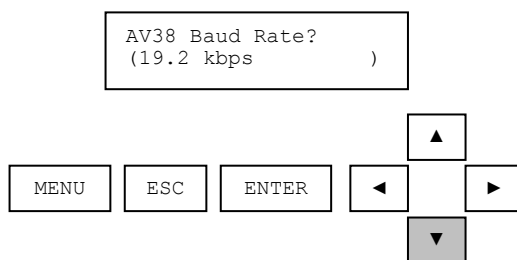


3. Setting the AV38 Parity

All DataSticks connected to the AV38 must be set up with the same parity. To view or edit the current AV38 parity setting, press ENTER on the SET PARITY screen as shown. The default setting is ODD.

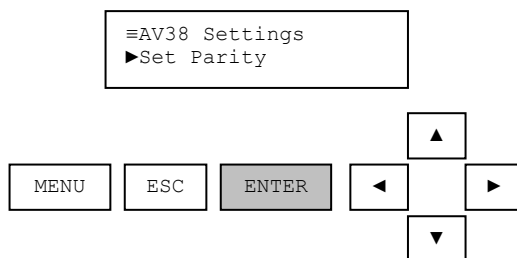

Use the UP/DOWN arrows to edit the AV38 parity. Parity options include: ODD, EVEN and NONE. The parity selected in the AV38 must match the parity programmed in all connected DataSticks. Press ENTER to select a new value. Press ESC to leave the parity unchanged.

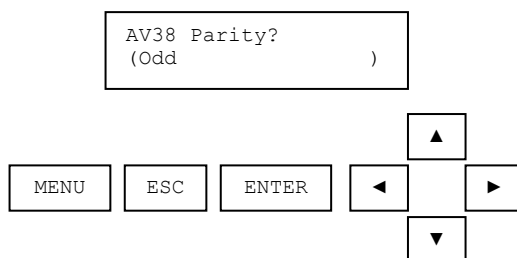

7.3. Finding DataSticks

This screen can be used to find station addresses of the DataSticks connected to the AV38 and change them if desired.

Note: It is not necessary to have DataStick bodies attached to the Modbus Communications Adapters for the DataSticks to be found.


There are two modes to this screen; finding and editing. Initially, the screen is in the finding mode. The UP and DOWN keys are used to change the direction. Once a DataStick has been found, the ENTER key is used to switch to the editing mode. In the editing mode, the UP, DOWN, LEFT and RIGHT arrow keys are used to adjust the station address. ENTER is used to write the new address to the DataStick, and ESC is used to abandon the edit and return to the finding mode. A summary of the actions of the various keys for the finding and editing modes is shown in Table 7.

Table 10: Summary of Find Datasticks key actions.


Mode	Action	Press
Finding	Search up or down for DataStick	UP or DOWN arrow
	Edit found station address (enter editing mode)	ENTER
	Leave the screen	ESC
Editing	Change station address	UP and DOWN (fine change) LEFT and RIGHT (gross change)
	Save new station address and return to finding mode	ENTER
	Leave station address unchanged (return to finding mode)	ESC

4. Find DataSticks Connected to the AV38 and Change Their Addresses


To find the DataSticks connected to the AV38 and change their addresses, press ENTER on the FIND DATASTICKS screen as shown.

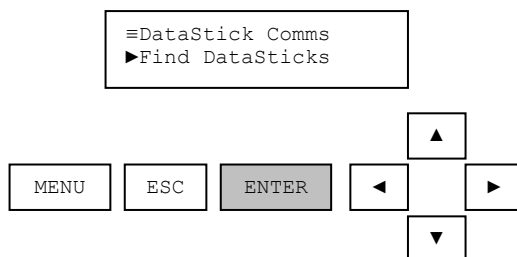


The AV38 will try each Modbus station address starting at 1 and working its way to 240 looking for DataSticks as shown.

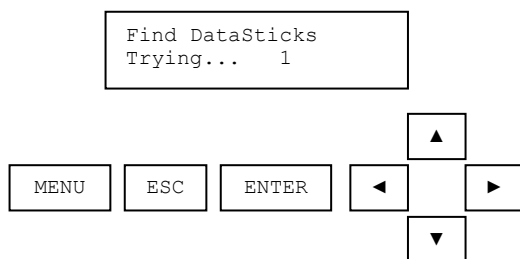


When a DataStick is found, the address at which it was found is shown.

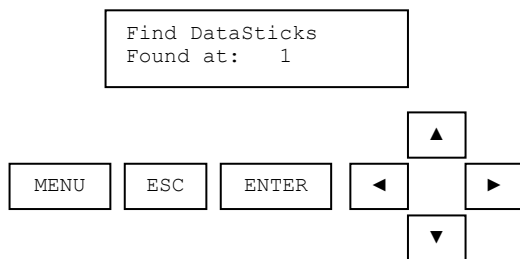

The DataStick's station address can be changed by pressing the ENTER key, editing the station address using the UP, DOWN, LEFT, and RIGHT arrow keys, and pressing ENTER again as shown. Cycle the power on the DataStick to make the new station address take effect. Press ESC to leave the station address unchanged.



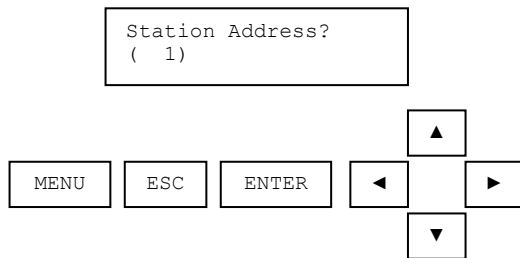


When the upper or lower limit of the search is reached, the AV38 will show that it's done.


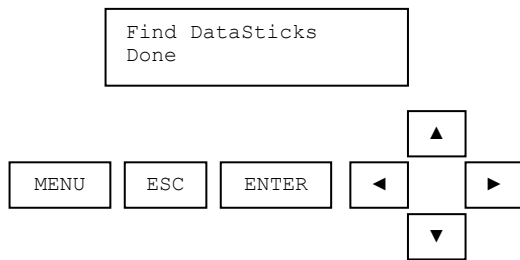



If the DOWN key is pressed while the screen shows Done, the search will resume starting at 1, 2, 3.... If the UP key is pressed while the screen shows Done, the search will resume starting at 240, 239, 238....

The screen can be exited by pressing ESC.

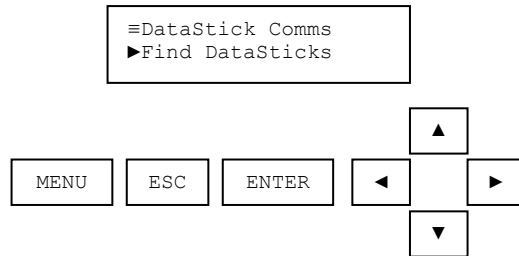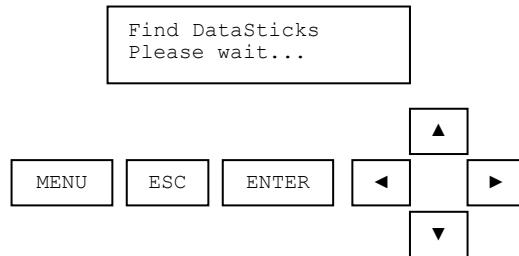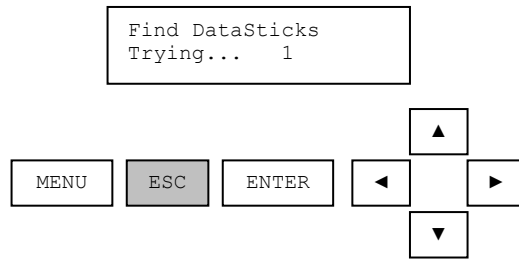

The direction of the search can be changed by pressing the UP or DOWN key. In the example below, the direction is changed from down to up.

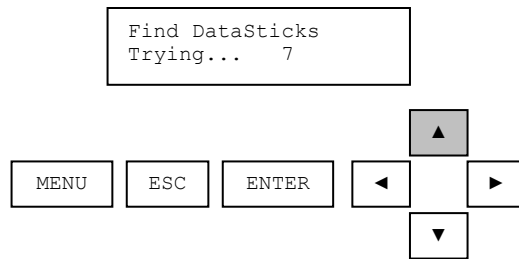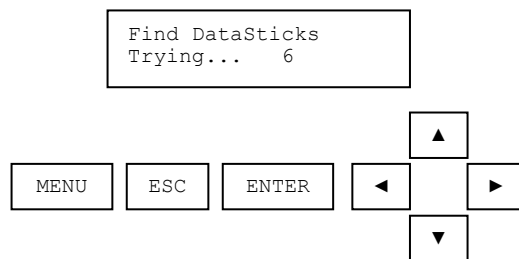

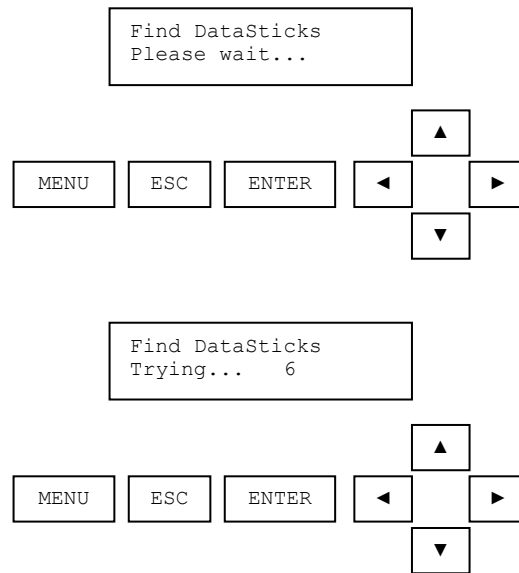

5. Commissioning a Network of DataSticks

A number of DataSticks with identical station addresses can be commissioned using the FIND DATASTICKS screen.

1. Connect the first DataStick to the AV38 and use the FIND DATASTICKS screen to find the DataStick's station address. By default this is 1.
2. Press the ENTER key and change the DataStick's station address to the desired value.
3. Cycle the power on the DataStick to cause it to use the new station address.
4. Use the FIND DATASTICKS screen to verify that the DataStick appears at the new station address.
5. Connect the next DataStick to the AV38 and repeat the procedure. Be sure to avoid any addresses that have already been used.

6. Resolving a "DataStick Absent" Message

The FIND DATASTICKS screen can be used to resolve a "DataStick Absent" message when it appears on a measure screen. Assume that there are two DataSticks wired to the AV38; one is Chlorine and the other is pH. Also assume that the Chlorine DataStick's station address is 1 and it's mapped to Channel 1 (DS1). By default, the pH DataStick has a station address of 2 and is mapped to Channel 2 (DS2), but the DS2 measure screen says "DataStick Absent". This message can be resolved by finding the station address of the pH DataStick and mapping it to Channel 2.

1. Disconnect the Chlorine DataStick from the AV38.
2. Use the FIND DATASTICKS screen to find the station address of the pH DataStick (the only DataStick connected to the AV38).
3. Navigate to the Set DS2 Station Address screen and enter the station address of the pH DataStick found in step 2.
4. Reconnect the Chlorine DataStick to the AV38.

5. Verify that the “DataStick Absent” message has disappeared from the Channel 2 measure screen.

Note that the message could also have been resolved by changing the pH DataStick’s station address to the same value as that shown on the Set DS2 Station screen.

7. Determining the Station Address of an Unknown DataStick


The FIND DATASTICKS screen can be used to determine the station address of a DataStick when it’s unknown.

1. Connect the DataStick to the AV38. Be sure that no other DataSticks are connected to the AV38.
2. Press ENTER on the FIND DATASTICKS screen and wait until the AV38 finds the DataStick’s address.
3. Once the address has been found, label the DataStick, or change the DataStick’s station address to the desired value using the FIND DATASTICKS screen.


8. CHLORINE CONFIGURATION MENU

When configuring an AV38 for Chlorine measurement, the chlorine DataStick can be connected to channel 1 (DS1) or channel 2 (DS2). If a pH DataStick is to be used for compensation, it must be connected to the other channel. For example, if a chlorine DataStick is connected to channel 1, then the pH DataStick must be connected to channel 2.

A Chlorine DataStick connected at Station 1, will bring up a Chlorine Configuration selection in the main menu. It will allow the measurement value to be selected as free chlorine or HOCl concentration. If free chlorine concentration is selected, then the pH must be known. If the pH value of the process is constant, the Chlorine Config menu provides a means to enter a fixed value for pH. If the pH value varies, then the pH can be measured with a second DataStick sensor connected to the AV38. If a pH DataStick is present, then the derivation of free chlorine concentration can be made by the AV38 using the HOCl concentration and temperature measurement from the Chlorine DataStick, and the pH measurement from the pH DataStick. This is done by selecting “pH DataStick” in the pH Source screen (under Chlorine Config). If a pH DataStick is not detected by the AV38, the only option under pH Source will be Fixed pH, where the value of the pH can entered manually.

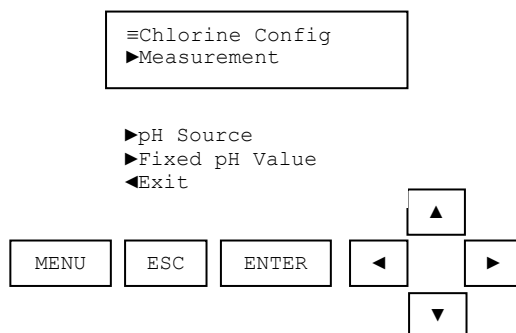


The “Measurement” screen provides a selection of Free Chlorine or HOCl concentration.

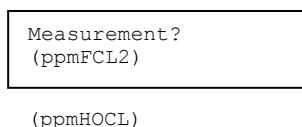

The “pH Source” screen provides a way to select the source of the pH value in the chlorine calculation. If a pH DataStick is detected by the AV38, this selection becomes available. If a pH DataStick is detected by the AV38, then “pH DataStick” can also be selected. When this is done, the measured pH value is used to calculate the free chlorine concentration.

 Note: If a pH DataStick is used to calculate the free chlorine concentration, the sensor units must be pH. If they’re not, then the concentration calculation will be done using the value entered through the Fixed pH Value screen. If the free chlorine concentration measured by the AV38 is not as expected, please check to see if this is the case.



The “Fixed pH Value” screen provides a way to set a fixed pH value that can be used to calculate free chlorine from the HOCl measurement. This single fixed entry can be used when a pH DataStick is not present or when the process pH is tightly controlled to a known value. The default value is 7.00 pH.


If the sensor units on the pH DataStick are changed from pH to mV, the AV38’s pH Source will automatically be changed to “Fixed pH”. The same thing will happen if the pH DataStick is exchanged for a DataStick of a different type, DO, for instance. This is because the calculation of the free chlorine concentration requires a pH value.

It is not possible to enter Gateway mode using the RIGHT or LEFT arrow keys when the Measurement is ppmFCL2 (free chlorine concentration). This is because the AV38 needs to continuously acquire data from the chlorine DataStick and, if necessary, the pH DataStick, in order to perform the free chlorine concentration calculation.


9. HOLD OUTPUTS SCREEN

The HOLD OUTPUTS function is used when it is desired to hold the present values of the 4-20mA analog outputs, PID and relays for an extended period of time. This feature can be used during maintenance. There is no timeout feature for this function; it will stay active until it is removed.


Use the UP/DOWN arrows to select Hold Outputs then press enter.

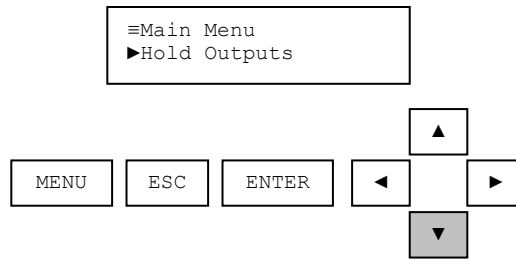

Use the UP/DOWN arrows to select yes or no, then press enter.

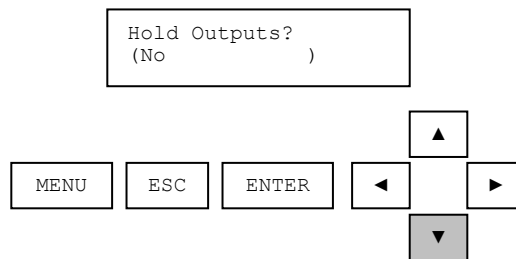

Press ESC to return to the Measure screen

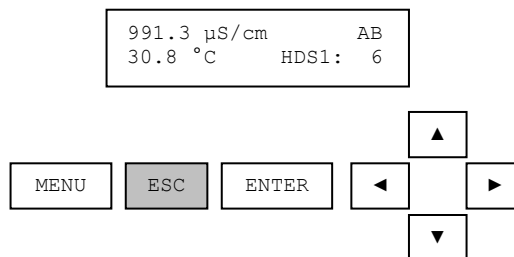

Note that an upper-case H will appear between the temperature units and the station address indicating that the unit is holding the outputs. Outputs will be held until deselected.

10. ANALOG OUTPUTS

Up to two 4 to 20 milliamp analog outputs are provided for traditional data reporting. The selectable features in the analog output menus are the same regardless of the type of sensor head that is installed in the DataStick. While the AV38 is being used to calibrate the DataStick, its analog output is held at its present value.


When a sensor head of the same type is replaced in a DataStick, analog output and relay settings are maintained. If a sensor head of a new type is installed, analog output and relay settings are automatically set to default values.

The analog output menu is used to scale the analog output in the AV38. The following selections are available for each output:


- PARAMETER is used to select SENSOR 1, SENSOR 2, TEMPERATURE 1, TEMPERATURE 2 or PID CONTROLLER (if installed with pH sensor) to drive the analog output. Note that if PID is selected, setting up 4 mA and 20 mA values is not necessary or available. Settings for PID are set up separately in the PID section of the main menu.
- SET 4 mA VALUE is used to edit the lowest sensor or temperature value to be reported. The default value will be the lowest possible reading for the parameter selected.
- SET 20 mA VALUE is used to edit the highest sensor or temperature value to be reported. The default value will be the highest possible reading for the parameter selected.
- The CALIBRATE feature is used to fine-tune the milliamp readings when necessary. An ammeter is connected in series with the load for adjustment of the 4 mA value and the 20 mA value.

10.1. Assigning 4 mA and 20 mA parameter values


Press MENU from the Measure screen

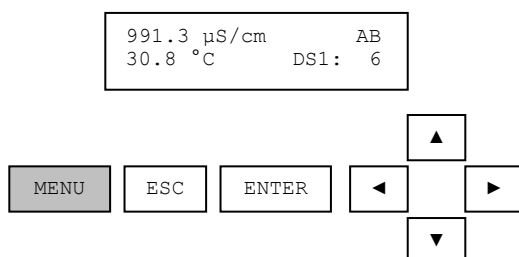


Use the UP/DOWN arrows to select Analog Output (or Analog Output 1, Analog Output 2 depending on hardware options).

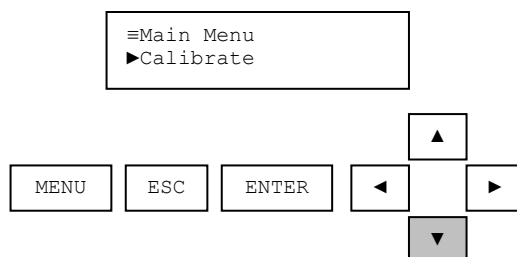


Use the ENTER key to configure the Analog Output of choice. In this example Analog Output 1 is shown.

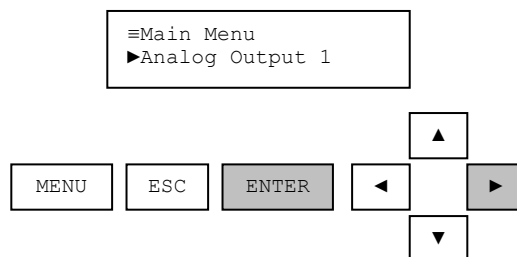


Use the UP/DOWN arrows to scroll through the Analog Output configuration options of Set Parameter, Set 4 mA Value, Set 20 mA Value and Calibrate.

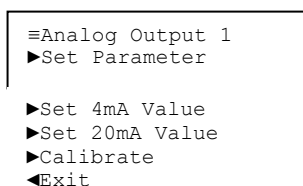

Select SET 4 mA option with the ENTER key. Adjust the parameter value with the UP/DOWN arrow keys. Press ENTER to accept the value in parentheses. Press ESC to leave the value unchanged.

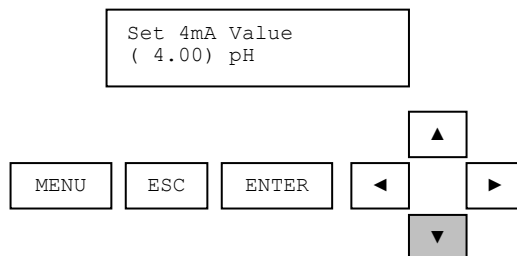


Select SET 20 mA setting with the ENTER key. Adjust the parameter value with the UP/DOWN arrow keys. Press ENTER to accept the value in parentheses. Press ESC to leave the value unchanged.

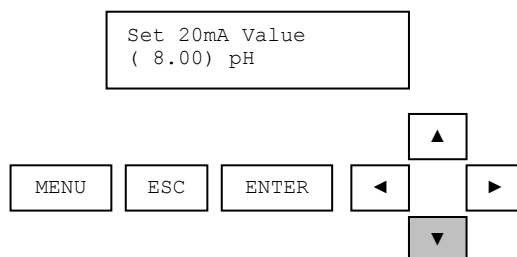


10.2. Calibrating Analog Output Current


To calibrate the analog outputs, find the CALIBRATE option with the UP/DOWN arrow keys in the Analog Output menu and press ENTER to select it.

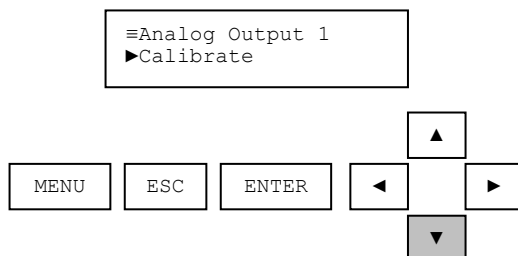


Connect an ammeter in series with the load and Select 4 mA Point with the ENTER key.

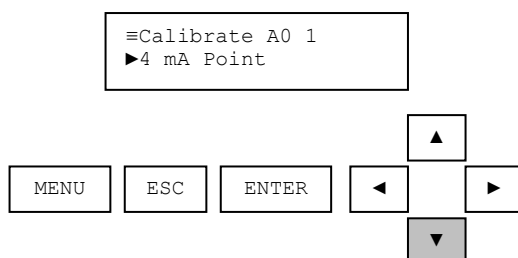


The ammeter should read exactly 4.00 mA. If not, adjust the value displayed on the meter using the AV38 UP/DOWN arrow keys. The number displayed in parentheses is in "counts" and should be within 20% of 2500. Press ENTER to accept the value in parentheses. Press ESC to leave the value unchanged.

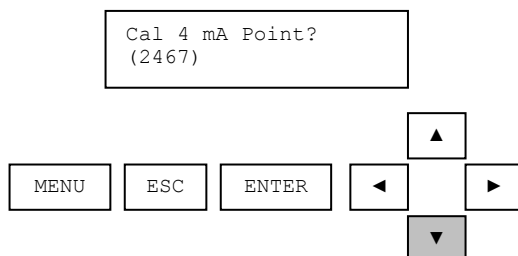


From the Analog Output Calibrate Menu, use the UP/DOWN arrows to display the 20 mA Point. Select with the ENTER key.

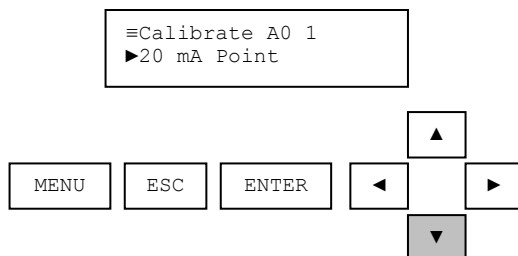

The ammeter should read exactly 20.00 mA. If not, adjust the value displayed on the meter using the AV38 UP/DOWN arrow keys. The number displayed in parentheses is in “counts” and should be within 20% of 12,500. Press ENTER to accept the value in parenthesis. Press ESC to leave the value unchanged.

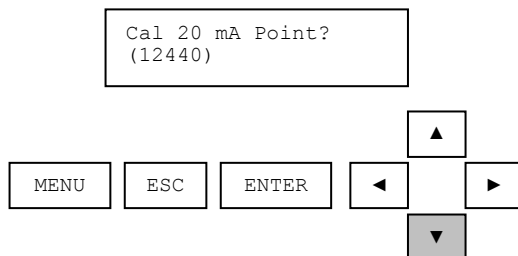


From the Analog Output Calibrate Menu, Press ESC to move back up the MENU tree to the Measure screen.

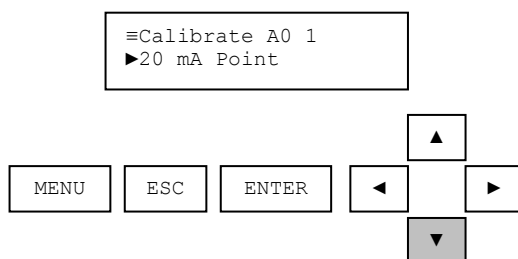


11. PID CONTROLLER MENU

The PID Controller is present in the Main Menu list when a pH or conductivity DataStick is connected. Press ENTER to select PID CONTROLLER.

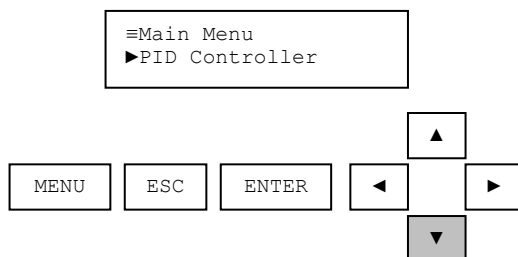

Use the UP/DOWN arrows to scroll the list of PID Controller options for viewing and editing.

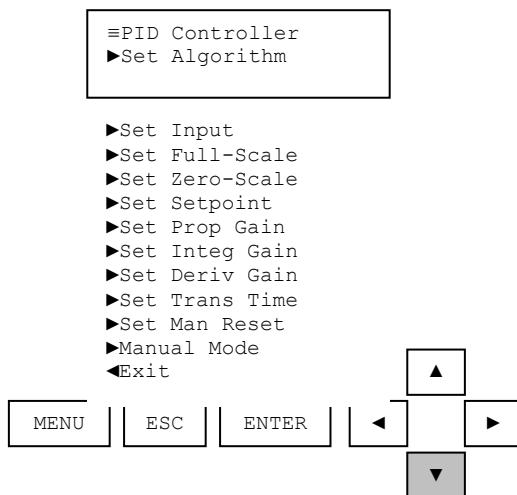

Each of the PID controller options used to configure and tune the loop is shown below for a sensor type of pH.

Table 11: PID Controller functions for pH.

PID Function	Edit Range	Default Setting
Set Algorithm	ISA or Velocity	ISA
Set Input	Sensor 1 or Sensor 2	Sensor 1 (DS1)
Set Full-Scale	0 to 14 pH	14 pH (Do not change)
Set Zero-Scale	0 to 14 pH	0 pH (Do not change)
Set Setpoint	0 to 14 pH	7 pH
Set Proportional Gain	-99.99 to +99.99	0.00 (+ is direct action, - is reverse action)
Set Integral Gain	0.00 to 50.00 reps/min	0.00 reps/min
Set Derivative Gain	0.00 to 10.00 seconds	0.00 seconds
Set Transit Time ³	0 to 9999 seconds	0 seconds
Set Manual Reset	0.0% to 100%	0.0%
Manual Mode	Control: 0.0% to 100%	0.0% (Process value is displayed)

³ Transit Time is available only when the Algorithm is set to Velocity.

Scroll through these configuration and tuning options with UP/DOWN arrows. Press ENTER to select an option and view or edit the setting. Press ENTER to change setting or ESC to leave a setting unchanged. Note that in the Manual Mode, the present pH value is displayed in the upper line of the screen and the Control Adjustment is made in the lower line.

Each of the PID controller options used to configure and tune the loop is shown below for a sensor type of contacting or electrodeless conductivity.

Table 12: PID Controller functions for conductivity.

PID Function	Edit Range	Default Setting
Set Algorithm	ISA or Velocity	ISA
Set Input	Sensor 1 or Sensor 2	Sensor 1 (DS1)
Set Full-Scale	0 to 5000 $\mu\text{S/cm}$	2000 $\mu\text{S/cm}$ (Do not change)
Set Zero-Scale	0 to 5000 $\mu\text{S/cm}$	0 $\mu\text{S/cm}$ (Do not change)
Set Setpoint	0 to 5000 $\mu\text{S/cm}$	1000 $\mu\text{S/cm}$
Set Proportional Gain	-99.99 to +99.99	0.00 (+ is direct action, - is reverse action)
Set Integral Gain	0.00 to 50.00 reps/min	0.00 reps/min
Set Derivative Gain	0.00 to 10.00 seconds	0.00 seconds
Set Transit Time ³	0 to 9999 seconds	0 seconds
Set Manual Reset	0.0% to 100%	0.0%
Manual Mode	Control: 0.0% to 100%	0.0% (Process value is displayed)


When the configuration and tuning settings are made, select PID as the Parameter for Analog Output 1 or Analog Output 2.

Integral gain can be disabled by entering "0.00" to provide only PD controller action.

To quickly get to the PID controller set point for fine tuning, press the ENTER and RIGHT ARROW KEYS at the same time from a measure screen. This feature is only present with the connected DataStick is configured for pH, contacting conductivity or toroidal conductivity.


12. RELAYS

Two Form-C relays with normally open and normally closed contacts are available with the AV38. When relay A is energized or activated, an “A” will appear in the upper right corner of the measure display. If relay B is energized a “B” will appear as shown:

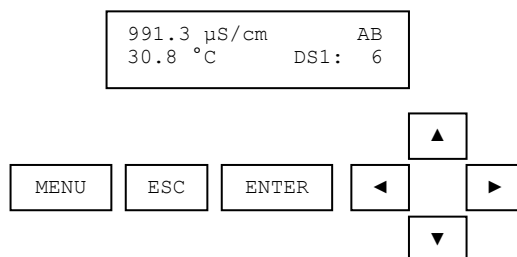

When a sensor head of the same type is replaced in a DataStick, analog output and relay settings are maintained. If a sensor head of a new type is installed, analog output and relay settings are automatically set to default conditions.

The selectable features in the relay menus are the same regardless of the type of sensor head that is installed in the DataStick. While the AV38 is being used to calibrate the DataStick, the relay is held in its present state. Use the UP/DOWN arrows to scroll the relay option list. Press ENTER to select. Press ESC to move up a level in the menu system.

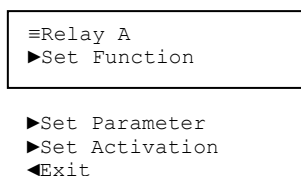

The SET FUNCTION menu is used to configure a relay for ALARM, CONTROL or WASH functions. When ALARM is selected, the relay activation is determined by low and high limits of the chosen measured parameter. When CONTROL is selected, the relay activation is determined by a single set point. WASH is a timer function and does not depend on the sensor or temperature measurements.

- First select the desired relay function: ALARM, CONTROL or WASH.
- Next, select the PARAMETER (Sensor 1, Sensor 2, Temperature 1, or Temperature 2) that drives the relay if either Alarm or Control is selected. If Wash is selected, the relay operates as a timer.

Navigation from the Measure Menu (when this feature is installed):

1. Press MENU to display the Main Menu.
2. Scroll with the UP/DOWN arrows to view RELAY A or RELAY B.
3. Press ENTER to select the desired relay.
4. Scroll with the UP/DOWN arrows to view FUNCTION
5. Press ENTER to select Function and use the UP/DOWN arrows to select Alarm, Control or Wash.

6. Press ENTER to select Alarm, Control or Wash. Press ESC to leave the setting unchanged.
7. Scroll with the UP/DOWN arrows to SET PARAMETER (unless Wash was selected).
8. Press ENTER to select SET PARAMETER and use the UP/DOWN arrows to select SENSOR or TEMPERATURE to drive the relay.
9. Press ENTER to select Sensor or Temperature. Press ESC to leave the setting unchanged.
10. Scroll with the UP/DOWN arrows to SET ACTIVATION.
11. Press ENTER to select SET ACTIVATION and use the UP/DOWN arrows to scroll the list of activation options. Select an option with the ENTER key. Edit the selected option with the UP/DOWN arrows. Press ENTER to select the edited option or press ESC to leave the option unchanged.

12.1. Control Relay Activation

Selecting “Control” operates the relay in a control mode. Activation entries specific to a Control relay are:

- Phase -- “High” sets the relay setpoint to respond to increasing measured value; “Low” assigns the relay setpoint to respond to decreasing measured value.
- Setpoint -- Sets the value at which the relay will turn on.
- Deadband -- Sets the range in which the relay remains activated after the measured value decreases below the setpoint value (High-phased relay) or increases above the setpoint value (Low-phased relay).
- Off-Delay -- Sets a time (0-999 seconds) to delay the relay from normally de-activating.
- On-Delay -- Sets a time (0-999 seconds) to delay the relay from normally activating.
- The “On-Delay” and “Off-Delay” settings may be used to help eliminate process “overshoot” when there are long process pipe runs or delays in mixing.

If CONTROL is selected, the following activation options can be programmed in the ACTIVATION menu.

Table 13: Control relay functions.

CONTROL Function	Edit Range	Default Setting
Set Phase	High or Low	High
Set Setpoint	Min to Max scale	Max scale
Set Deadband	Min to Max scale	Min scale
Set Off-Delay	0 to 999 seconds	0 seconds
Set On-Delay	0 to 999 seconds	0 seconds

12.2. Alarm Relay Activation

Selecting “Alarm” operates the relay in an alarm mode. Activation entries specific to an Alarm relay are:

- Low Alarm -- Sets the value at which the relay will activate in response to decreasing measured value.
- High Alarm -- Sets the value at which the relay will activate in response to increasing measured value.
- Low Deadband -- Sets the range in which the relay remains activated after the measured value increases above the low alarm value.
- High Deadband -- Sets the range in which the relay remains activated after the measured value decreases below the high alarm value.
- Off-Delay -- Sets a time (0-999 seconds) to delay the relay from normally de-activating.
- On-Delay -- Sets a time (0-999 seconds) to delay the relay from normally activating.
- The “On-Delay” and “Off-Delay” settings may be used to help eliminate process “overshoot” when there are long process pipe runs or delays in mixing.

If **ALARM** is selected, the following activation options can be programmed in the **ACTIVATION** menu.

Table 14: Alarm relay functions.

ALARM Function	Edit Range	Default Setting
Set Low Alarm	Min to Max scale	Min scale
Set High Alarm	Min to Max scale	Max scale
Set Low Deadband	Min to Max scale	0
Set High Deadband	Min to Max scale	0
Set Off-Delay	0 to 999 seconds	0 seconds
Set On-Delay	0 to 999 seconds	0 seconds

12.3. Wash Relay Activation

A wash relay activates periodically for a specified length of time. It is assumed that the wash relay is connected to some kind of automatic cleaning apparatus attached to a DataStick. While a wash relay is activated, the analog outputs and relays are held because it is assumed that a DataStick is being washed and the sensor and temperature values are not valid. A wash relay is controlled by the corresponding Interval, Duration, and Off Delay. The Wash Cycle is disabled by setting the Interval to 0.

If WASH is selected, the following activation options can be programmed in the ACTIVATION menu.

Table 15: Wash relay functions.

WASH Function	Edit Range	Default Setting
Set Interval	0.0 to 999.9 minutes	0.0 minutes (disabled)
Set Duration	0 to 999 seconds	10 seconds
Set Off-Delay	0 to 999 seconds	5 seconds

The wash cycle is shown in Figure 25.

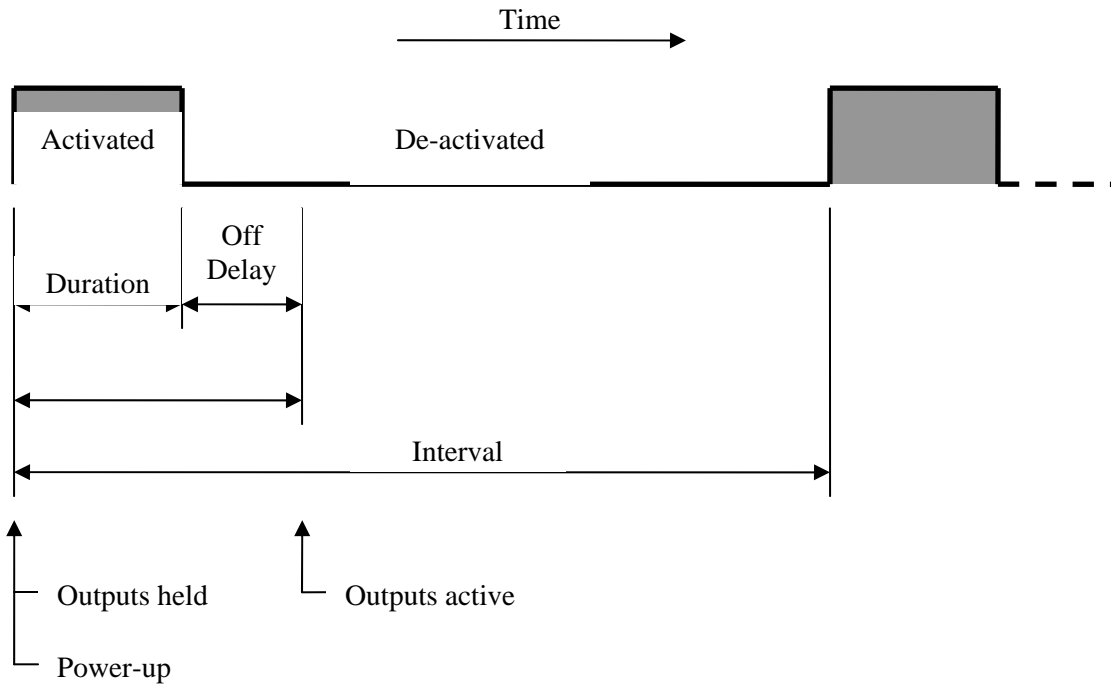


Figure 25 The wash cycle showing when the relay is activated and the outputs are held.

- At power-up, if the Interval value is greater than zero, the wash cycle is started by placing the outputs in hold mode, activating the wash relay, and starting the duration counter.
- When the duration counter expires, the relay is de-activated, and the off-delay counter is started.
- When the off-delay counter expires, the outputs are returned to the active mode.
- The wash cycle repeats each time the interval counter expires.
- The wash cycle is started if the Interval value is changed to a value greater than 0.

- The wash cycle is stopped if the Interval value is changed to 0.
- If the Duration is longer than the Interval, the wash relay will remain activated.
- If the Off Delay is longer than the Interval, the outputs will remain in hold mode.

When the menu key is pressed, the state of the wash relays is recorded before they are de-activated, and the interval, duration and off-delay counters are suspended. When a measure screen is active once again, the state of the wash relays is restored, and the counters resume counting.

If the Interval is changed, the new value will take effect the next time the interval counter expires.

If the Duration is changed, the new value will take effect the next time the interval counter expires.


If the Off Delay is changed, the new value will take effect the next time the duration counter expires.

If the wash cycle is in the duration portion and the user navigates to the analog output calibration screen, the analog outputs will be switched to active mode. Upon leaving the analog output calibration screen, the analog outputs will be returned to hold mode.


13. DIAGNOSE MENU

The diagnose menu displays diagnostic information about the DataStick measurement system.


Enter the Menu with the MENU key. Scroll the menu options with the UP/DOWN arrows. The Diagnose menu is near the bottom of the list but appears only if a pH sensor head is installed in the DataStick body.

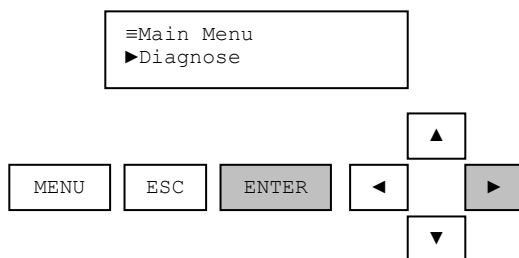

Press ENTER again to select the “Sensor Slope” menu.

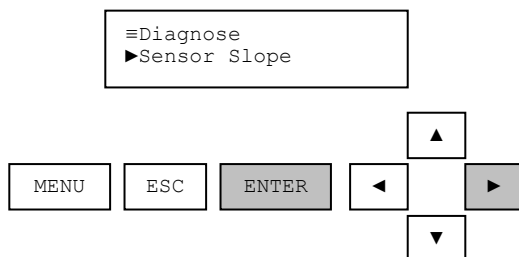


View the pH DataStick’s sensor slope.

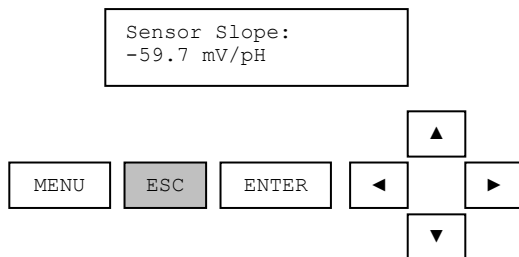

Exit the screen by pressing ENTER or ESC.

If the DataStick with which the AV38 is communicating does not support this feature, the AV38 will indicate that the information is not available.

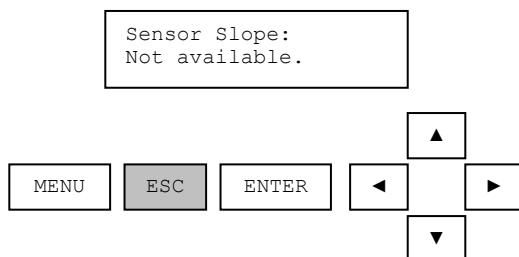


DataSticks with D3.22 or later firmware support this feature.


14. HELP MENU

The help menu displays the product name and the firmware version of the AV38.


Enter the Menu with the MENU key. Scroll the menu options with the UP/DOWN arrows. The Help menu is second to last. Press ENTER to select the HELP menu.

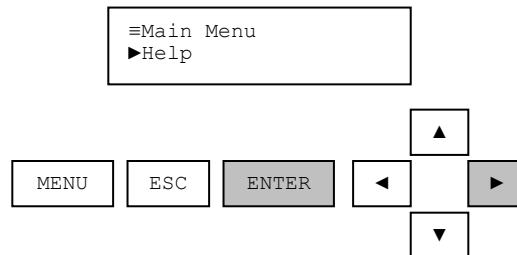

Press ENTER again to select the "About" menu.

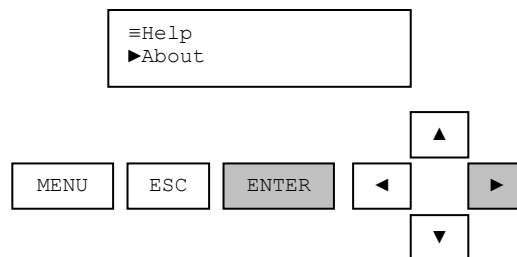


View the AV38 firmware version number.

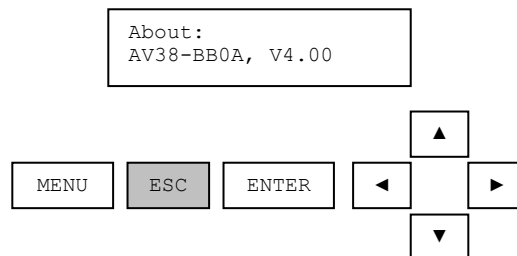

15. RESET AV38

Resetting the AV38 will bring all sensor configurations, analog outputs, PID and relay settings back to default conditions. Communications, display contrast, sensor calibration, and analog output calibration are NOT reset.

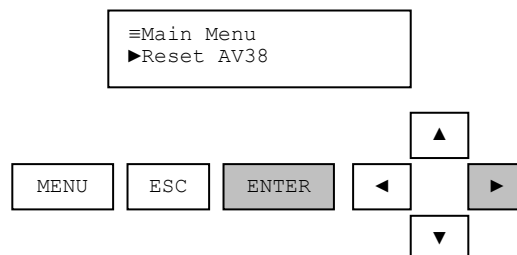

16. LIMITED WARRANTY

AV38 WARRANTY/REPLACEMENT PLAN

Thermo Fisher Scientific warrants its AV38 Local Display against material and workmanship defect for a period of one year from the date of shipment.

In the event that a defect is discovered during the warranty period, Thermo Fisher Scientific agrees, at its option, to repair or replace the defective product. Any product repaired or replaced under this warranty will be warranted only for the remainder of the original product warranty period.

This warranty does not apply to consumable products associated with this product including, but not limited to, chemical reagents and salt bridges.

Products may not be returned without authorization from Thermo Fisher Scientific. To obtain authorization, please call Thermo Fisher Scientific for a return material authorization number.

Limitations:

This warranty does not cover:

1. Damage caused by misuse, neglect (lack of appropriate maintenance), alteration, accident or improper application or installation.
2. Damage caused by any repair or attempted repair not authorized by Thermo Fisher Scientific.
3. Any product not used in accordance with the instructions furnished by Thermo Fisher Scientific.
4. Damage caused by acts of God, natural disaster, acts of war (declared or undeclared), acts of terrorism, work actions, or acts of any governmental jurisdiction.
5. Freight charges to return merchandise to Thermo Fisher Scientific.
6. Travel fees associated with on-site warranty repair.

This warranty is the sole expressed warranty made by Thermo Fisher Scientific in connection with its products. All other warranties, whether expressed or implied, including without limitation, the warranties of merchantability and fitness for a particular purpose, are expressly disclaimed.

The liability of Thermo Fisher Scientific shall be limited to the cost of the item giving rise to the claim. In no event shall Thermo Fisher Scientific be liable for incidental or consequential damages.

This warranty is the sole and complete warranty for Thermo Fisher Scientific. No person is authorized to make any warranties or representations on behalf of Thermo Fisher Scientific.

Thermo Fisher Scientific reserves the right to change or modify this warranty at any time.

17. TERMS AND CONDITIONS

Terms and Conditions of Sale

The following terms and conditions will be presumed acceptable unless changes are made in writing and accepted by both parties in a reasonable amount of time.

Any standard or boilerplate terms and conditions supplied with a written purchase order will not be applicable unless accepted in writing by both parties.

Quotations: All quotations shall be in writing. Written quotations shall be valid for 30 days from the date issued. Verbal quotations or price lists are not valid.

Pricing: All pricing is in US Dollars. Thermo Fisher Scientific reserves the right to change pricing without notice.

Terms: Payment terms are net 30 days from the date of invoice with approved credit. Thermo Fisher Scientific reserves the right to deny credit or revoke previously extended credit. Past due accounts are subject to interest charges. Other acceptable payment terms are cash, certified check, money order, credit card or letter of credit confirmed by any United States of America bank. Other payment terms are not valid unless accepted in writing.

Sales taxes shall be included on the invoice unless a valid tax exemption certificate is supplied.

Return Material Authorization: Contact Thermo Fisher Scientific Customer Service for a Return Material Authorization (RMA) number. Items returned without an RMA number will be rejected.

All returned merchandise must be in unused, resalable condition, and must not be contaminated with hazardous materials.

Cancelled orders must be returned within 30 days of the date on the invoice and shall be subject to expenses incurred that may include, but are not limited to, inspection and restocking fees. Items returned within 60 days shall be subject to a restocking charge that is equal to 15% of the purchase price. Items returned after more than 60 days shall be subject to a restocking charge equal to 25% of the purchase price. Thermo Fisher Scientific reserves the right to reject any return that is not under warranty after 60 days. Non-stock items are normally not returnable.

Transportation: Orders are shipped FOB Thermo Fisher Scientific, or factory, by the most efficient means available. Appropriate charges, such as freight and insurance will be added to invoices. All shipments will be insured. Goods damaged in shipment must be reported by the recipient to the freight carrier for claims.

Thermo Fisher Scientific

Environmental Instruments

Process Water Instruments



North America

166 Cummings Center
Beverly, MA 01915 USA
Toll Free: 1-800-225-1480
Tel: 1-978-232-6000
Dom. Fax: 1-978-232-6015
Int'l Fax: 978-232-6031

Europe

P.O. Box 254, 3860 AG Nijkerk
Wallerstraat 125K, 3862 BN Nijkerk,
Netherlands
Tel: (31) 033-2463887
Fax: (31) 033-2460832

Asia Pacific

Blk 55, Ayer Rajah Crescent
#04-16/24, Singapore 139949
Tel: 65-6778-6876
Fax: 65-6773-0836

www.thermo.com/processwater

© 2009 Thermo Fisher Scientific Inc. All rights reserved.

258479-002 Rev. A 01-09