DigitalFlow™ GS868

Panametrics Steam Ultrasonic Mass Flowmeter

Programming Manual (2-Channel)





DigitalFlow™ GS868

Panametrics Steam Ultrasonic Mass Flowmeter

Programming Manual (2-Channel)

910-190P2 Rev. E February 2015



www.ge-mcs.com

[no content intended for this page]

Information Paragraphs

Note: These paragraphs provide information that provides a deeper understanding of the situation, but is not essential to the proper completion of the instructions.

IMPORTANT: These paragraphs provide information emphasizing instructions which are essential to proper setup of the equipment. Failure to follow these instructions carefully may cause unreliable performance.



WARNING! Indicates a potentially hazardous situation which can result in serious personal injury or death, if it is not avoided.



CAUTION! Indicates a potentially hazardous situation which can result in minor or moderate injury to personnel or damage to the equipment, if it is not avoided.



HIGH VOLTAGE! This symbol indicates the presence of high voltage. It calls your attention to situations or operations that could be dangerous to you and other persons operating the equipment. Read these messages and follow the instructions carefully.

Safety Issues



WARNING! It is the responsibility of the user to make sure all local, county, state and national codes, regulations, rules and laws related to safety and safe operating conditions are met for each installation.

Auxiliary Equipment

Local Safety Standards

The user must make sure that he operates all auxiliary equipment in accordance with local codes, standards, regulations, or laws applicable to safety.

Working Area



WARNING! Auxiliary equipment may have both manual and automatic modes of operation. As equipment can move suddenly and without warning, do not enter the work cell of this equipment during automatic operation, and do not enter the work envelope of this equipment during manual operation. If you do, serious injury can result.



WARNING! Make sure that power to the auxiliary equipment is turned OFF and locked out before you perform maintenance procedures on the equipment.

Oualification of Personnel

Make sure that all personnel have manufacturer-approved training applicable to the auxiliary equipment.

Personal Safety Equipment

Make sure that operators and maintenance personnel have all safety equipment applicable to the auxiliary equipment. Examples include safety glasses, protective headgear, safety shoes, etc.

Unauthorized Operation

Make sure that unauthorized personnel cannot gain access to the operation of the equipment.

Environmental Compliance

Waste Electrical and Electronic Equipment (WEEE) Directive

GE Measurement & Control is an active participant in Europe's *Waste Electrical and Electronic Equipment* (WEEE) take-back initiative, directive 2012/19/EU.



The equipment that you bought has required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.

In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems. Those systems will reuse or recycle most of the materials of your end life equipment in a sound way.

The crossed-out wheeled bin symbol invites you to use those systems.

If you need more information on the collection, reuse and recycling systems, please contact your local or regional waste administration.

Visit http://www.ge-mcs.com/en/about-us/environmental-health-and-safety/weee.html for take-back instructions and more information about this initiative.

Chapter 1. Programming Site Data

1.1	Introduction	1
1.2	Using the Keypad	2
1.3	Obtaining On-line Help	6
1.4	Using the Console Control Keys	7
	1.4.1 Audio Alarm Volume	7
	1.4.2 Stopwatch Totalizer	
	1.4.3 Display Brightness.	
	1.4.4 Display Contrast	
1.5	The User Program	
1.6	Entering Programming Mode	
1.7	Entering Channel Data	
	1.7.1 Activating a Channel	
	1.7.2 Entering Channel System Data	
	1.7.3 Entering Pipe Data	
	1.7.4 Setting Up Inputs/Outputs	15
	1.7.5 Entering Setup Data	
	1.7.6 Setting Advanced Parameters	
1.8	Entering Global System Data	
	1.8.1 Setting the Clock	
	1.8.2 Entering Global System Data	
	1.8.3 Setting Up the Inputs and Outputs	
	1.8.4 Setting Up Serial Communications	
	1.8.5 MODBUS Register Map	
	1.8.6 Activating Security	
	1.8.7 Saving Site Data	
	1.8.8 Recalling a Site	
Cha	pter 2. Displaying Data	
2.1	Introduction	
	The BIG Format	
2.3	The DUAL Format	
2.4	The GRAPH Format	
	2.4.1 Setting Up the GRAPH Format.	
	2.4.2 Using the GRAPH Format	
2.5	The LOG Format	
	2.5.1 Entering the LOG Submenu	
	2.5.2 Numeric Format	
	2.5.3 Graphical Format	
2.6	Displaying the Transducer Signal	
2.7	Setting the LCD Backlight	
2.8	Activating Sleep Mode	57

Chapter 3. Logging Data

3.1	Introduction	59
3.2	Creating a Standard Log	60
	3.2.1 Log Type	61
	3.2.2 STARTTIME Prompt	61
	3.2.3 START DATE Prompt	62
	3.2.4 END TIME Prompt	62
	3.2.5 END DATE Prompt	62
	3.2.6 DURATION Prompt	63
	3.2.7 LOG TIME Prompt	63
	3.2.8 TIME INCREMENT Prompt	63
3.3	Checking the Memory	64
3.4	Stopping a Log	65
3.5	Creating an ERROR Log	66
	3.5.1 Log Type	67
	3.5.2 STARTTIME Prompt	67
	3.5.3 START DATE Prompt	68
Cha	apter 4. Printing Data	
4.1	Introduction	69
4.2	Print Live Data	70
	4.2.1 Numeric Format	70
	4.2.2 Graphical Format	72
4.3	Printing Logs	73
	4.3.1 Numeric Format	73
	4.3.2 Graphical Format	74
4.4	Printing a Site File	75
4.5	Stopping Printing	76
4.6	Setting Up a Printer	76
	4.6.1 Printing Signal Array Data	77
4.7	Printing RTD Data	78
Cha	apter 5. Clearing Data	
5.1	Introduction	79
	5.1.1 Resetting Totals	79
5.2	Deleting Site Files	80
5.3	Deleting Log Files	81

Cha	apter 6. Serial Communications	
6.1	Introduction	83
6.2	Wiring the RS232 Interface	83
6.3	Checking the GS868 Baud Rate	84
6.4	Setting Up the Terminal Software	85
	6.4.1 Windows 3.X Systems	85
	6.4.2 Windows 9X/NT Systems	86
6.5	Optional RS485 Serial Interface	
	6.5.1 Interface Converter Mounting	
	6.5.2 Point-To-Point Wiring	
	6.5.3 Multi-Point Wiring	
6.6	Setting Up an Ethernet Connection	
6.7	Setting Up a MODBUS/TCP Connection	92
App	pendix A. Menu Maps	
App	pendix B. Data Records	
B.1	Option Cards Installed	103
B.2	Initial Setup Data	104
Арр	pendix C. Programming with PanaView	
C.1	Introduction	107
C.2	Wiring the RS232 Interface	107
C.3	Setting Up the Communications Port	108
	C.3.1 Setting up Ethernet Communications	
C.4	3	
C.5	3	
	C.5.1 Setting the Meter Clock	
	C.5.2 Reading Transducer Signals	
	C.5.3 Plotting Transducer Signals	
	C.5.4 Saving Transducer Signals	
	C.5.5 Clearing Totalizers	
<i>C C</i>	C.5.6 Handling Site Files.	
C.6		121
• •	pendix D. Foundation Fieldbus Communications	
D.1	'	
D.2	Configuration Utility Setup	
D.3	Š	
D.4	š	
D.5	š	
D.6	Function Block Application	13(

Appendix E. Foundation Fieldbus Tables

Chapter 1. Programming Site Data

1.1 Introduction

The 2-Channel Model GS868 flowmeter cannot provide accurate flow rate measurements for either channel until the instrument has been properly installed, the channel has been activated, and the basic system and pipe parameters have been programmed into the meter. See the *Startup Guide* for detailed instructions on performing these tasks. After completing the installation, proceed with this chapter to program the Model GS868's advanced features.

Four submenus within the *User Program* provide access to the various programmable features of the Model GS868. Step-by-step programming instructions for each submenu are presented in this chapter. Refer to the appropriate section for a discussion of the following *User Program* submenus:

- CH1/CH2 use this submenu to activate a channel and to enter the basic setup parameters for that channel.
- GLOBL use this submenu to enter global meter parameters (i.e., clock, system, input/output, communications and security), which apply to both channels.
- SAVE use this submenu to store both channel and global data in the meter's memory, as a site file.
- RECLL use this submenu to recall and activate a stored site file.

Note: It is not required that both channels of a 2-Channel Model GS868 be installed. The second channel connector may simply be left vacant for future expansion.

As an aid in following the programming instructions, a complete set of menu maps for the *User Program* is included in Appendix A, *Menu Maps*. The specific figure numbers will be referenced throughout this chapter, as required.

Note: In the menu map drawings, plain text represents prompt area messages and boxed text represents option bar choices. Fx represents a function key to select an option bar choice.

1.2 Using the Keypad

The Model GS868 keypad contains 39 keys, which are labeled with their primary (unshifted) functions. In addition, pressing the red [SHIFT] key will access the secondary functions assigned to most of the keys.

The complete keypad is illustrated in Figure 1 below and a detailed description of both the unshifted and shifted functions for each of the 39 keys is listed in Table 1 on page 3.

Note: *Only the* [SHIFT] *key and the eight* [Fx] *keys have no shifted function.*

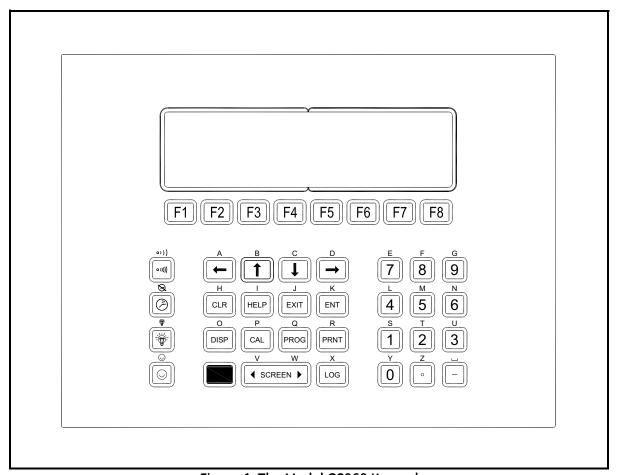


Figure 1: The Model GS868 Keypad

Note: Although the keypad is essentially the same, the front panel layout of meters supplied in one of the optional enclosures is different. See Appendix C, Optional Enclosures, of the Startup Guide for a picture of the applicable front panel.

Table 1: Model GS868 Key Functions

Key	Unshifted Function	Shifted Function
F1	Software Function Keys - press to select the functions displayed directly above them in the option bar. These keys apply only to the left pane of the	None
F2	display screen.	
F3		
F4		
F5	Software Function Keys - press to select the functions displayed directly above them in the option bar. These	None
F6	keys apply only to the right pane of the display screen.	
F7		
F8		
	Shift Key - use this red key to access the shifted function of the other keys. One press shifts the next keystroke only, while two presses locks the keypad in shifted mode. A third press releases the shift function.	None
←	Arrow Keys - in measurement mode, use to scroll through function choices on the option bar. In programming	Use to enter the letters A, B, C and D, respectively.
1	mode, use to scroll through menu choices. The [←] key also acts as a backspace key in programming mode.	
1		
→		
PROG	Program Key - press to enter the <i>User Program</i> . See page 8 for details.	Use to enter the letter Q.

Table 1: Model GS868 Key Functions (cont.)

Key	Unshifted Function	Shifted Function
DISP	Display Key - use to display data in a variety of numeric and graphic formatting options. See Chapter 2 for details.	Use to enter the letter O.
LOG	Log Key - use to set up logs. See Chapter 3 for details.	Use to enter the letter X.
PRNT	Print Key - use to print live measurements, log files and signal arrays. See Chapter 4 for details.	Use to enter the letter R.
CLR	Clear Key - use to reset totals and to delete site and log files from the Model GS868 memory. See Chapter 5 for details.	Use to enter the letter H.
CAL	Calibration Key - use to calibrate the analog inputs and outputs and to test the alarm relays and the totalizer/ frequency outputs. See Chapter 1, <i>Calibration</i> , in the <i>Service Manual</i> for details.	Use to enter the letter P.
EXIT	Exit Key - use to move up one level in the user program or to exit the user program.	Use to enter the letter J.
ENT	Enter Key - use to confirm the most recent input information.	Use to enter the letter K.
HELP	Help Key - use to access the Model GS868's context-sensitive on-line help system. See the next section for details.	Use to enter the letter I.
	Screen Key - press the left side to select the left display pane or press the right side to select the right display pane.	Press the left side to enter the letter V or press the right side to enter the letter W.
	Decimal Point Key - press to enter a decimal point during numeric entry.	Use to enter the letter Z.
	Minus Key - use to enter a minus sign or a dash.	Use to enter a space character.
	Zero Key - use to enter the number 0.	Use to enter the letter Y.
	One Key - use to enter the number 1.	Use to enter the letter S.

Table 1: Model GS868 Key Functions (cont.)

Key	Unshifted Function	Shifted Function	
2	Two Key - use to enter the number 2.	er 2. Use to enter the letter T.	
3	Three Key - use to enter the number 3.	Use to enter the letter U.	
4	Four Key - use to enter the number 4.	Use to enter the letter L.	
5	Five Key - use to enter the number 5.	Use to enter the letter M.	
6	Six Key - use to enter the number 6.	Use to enter the letter N.	
7	Seven Key - use to enter the number 7.	Use to enter the letter E.	
8	Eight Key - use to enter the number 8.	Use to enter the letter F.	
9	Nine Key - use to enter the number 9.	Use to enter the letter G.	
(0))))	Audio Level Key - press to increase the audio alarm volume.	Press to decrease the audio alarm volume.	
	Stopwatch Timer Key - press to turn the stopwatch timer on.	Press to turn the stopwatch timer off.	
	Backlight Key - press to turn the display backlight on or to increase its brightness.	Press to turn the display backlight off or to decrease its brightness.	
	Contrast Key - press to increase the contrast of the display screen.	Press to decrease the contrast of the display screen.	

1.3 Obtaining On-line Help

A context-sensitive, on-line help system is programmed into every Model GS868 flowmeter. On-line help, which displays additional information related to the current task, may be accessed at any time by pressing the [HELP] key on the keypad. The help information will be shown on the currently selected pane of the display screen, as shown in Figure 2 below.

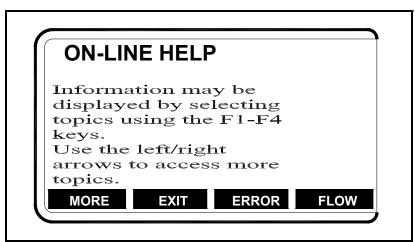


Figure 2: Typical On-Line Help Screen

After entering the on-line help system, the following functions are available on the option bar of the selected display pane:

- MORE: Press [F1] (or [F5]) to access this function, and the next screen of text is displayed in the prompt area.
- EXIT: Press [F2] (or [F6]) to access this function, and the Model GS868 returns to measurement mode.
- ERROR: Press [F3] (or [F7]) to access this function, and the various Model GS868 error codes are displayed. Use the [F1]-[F4] (or [F5]-[F8]) function keys, in conjunction with the [←] and [→] keys, to obtain additional information on the desired error code or to exit the help system.

Note: See the Service Manual for a complete listing of all error codes and messages

• FLOW: Press [F4] (or [F8]) to access this function, and the various flow measurement parameters are displayed. Use the [F1]-[F4] (or [F5]-[F8]) function keys, in conjunction with the [←] and [→] keys, to obtain additional information on the desired measurement parameter or to exit the help system.

1.4 Using the Console Control Keys

The Model GS868 has four console control keys located on the left side of the keypad. Use these keys, which are described and pictured in Table 1 on page 3, as follows:

1.4.1 Audio Alarm Volume

Use the top console control key to adjust the audio alarm volume.



Discrete presses will incrementally increase the volume of the audio alarm. Hold the key down for continuous increase. Use the key in shifted mode to decrease the volume of the audio alarm.

1.4.2 Stopwatch Totalizer

Use the second console control key for the stopwatch totalizer.



Press the key once to start the stopwatch totalizer. Press the key once, in shifted mode, to stop the stopwatch totalizer.

Note: Instructions on properly setting up the stopwatch totalizer are given later in this chapter. Also, the Service Manual provides information on the error response of the stopwatch totalizer.

1.4.3 Display Brightness

Use the third console control key to adjust the display backlight.



Discrete presses of this key will increase the backlight brightness through settings of Off, Mid and Full. Discrete presses of this key in shifted mode, will decrease the backlight brightness through settings of Full, Mid and Off.

Note: The display backlight has an automatic time-off feature. See page 57 for setup instructions.

1.4.4 Display Contrast

Use the bottom console key to adjust the display contrast.



Discrete presses will incrementally increase the display contrast. Hold the key down for continuous increase. Use the same key, in shifted mode, to decrease display contrast.

1.5 The User Program

Use the keypad, as described in Chapter 3, *Operation*, of the *Startup Guide* to navigate through the *User Program*. The menu map may be followed in sequence, or the $[\leftarrow]$ and $[\rightarrow]$ keys may be used to scroll through the prompt screens. The $[\leftarrow]$ key may be used to delete the last alphanumeric character that was entered from the keypad.

The following discussion assumes that the left screen pane is active. If the right screen pane is active, only the function key designations change. That is, replace [F1]-[F4] with [F5]-[F8]. Also, Channel 1 is used in all examples, but the instructions apply equally to Channel 2.

Note: Be sure to record all the programming data entered in this chapter in Appendix B, Data Records.

Programming of the ACTIV, SYSTM (CH1 and GLOBL) and PIPE submenus is necessary for operation of the Model GS868. Failure to accurately enter all of the required information will result in unreliable flow rate data. Therefore, be sure to complete at least the sections of this chapter pertaining to those three submenus.

Note: Because it is so essential, instructions for programming the ACTIV, SYSTM (CH1 and GLOBL) and PIPE submenus are also included in the Startup Guide. If that programming has already been completed, skip the corresponding sections of this chapter.

Except for the three submenus noted above, it is not necessary to program the Model GS868 flowmeter in any particular order. Therefore, the sections of this chapter need not be completed in sequence. Proceed immediately to any section of interest.

1.6 Entering Programming Mode

To access the *User Program*, press the [PROG] key on the keypad. The standard measurement mode screen will be replaced by the following initial programming mode screen:




Press the $[\leftarrow]$ and $[\rightarrow]$ keys and one of the function keys [F1]-[F4] to select the desired submenu. From this screen, press [EXIT] to return to measurement mode.

If the security feature is active, enter the password and press the [ENT] key to enter the User Program. See the SECUR submenu section on page 41 of this chapter for more information on the security feature.

1.7 Entering Channel Data

If [F1]=CH1 (or [F2]=CH2) was selected at the initial *User Program* prompt shown on page 1-8, the following screen appears:

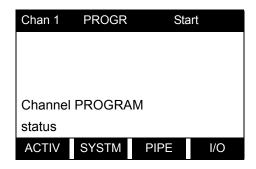

Press the $[\leftarrow]$ and $[\rightarrow]$ keys and a function key [F1]-[F4] to select the desired submenu. From this screen, press [EXIT] to return to the initial *User Program* screen shown on page 8.

Based on the selection made above, proceed to the appropriate section of this chapter for instructions.

1.7.1 Activating a Channel

The ACTIV submenu activates a channel and selects the desired measurement method. While following the programming instructions, refer to the menu map in Figure 11 on page 95.

- 1. Enter the ACTIV submenu by pressing [F1] at the Channel PROGRAM prompt.
- **2.** Press [F1] (OFF) to deactivate the channel and return to the Channel PROGRAM prompt, or press [F2] to activate the channel in BURST mode.
- **3.** Press [F1] to select *Skan* mode or [F2] to select *Skan/Measure* mode. The meter will exit the ACTIV submenu and return to the channel menu screen.

:As indicated in the above prompt, the Model GS868 flowmeter can take measurements in two different ways:

- *Skan* is a low resolution technique for locating the acoustic signal and for high velocity measurements. It is more robust in a noisy environment than the Measure technique.
- *Measure* is a more precise technique best used for low velocity measurements.

If *Skan* is selected at the next prompt, the instrument uses this technique exclusively. However, if *S/M* is selected, the meter uses *Skan* to find the acoustic signal and then tries to use the *Measure* technique for a more precise measurement.

Note: To change the Skon and Measure parameters, see the SIGNL submenu section on page 19.

Procedure Options

After completing the above steps, the meter returns to the Channel PROGRAM prompt. Continue as follows:

- To continue programming the meter, refer to the menu maps in Appendix A and navigate to the desired menu. Then, proceed to the appropriate section of this manual for instructions.
- To leave the *User Program* and retain the previous settings, press [EXIT] twice and then press [F1] = NO at the *SAVE* prompt. Any programming changes will be discarded and you will be returned to the data display.
- To leave the *User Program* and return to measurement mode, press [EXIT] twice and then press [F2] = YES at the *Save* prompt. Your programming changes will be entered into the meter's memory, and you will be returned to the data display.

Note: See the SAVE submenu section on page 43 of this chapter for more information on this function.

1.7.2 Entering Channel System Data

While following the programming instructions, refer to the menu map in Figure 11 on page 95.

IMPORTANT: Do not confuse this SYSTM submenu, which is used to enter channel-specific information, with the SYSTM submenu of the GLOBL menu, which is used to enter information applicable to both channels.

- 1. To enter the SYSTM submenu, press [F2] at the Channel PROGRAM prompt.
- **2.** Enter a *Channel Label* of up to 9 characters. Press [ENT].
- **3.** Enter a *Channel Message* of up to 21 characters. Press [ENT].
- **4.** At the *Equation* prompt, press [F1] to display the measurement data in *standard* volumetric units, or press [F2] to display the measurement data in *actual* volumetric units. The GS868 uses the appropriate gas equation to calculate the flow rate in the volumetric units indicated.
- **5.** Use the [F1]-[F4] and $[\rightarrow]$ keys to select the desired *Volumetric Units* for the flow rate display.

The abbreviations and definitions of all the available volumetric and totalizer units are shown in Table 2 on page 11. The choices shown on the option bar are determined by the selection made at the previous SYSTEM UNITS screen.

Table 2: //vallable volumetric/ rotalizer office		
English	Metric	
Actu	al Units	
ACF = Actual Cubic Feet	ACM = Actual Cubic Meters	
KACF = Thousands of ACF	KACM = Thousands of ACM	
MMACF = Millions of ACF	MMACM = Millions of ACM	
Standard Units		
SCF = Standard Cubic Feet	SCM = Standard Cubic Meters	
KSCF = Thousands of SCF	KSCM = Thousands of SCM	
MMSCF = Millions of SCF	MMSCM = Millions of SCM	

Table 2: Available Volumetric/Totalizer Units

- **6.** Use the [F1]-[F4] keys to select the *Volumetric Time* (units for the volumetric flow rate display).
- 7. Use the [F1]-[F4] keys to select the *Vol Decimal Digits* (the desired number of digits to the right of the decimal point) in the volumetric flow rate display.
- **8.** Use the [F1]-[F4] and $[\rightarrow]$ keys to select the *Totalizer Units*.

The abbreviations and definitions of all the available volumetric and totalizer units are shown in Table 2 above. The choices shown on the option bar in the prompt screen above are determined by the selection made at the previous SYSTEM UNITS prompt screen.

9. Use the [F1]-[F4] keys to select the *Total Decimal Digits* (the desired number of digits to the right of the decimal point) in the totalized flow display.

1.7.2 Entering Channel System Data (cont.)

- **10.** If *Static Density?* is set to NO in the ADVAN submenu, go to *Procedure Options* on the next page. Otherwise, proceed as follows:
 - **a.** Use the [F1]-[F4] keys to select the *Mass Flow* units, listed in Table 3 below.

Table 3: Available Mass Flow Units

English Mass Flow Units	Metric Mass Flow Units	
LB- Pounds	KG - Kilograms	
KLB - Thousands of Pounds		
MMLB - Millions of Pounds		
TONS - Tons	Tonnes - Metric Tons	

- **b.** Use the [F1]-[F4] keys to select the *Mass Flow Time* units.
- **c.** Use the [F1]-[F4] keys to select the *MDOT Decimal Digits* (the number of digits to the right of the decimal point) for displaying mass flow.
- **d.** Use the [F1]-[F4] keys to select the *Mass (Totalizer)* units, listed in Table 3 on the previous page.
- **e.** Use the [F1]-[F4] to specify the *Mass Decimal Digits* (the number of digits to the right of the decimal point) for displaying totalized mass flow.

Procedure Options

After completing the above steps, the meter returns to the Channel PROGRAM prompt. Continue as follows:

- To continue programming the meter, refer to the menu maps in Appendix A and navigate to the desired menu. Then, proceed to the appropriate section of this manual for instructions.
- To leave the *User Program* and retain the previous settings, press [EXIT] twice and then press [F1] = NO at the *SAVE* prompt. Any programming changes will be discarded and you will be returned to the data display.
- To leave the *User Program* and return to measurement mode, press [EXIT] twice and then press [F2] = YES at the *SAVE* prompt. Your programming changes will be entered into the meter's memory, and you will be returned to the data display.

Note: See the SAVE submenu section on page 43 of this chapter for more information on this function.

1.7.3 Entering Pipe Data

Enter the transducer and pipe parameters via the PIPE submenu. While following the programming instructions, refer to the menu map in Figure 11 on page 95 in Appendix A, *Menu Maps*.

1. At the *Channel Program* screen, press [F3] to program the PIPE submenu.

1.7.3a Transducer Number

2. Enter the *Transducer Number* (normally engraved on the head of the transducer). Press [ENT]. If there is no engraved number, complete the steps below. Otherwise, proceed to step 3.

IMPORTANT: Special transducers, which have no engraved number on the head, are rarely used. Examine the transducer head carefully for a number.

- **a.** Assign a number between 91 and 99 to the *Special Transducer* and press [ENT]. (The meter will only accept values from 1 to 199.)
- **b.** Use the $[\rightarrow]$ and [F1]-[F4] keys to select the *Frequency* of the special transducer. The meter can not transmit an excitation voltage at the transducer's natural frequency without this data.
- c. Enter the special transducer *Time Delay (Tw)* value supplied by the factory. Press [ENT]. (The meter will only accept values from 0 to 1000 μ sec.)

Note: Tw is the time required for the transducer signal to travel through the transducer and its cable. This time delay must be subtracted from the transit times of the upstream and downstream transducers to ensure an accurate measurement.

1.7.3b Pipe OD

3. Enter the known *Pipe OD* or circumference and use the [F1]-[F4] keys to select the appropriate units. Press [ENT]. (The meter will only accept values from 1/8 to 648 in.) The option bar choices may appear in English or Metric units.

Obtain the required information by measuring either the pipe outside diameter (OD) or circumference at the transducer installation site. The data may also be obtained from standard pipe size tables. Table 4 below lists the available English and metric OD units, as specified in the GLOBL submenu.

Table Williams ip 55 5 mile		
English	Metric	
inch = pipe OD in inches	mm = pipe OD in millimeters	
feet = pipe OD in feet	m = pipe OD in meters	
in/PI = pipe circumference in inches	mm/PI = pipe circumference in millimeters	
ft/PI = pipe circumference in feet	m/PI = pipe circumference in meters	

Table 4: Available Pipe OD Units

1.7.3c Pipe Wall

4. Use the numeric keys to enter the known thickness of the *Pipe Wall*. Press [ENT].

If the pipe wall thickness is not available, look up the value in a table of standard pipe size data or use the Model GS868's on-line *Help Menu*

1.7.3d Path Length

5. Press [F1] = inch or [F2] = feet to select the units. Then, enter the *Path Length (P)* of the ultrasonic signal. Press [ENT]. (The meter will only accept values from 1/8 to 900 in.)

Note: The factory has calculated both the transducer signal path length (P) and the transducer signal axial length (L), based on the exact transducer configuration used for the application. These values are engraved on the flowcell and/or are included in the documentation supplied with the meter.

1.7.3e Axial Length

6. Press [F1] = inch or [F2] = feet to select the units. Then, enter the *Axial Length (L)* of the ultrasonic signal and press [ENT].

Note: The factory has calculated both the transducer signal path length (P) and the transducer signal axial length (L), based on the exact transducer configuration used for the application. These values are engraved on the flowcell and/or are included in the documentation supplied with the meter.

1.7.3f Fluid Type

- 7. Press [F1] = steam or [F2] = any other gas to select the *Fluid Type*.
 - **a.** If OTHER was selected, enter the speed of sound (in feet per second) in the gas to be measured. Press [ENT]. (The meter will only accept values from 125 to 9000 ft/sec.)

1.7.3g Reynolds Correction

- **8.** The *Reynolds Correction* factor is a number based on the kinematic viscosity and flow rate of the gas. At the prompt, press [F1] to turn Reynolds Correction off, or [F2] to turn it on.
 - If you select Reynolds Correction, the GS868 asks for the *Kinematic Viscosity* of the gas (available in the brochure *Sound Speeds and Pipe Size Data*, 914-004). Use the numeric keys to enter the correct value and press [ENT].

1.7.3h Calibration Factor

9. Enter a value for the flow *Calibration Factor* and press [ENT]. The default value is 1.00. (The meter will only accept values from 0.5000 to 2.0000.)

Procedure Options

After completing the above steps, the meter returns to the Channel PROGRAM prompt. Continue as follows:

- To continue programming the meter, refer to the menu maps in Appendix A of the *Programming Manual* and navigate to the desired menu. Then, proceed to the appropriate section of the manual for instructions.
- To leave the *User Program* and retain the previous settings, press [EXIT] twice and then press [F1] = NO at the *SAVE* prompt. Any programming changes will be discarded and you will be returned to the data display.
- To leave the *User Program* and return to measurement mode, press [EXIT] twice and then press [F2] = YES at the *SAVE* prompt. Your programming changes will be entered into the meter's memory, and you will be returned to the data display.

1.7.4 Setting Up Inputs/Outputs

The following specific tasks may be performed via the I/O submenu:

- Enter a zero cutoff value to eliminate low flow reading fluctuations
- Set up fixed or live *temperature* and *pressure* inputs
- Set up fixed or live *steam quality* input for mass flow calculations

While following the programming instructions, refer to the menu map in Figure 12 on page 96 in Appendix A, *Menu Maps*. Remember to record all programmed data in Appendix B, *Data Records*.

1. To enter the I/O submenu, press [F4] at the Channel PROGRAM prompt.

1.7.4a Entering the Zero Cutoff

Near zero flow, the Model GS868's readings may fluctuate due to small offsets caused by thermal drift or similar factors. To force a zero reading when there is minimal flow, enter a zero cutoff value as described below:

2. Enter the desired *Zero Cutoff* value and press the [ENT] key. A value of 0.1 ft/s (0.03 m/s) is recommended, but values from 0–1 ft/s (0–0.3 m/s) are acceptable. The menu returns to the main I/O prompt.

1.7.4b Entering the Steam Input

- **3.** At the *Assume Saturation* prompt, press [F1] = NO to use temperature and pressure to determine the state of the steam, or press [F2] for the GS868 to assume the steam is saturated.
- **4.** At the *Steam Input Type* prompt, press [F1] to select a temperature input, or [F2] to select a pressure input.
 - If you select TEMP, go to step 5.
 - If you select PRESR, go to step 7 on the next page.

1.7.4c Entering the Temperature Input

5. At the *Temperature Input* prompt, press [F1] to enter a constant temperature value or press [Fx] to select the option card in Slot x that will supply the live temperature input.

Note: Each slot that contains an option card with an analog input assigned to TEMP or an RTD input will appear on the option bar. If the process temperature is stable, a fixed value may be used, but most applications require a live temperature input.

- **6.** Do one of the following:
 - If you selected FIXED, enter the known fixed process temperature. Press [ENT]. (The meter will only accept values from -148° to 662°F.)
 - If you selected SLOT X,
 - a. Press [F1] to select input A or press [F2] to select input B. The inputs were labeled during setup.

Note: The set up of input A is used as an example. Identical procedures would be used to set up input B.

b. Enter the *Base Temperature* (from –148° to 662°F), and press [ENT]. The ratio of this value to the actual temperature is used to calculate the standard volumetric flow.

1.7.4d Entering the Pressure Input

7. At the *Pressure Input* prompt, press [F1] to enter a constant pressure value or press [Fx] to select the option card in Slot X that will supply the live pressure input.

Note: Each slot that contains an option card with an analog input assigned to PRESR will appear on the option bar. If the process pressure is stable, a fixed value may be used, but most applications require a live pressure input.

8. Do one of the following:

- If you selected FIXED, enter the known fixed process pressure. Press [ENT]. (The meter will only accept values from 0–5000 psia.)
- If you selected SLOT X,
- a. Press [F1] to select input A or press [F2] to select input B. The inputs were labeled during setup.
- **b.** Enter the *Base Pressure* (standard) value for the process, and press the [ENT] key. (The meter will only accept values from 0–5000 psia.)
- c. Press [F2] = YES to activate the Low Pressure Switch, or press [F1] = NO to turn the switch off.
- If you selected NO, proceed to step 9.
- If you selected YES, enter the *Pressure Limit* (the setpoint for the low pressure switch) and press [ENT]. The acceptable range is 0 to 5,000 psia. If the pressure drops below the pressure limit, the GS868 will stop taking readings.

1.7.4e Entering the Quality Input Value

9. At the *Quality Input* prompt, press [F1] to enter a constant steam quality value or press [Fx] to select the option card in Slot X that will supply the live steam quality input. This value is used for mass flow calculations when the temperature and pressure inputs indicate that the steam is saturated. Unless a different value is accurately known, accept the default value.

Note: Each slot that contains an option card with an analog input that has been programmed as SPEC in the OPTN submenu appears on the option bar. Normally, a fixed value of 1.0 (100% steam) should be used for the steam quality value.

10.Do one of the following:

- If you selected FIXED, enter the known fixed steam quality. Press [ENT]. (The meter will only accept values from 0.0000 to 1.0000.)
- If you selected SLOT X,
- **a.** Press [F1] to select input A or press [F2] to select input B. The inputs were labeled during setup.

Procedure Options

After completing the above steps, the meter returns to the main I/O prompt. Continue as follows:


- To continue programming the meter, refer to the menu maps in Appendix A of the *Programming Manual* and navigate to the desired menu. Then, proceed to the appropriate section of the manual for instructions.
- To leave the *User Program* and retain the previous settings, press [EXIT] twice and then press [F1] = NO at the *SAVE* prompt. Any programming changes will be discarded and you will be returned to the data display.
- To leave the *User Program* and return to measurement mode, press [EXIT] twice and then press [F2] = YES at the *SAVE* prompt. Your programming changes will be entered into the meter's memory, and you will be returned to the data display.

1.7.5 Entering Setup Data

The signal limits and response times for the Model GS868 are specified via the SETUP submenu. While following the programming instructions, refer to the menu map in Figure 12 on page 96 in Appendix A, *Menu Maps*. The following three submenus are included in this section:

- SIGNL set the parameters related to the transducer signal
- AVRG specify the response of the meter to step changes
- INIT initialize all parameters to default values.
- ADVAN setting parameters for mass flow and multiple K-factors.

Enter the SETUP submenu by pressing $[\rightarrow]$ and [F1] at the Channel PROGRAM prompt and complete the following steps:

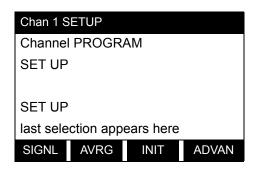

Press [F1]-[F3] to select the desired SETUP option.

Proceed to the appropriate section to program the option selection made at the above prompt. Remember to record all programmed data in Appendix B, *Data Records*.

1.7.5a Setting Transducer Signal Limits

Use this option to set the limits for the incoming signal and other parameters affecting the transducer signal. For example, the programmed signal strength low limit may be used to determine the trigger point for an alarm. Table 5 on page 22 provides a summary of signal upper and lower limits and default values.



<u>CAUTION!</u> The SIGNL default settings are suitable for most applications. Before changing any of these parameters, consult the factory.

Complete the following steps to enter the signal parameters:

1. Press [ENT] to accept the current Signal Low Limit value or enter a new value and press [ENT].

The default value for this parameter is 20 and values from -20 to 100 are acceptable. The E1: LOW SIGNAL error message appears when the signal strength falls below the programmed SIGNAL LOW LIMIT value. See the *Service Manual* for a discussion of error codes.

2. Press [ENT] to accept the current *Cor. Peak Limit* value or enter a new value and press [ENT].

The default value for this parameter is 100 and values from 0 to 500 are acceptable. The E4: SIGNAL QUALITY error message appears when the signal quality falls below the programmed COR. PEAK LIMIT value. See the *Service Manual* for a discussion of error codes.

3. Press [ENT] to accept the current *Soundspeed* +- *Limit* value or enter a new value and press [ENT].

The default value for this parameter is 20% and values from 1% to 50% are acceptable. The E2: SOUNDSPEED error message appears when the calculated fluid soundspeed differs from the fluid soundspeed entered in the SYSTEM menu by more than the programmed SOUNDSPEED +- LIMIT value. See the *Service Manual* for a discussion of error codes.

4. Press [ENT] to accept the current *Velocity Low Limit* value or enter a new value and press [ENT].

The default value for this parameter is –275.0 ft/sec (-85 m/sec) and values from –500 to 500 ft/sec (-150 to 150 m/sec) are acceptable. The E3: VELOCITY RANGE error message appears when the calculated fluid velocity is less than the programmed VELOCITY LOW LIMIT value. See the *Service Manual* for a discussion of error codes.

5. Press [ENT] to accept the current *Velocity High Limit* value or enter a new value and press [ENT].

The default value for this parameter is 275.0 ft/sec (85 m/sec) and values from –500 to 500 ft/sec (–150 to 150 m/sec) are acceptable. The E3: VELOCITY RANGE error message appears when the calculated fluid velocity exceeds the programmed VELOCITY HIGH LIMIT value. See the *Service Manual* for a discussion of error codes.

6. Press [ENT] to accept the current *Acceleration* value or enter a new value and press [ENT].

The default value for this parameter is 100.0 ft/sec² (30.48 m/sec²) and values from 0 to 250 ft/sec² (0 to 76 m/sec²) are acceptable. The E6: CYCLE SKIP error message appears when the calculated fluid velocity changes by more than the programmed ACCELERATION LIMIT value from one reading to the next. See the *Service Manual* for a discussion of error codes.

7. Press [ENT] to accept the current Amp. Discrim Low value or enter a new value and press [ENT].

1.7.5a Setting Transducer Signal Limits (cont.)

IMPORTANT: Consult the factory before performing this step.

The amplitude discriminator measures the size of the transducer signal received by the Model GS868. The default value for this parameter is 14 and values from 0 to 100 are acceptable. The E5: AMPLITUDE error message appears when the amplitude discriminator falls below the programmed AMP. DISCRIM LOW value. See the *Service Manual* for a discussion of error codes.

8. Press [ENT] to accept the current *Amp. Discrim High* value or enter a new value and press [ENT].

IMPORTANT: Consult the factory before performing this step.

The amplitude discriminator measures the size of the transducer signal received by the Model GS868. The default value for this parameter is 34 and values from 0 to 100 are acceptable. The E5: AMPLITUDE error message appears when the amplitude discriminator exceeds the programmed AMP. DISCRIM HIGH value. See the *Service Manual* for a discussion of error codes.

9. Press [ENT] to accept the current *Delta T Offset* value or enter a new value and press [ENT].

IMPORTANT: Consult the factory before performing this step.

An offset between the upstream and downstream transit times is specified at this prompt. The default value for this parameter is 0 μ sec and values from -1000 to 1000 μ sec are acceptable.

10. Press [ENT] to accept the current *Skan T Offset* value or enter a new value and press [ENT].

At this prompt, specify a time measurement offset that compensates for any shift resulting from cross-correlation. The default value for this parameter is $58 \mu sec$ and values from $-500 to 500 \mu sec$ are acceptable.

Note: If you enter a value of 0 for this command, you enable a special mode of operation, ACTIVE SKAN T-OFFSET, that dynamically calculates the offset.

11. Press [ENT] to accept the current % of Peak value or enter a new value and press [ENT].

The percentage of peak used to calculate the transit times and Delta T is specified at this prompt. The default value for this parameter is 50% and values from 1 to 100% are acceptable.

12. Use the [? and [F1]-[F4] keys to select one of the preset values for the XMIT Sample Size from the option bar.

IMPORTANT: Consult the factory before performing this step.

Both the upstream and downstream transducers transmit ultrasonic pulses in bursts, which consist of a series of transmit pulses. XMIT SAMPLE SIZE determines how many bursts are sent in one direction before sending in the other direction. The default value for this parameter is 8 and values of 2, 4, 8, 16 and 32 are acceptable.

13. Press [ENT] to accept the current $M>S_Switch$ value or enter a new value and press [ENT].

IMPORTANT: Consult the factory before performing this step.

If the burst mode is set to Skan/Measure (S/M), the meter switches from Skan to Measure Mode when Delta T is less than the M>S_Switch value. **DO NOT** change this value unless advised to do so by the factory. The default value for this parameter is 50 µsec and values from 0 to 250 µsec are acceptable.

1.7.5a Setting Transducer Signal Limits (cont.)

14. Press [ENT] to accept the current # shifts value or enter a new value and press [ENT].

The number of shifts corresponds to the actual number of transmits per cycle (number of signals added together in one direction to produce an averaged signal for one interrogation of the fluid) and need only be changed if the environment is very noisy or the acoustic signal is weak. The default value for this parameter is 3 and values from 0 to 10 are acceptable.

15. Press [ENT] to accept the current *A Divisor* value or enter a new value and press [ENT].

A Divisor is used in the calculation of the Measure Mode integrated threshold level and is not normally changed. The default value for this parameter is 2.5 and values from 0.1 to 10 are acceptable.

16. Press [ENT] to accept the current # Transmit Pulses value or enter a new value and press [ENT].

IMPORTANT: Consult the factory before performing this step.

Transmit Pulses specifies the number of pulses in a burst. The default value for this parameter is 4 and values from 1 to 16 are acceptable. For difficult conditions (i.e., long paths, high velocity or high temperature), settings as high as 16 may be necessary.

17. Press [ENT] to accept the current T WINDOW (Cycles) value or enter a new value and press [ENT].

IMPORTANT: Consult the factory before performing this step.

Normally, the Model GS868 calculates the size of the transmit window based on pipe size and fluid sound speed. However, for special diagnostic purposes, it may sometimes be necessary to reset the window size. The default value for this parameter is 0 and values from 0 to 1000 are acceptable.

18. Press [ENT] to accept the current *R WINDOW (cycles)* value or enter a new value and press [ENT].

IMPORTANT: Consult the factory before performing this step.

Normally, the Model GS868 calculates the size of the receive window based on pipe size and fluid sound speed. However, for special diagnostic purposes, it may sometimes be necessary to reset the window size. The default value for this parameter is 10 and values from 10 to 128 are acceptable.

After completing these steps, the program returns to the SETUP window.

1.7.5 Setting Signal Limits (cont.)

Table 5: Default Values and Limits for SETUP Parameters

Parameter	Default Value	Low Limit	High Limit
Signal Low Limit	20	-20	100
Cor. Peak Limit	100	0	500
Soundspeed -+ Limit	20%	1%	50%
Velocity Low Limit	-275.0 ft/sec (-85 m/sec)	-500 ft/sec (-150 m/sec)	+500 ft/sec (+150 m/sec)
Velocity High Limit	275.0 ft/sec (85 m/sec)	-500 ft/sec (-150 m/sec)	+500 ft/sec (+150 m/sec)
Acceleration Limit	100 ft/sec ²	0	250 ft/sec ²
	(30.48 m/sec^2)		(76 m/sec ²)
Amp. Discrim Low	14	0	100
Amp. Discrim High	34	0	100
Delta T Offset	0	-1,000 μsec	1,000 µsec
Skan T Offset	58 μsec	-500 μsec	500 μsec
% of Peak	50%	1%	100%
XMIT Sample Size	8	2	32
M>S Switch	50 μsec	0 μsec	250 μsec
# shifts	3	0	10
A Divisor	23	0.1	10
# Transmit Pulses	4	1	16
T Window	0	0	1,000
R Window	10	10	128

1.7.5b Setting Response Time

Use this option to specify the number of readings that occur before the meter will respond to a step change in flow rate. In general, the smaller the number of readings, the less steady the display will appear.

• Use the [→] and [F1]-[F4] keys to select the desired option. The available response time options are 1, 2, 5, 10, 30, 60 and STATS. For best results, select STATS (statistics), as this increases the response time under steady flow conditions while still allowing a rapid response to changes in flow rate.

The GS868 program returns to the SETUP window. Remember to record all programmed data in Appendix B, *Data Records*.

1.7.5c Initializing the System

Use this option to initialize (reset) all of the parameters within the SETUP menu to their default values.

• Press [F1] = NO to keep the current values or press [F2] = YES to reset all values to their default settings.

1.7.6 Setting Advanced Parameters

In the ADVAN option, you can enter parameters for two specialized operations: static density and multiple K factors. While following the programming instructions, refer to Figure 12 on page 96. To enter the ADVAN submenu, press [F4] at the SETUP window.

1.7.6a Static Density

Use this option to specify basic parameters for mass flow measurement.

- 1. To enter the MASS submenu, press [F1] at the ADVAN window.
- **2.** At the *Static Density?* prompt, press [F1] = NO or [F2] = YES. If you press NO, the GS868 returns to the ADVAN window.
- 3. Enter the *Fluid Density* of the gas to be measured and press [ENT]. (The meter will only accept values from $0.00001-100 \text{ lb/ft}^3$.)

The GS868 program returns to the ADVAN window.

1.7.6b Entering Multiple K Factors

In the MULTK option, you can enter velocity or Reynolds Correction values into a K-Factor table. You can thus "curve fit" velocity or Reynolds calibration multiple data points (from several different data sources or flow variables) to the flow rate reported by the GS868.

- **1.** Press [F2] to enter the *Multiple K Factors* option.
- **2.** Press [F1] = NO to disable or [F2] = YES to enable *Multiple K-factors*.
 - If you press NO, the GS868 returns to the ADVAN window.
- **3.** If you press YES, the program asks for the *Custom type* of data. Press [F1] to select velocity data, or [F2] to select Reynolds data.
 - **a.** If you select a Reynolds table, the meter asks for the *Kinematic Viscosity*. Enter the appropriate value, and press [ENT].
- **4.** Press [F1] = NO to retain the current K-factor table and return to the ADVAN window, or press [F2] = YES to *Edit The K-factor Table*.

Note: If velocity vs. K-factor data was not provided with the Model GS868, the K-factor table can not be edited.

a. Enter the *Number of K-factors* to be entered into the table. Press [ENT]. (The meter will only accept values from 2 to 20.)

IMPORTANT: When editing the K-factor table, the velocities must be entered in increasing order.

1.7.6b Entering Multiple K Factors (cont.)

- **b.** Enter the *Velocity* (or *Reynolds*) *Value* for K-factor number "x". Press [ENT]. (The meter will only accept values from –30,000 to +30,000 ft/sec.)
- **c.** Enter the *K-factor* corresponding to velocity or Reynolds number "x". Press [ENT].
- **d.** Repeat steps b and c until all of the data points have been entered.

Procedure Options

After completing the above steps, the meter returns to the SETUP prompt. Continue as follows:

- To continue programming the meter, refer to the menu maps in Appendix A and navigate to the desired menu. Then, proceed to the appropriate section of this manual for instructions.
- To leave the *User Program* and retain the previous settings, press [EXIT] twice and then press [F1] = NO at the *SAVE* prompt. Any programming changes will be discarded and you will be returned to the data display.
- To leave the *User Program* and return to measurement mode, press [EXIT] twice and then press [F2] = YES at the *SAVE* prompt. Your programming changes will be entered into the meter's memory, and you will be returned to the data display.

1.8 Entering Global System Data


The GLOBL menu is used to enter information that is not specific to one of the individual channels. Information programmed via this menu is used to compute parameters such as the sum, difference or average of the channel 1 and channel 2 signals. In addition, several general system parameters may be entered in the GLOBL menu.

IMPORTANT: When calculating the SUM, DIF or AVE readouts, data from the GLOBL-SYSTM submenu is used. Any conflicting data entered in the CH1-SYSTM or CH2-SYSTM submenus is overridden.

The following submenus are included in the GLOBL menu:

- CLOCK used to enter the current date and time
- SYSTM used to specify the units of measure used in calculations
- I/O used to set up error handling and to configure analog inputs and outputs
- COMM used to set up the serial communications port
- SECUR used to specify a programming access password.

After selecting [F3]=GLOBL at the initial programming screen, the following screen appears:

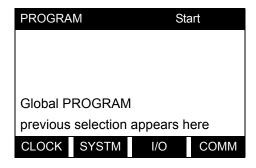

Press the $[\leftarrow]$ and $[\rightarrow]$ keys and a function key [F1]-[F4] to select the desired submenu. From this screen, press [EXIT] to return to the initial *User Program* screen shown on page 8.

Based on the selection made above, proceed to the appropriate section of this chapter for instructions. Refer to Figure 13 on page 97 and Figure 14 on page 98, and remember to record all programming data in Appendix B, *Data Records*.

1.8.1 Setting the Clock

Use the CLOCK submenu to enter the current date and time. While following the programming instructions, refer to the menu map in Figure 13 on page 97.

1. To enter the CLOCK submenu, press [F1] at the Global PROGRAM prompt.

1.8.1a Setting the Date

- **2.** The first prompt displays the programmed *Date*.
 - If the displayed date is correct, press [F1] = OK and proceed to step 2.
 - If the displayed date is incorrect, press [F2] = EDIT to change the date, and complete the steps below.
 - **a.** Enter the current year and press [ENT]. The allowable range is 0 to 99.
 - **b.** Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the current month.
 - c. Enter the current day and press [ENT]. The allowable range is 1 to the number of days in the current month.

1.8.1b Setting the Time

- **3.** The next prompt displays the programmed *Time*.
 - If the displayed time is correct, press [F1] = OK to return to the GLOBL prompt.
 - If the displayed time is incorrect, press [F2] = EDIT to change the time, and complete the steps below.
 - **a.** Press [F1] = AM or [F2] = PM. Then enter the current *Hour* and press [ENT]. The allowable range is 1 to 12.

Note: A time of 12 PM represents Noon and a time of 12 AM represents Midnight.

- **b.** Enter the current *Minutes* and press [ENT]. The allowable range is 0 to 59.
- **4.** Enter the current *Seconds* and press [ENT]. The allowable range is 0 to 59.

Procedure Options

After completing the above steps, the meter returns to the Global PROGRAM prompt. Continue as follows:

- To continue programming the meter, refer to the menu maps in Appendix A and navigate to the desired menu. Then, proceed to the appropriate section of this manual for instructions.
- To leave the *User Program* and retain the previous settings, press [EXIT] twice and then press [F1] = NO at the *SAVE* prompt. Any programming changes will be discarded and you will be returned to the data display.
- To leave the *User Program* and return to measurement mode, press [EXIT] twice and then press [F2] = YES at the *SAVE* prompt. Your programming changes will be entered into the meter's memory, and you will be returned to the data display.

1.8.2 Entering Global System Data

While following the programming instructions, refer to the menu map in Figure 13 on page 97.

- 1. To enter the SYSTEM submenu, press [F2] at the Global PROGRAM prompt.
- **2.** To select the *System Units*, press [F1] to display parameters and measurements in English units, or press [F2] to display parameters and measurements in Metric units.
- **3.** Use the [F1]-[F4] keys to select the type of *Pressure Units* desired.

The abbreviations and definitions of all the available pressure units are shown in Table 6 below. The choices shown on the option bar are determined by the selections made at the previous SYSTEM UNITS prompt.

English Metric

PSIa = Pounds per square inch absolute

PSIg = Pounds per square inch gage

BARa = bar absolute

BARa = bar gage

kPaa = kiloPascals absolute

kPag - kiloPascals gage

Table 6: Available Pressure Units

- **a.** If you have entered gage pressure, or the local atmospheric pressure (PSIg, BARg or kPag), use the numeric keys to enter the *Atmospheric Pressure* value. Press [ENT].
- **4.** At the *Stopwatch Totalizer* prompt, press [F1] to totalize all liquid flow continuously, or [F2] to measure totals manually with the Stopwatch Timer. (With MNUAL ([F2]), the console key on the keypad is used to start and stop the totalizer.)

IMPORTANT: After setting up the Stopwatch Totalizer, press [CLR] to clear the Stopwatch Totalizer, or the new totals will be added to any previously accumulated totals.

Note: The manner in which the Stopwatch Totalizer responds to an error condition may be set in the \(\lambda \) submenu.

1.8.2a Entering Volumetric Data

5. Use the [F1]-[F4] and $[\rightarrow]$ keys to select the desired *Volumetric Units* for the flow rate display.

The abbreviations and definitions of all the available volumetric and totalizer units are shown in Table 7 below. The choices shown on the option bar are determined by the selection made at the previous SYSTEM UNITS screen.

Actual Units

ACF = Actual Cubic Feet ACM = Actual Cubic Meters

KACF = Thousands of ACF KACM = Thousands of ACM

MMACF = Millions of ACF MMACM = Millions of ACM

Standard Units

SCF = Standard Cubic Feet SCM = Standard Cubic Meters

KSCM = Thousands of SCM MMSCM = Millions of SCM

Table 7: Available Volumetric/Totalizer Units

6. Use the [F1]-[F4] keys to select the *Volumetric Time* (units for the volumetric flow rate display).

KSCF = Thousands of SCF

MMSCF = Millions of SCF

- 7. Use the [F1]-[F4] keys to select the *Vol Decimal Digits* (the desired number of digits to the right of the decimal point) in the volumetric flow rate display.
- 1.8.2b Entering Totalizer Data
- **8.** Use the [F1]-[F4] and $[\rightarrow]$ keys to select the *Totalizer Units*.

The abbreviations and definitions of all the available volumetric and totalizer units are shown in Table 7 above. The choices shown on the option bar are determined by the selection made at the previous SYSTEM UNITS prompt screen.

9. Use the [F1]-[F4] keys to select the *Total Decimal Digits* (the desired number of digits to the right of the decimal point) in the totalized flow display.

1.8.2c Entering Mass Flow Data

- If the *Static Density?* prompt in the ADVAN option (MASS submenu) is set to NO, the meter returns to the GLOBL prompt.
- If Static Density? is set to YES, complete the following steps.
- **10.** Use the [F1]-[F4] keys to select the *Mass Flow* units, listed in Table 8 below.

Table 8: Available Mass Flow Units

English Mass Flow Units	Metric Mass Flow Units
LB- Pounds	KG - Kilograms
KLB - Thousands of Pounds	
MMLB - Millions of Pounds	
TONS - Tons	Tonnes - Metric Tons

- 11. Use the [F1]-[F4] keys to select the Mass Flow Time units.
- **12.** Use the [F1]-[F4] keys to select the *MDOT Decimal Digits* (the number of digits to the right of the decimal point) for displaying mass flow.
- **13.**Use the [F1]-[F4] keys to select the *Mass (Totalizer)* units, listed in Table 8 above.
- **14.** Use the [F1]-[F4] to specify the *Mass Decimal Digits* (the number of digits to the right of the decimal point) for displaying totalized mass flow.

Procedure Options

After completing the above steps, the meter returns to the Global PROGRAM prompt. Continue as follows:

- To continue programming the meter, refer to the menu maps in Appendix A and navigate to the desired menu. Then, proceed to the appropriate section of this manual for instructions.
- To leave the *User Program* and retain the previous settings, press [EXIT] twice and then press [F1] = NO at the *SAVE* prompt. Any programming changes will be discarded and you will be returned to the data display.
- To leave the *User Program* and return to measurement mode, press [EXIT] twice and then press [F2] = YES at the *SAVE* prompt. Your programming changes will be entered into the meter's memory, and you will be returned to the data display.

1.8.3 Setting Up the Inputs and Outputs

While following the programming instructions for the I/O submenu, refer to Figure 14 on page 98.

- 1. To enter the I/O submenu, press [F3] at the Global PROGRAM prompt.
- **2.** Do one of the following:
 - Press [F1] to set up error handling, or
 - Press [F2] to set up any inputs or outputs.

Proceed to the appropriate section for step-by-step instructions on each of the two options offered above.

Note: Be sure to record all programmed data in Appendix B, Data Records.

1.8.3a Selecting Error Handling

This menu option permits programming of the manner in which the Model GS868's outputs respond during an error condition. See Chapter 2, *Error Codes and Screen Messages*, of the *Service Manual* for a discussion of the built-in error codes.

- **1.** At the I/O prompt, press [F1] (Error).
 - Press [F1]-[F4] to select the desired error response option, as described in Table 9 below. Use the [F1]-[F4] keys to select the desired error response for the CH1/CH2, SUM or DIF modes, as described in Table 9 below.

Table 9: Standard Error Response Options

rable 3: Standard Error Response Options		
Option	Display Response	Totalizer Response
HOLD	Holds the last "good" reading	Holds the last "good" reading and continues to totalize, based on that reading
LOW	Forces the output to the low set point	Stops totalizing.
HIGH	Forces the output to the high set point	Stops totalizing.
HHIGH	Forces the output a 10% above the high set point	Stops totalizing.
OTHER	Allows user to enter 4-20 mA error level in mA.	Sends analog outputs to entered mA level when a fault occurs.

For the AVE mode, the 2-path error handling option is intended for applications where two sets of transducers are installed in the same location in the same pipe to improve accuracy. With this function enabled, the Model GS868 performs error handling only if <u>both</u> channels are in error. If this function is disabled, error handling occurs when <u>either</u> channel goes into error.

- Press [F1] = NO to disable 2-path error handling, or
- Press [F2] = YES to enable 2-path error handling.

Specific responses of the display and the totalizer to the 2-path error handling option are listed in Table 10 below.

Table 10: 2-Path Error Response Options

Option	Display Response	Totalizer Response
NO	Displays the average of CH1 and CH2, regardless of the error state of either channel.	Outputs the average of CH1 and CH2 totals, regardless of the error state of either channel.
YES	 If one channel is in error, the other channel's value is displayed as average. If both channels are in error, the last average reading is held. 	 If one channel is in error, totalizing continues. If both channels are in error, totalizing stops.

The *User Program* automatically returns to the Global I/O prompt.

1.8.3b Setting Up Input, Output and Option Cards

The Model GS868 has two built-in analog outputs, which are assigned to Slot 0. Also, a variety of option cards may be installed in the six expansion slots. See Chapter 1, *Installation*, of the *Startup Guide* for a complete description of the available option cards.

Note: For this discussion, Slot × will be used to reference any of the specific expansion slots (Slot 1 - Slot 6). If the number of a slot with an installed option card does not appear, the card may not have been initialized or it may be defective. Call the factory for assistance.

• Use the [←] and [→] and the [F1]-[F4] keys to select the desired slot number. (Only those slots which contain an option card will appear on the option bar.)

Refer to the menu map in Figure 14 on page 98, and complete the steps on the pages referenced below to setup and/or scale the Model GS868's analog inputs and outputs.

- Analog Outputs page 31
- Alarms page 32
- Totalizer/Frequency Outputs —page 33
- Analog Inputs page 34
- RTD Inputs page 35

Setting Up Analog Outputs

1. At the Slot X Outputs prompt, press [F1] to set up output A or [F2] to set up output B.

Note: The set up of output A is used as an example. Identical procedures would be used to set up output B.

- 2. Press [F1] = OFF to disable output A and return to the previous prompt, or press [F2] = 0-20 m or [F3] = 4-20 m to specify the desired range for output A.
- **3.** Use the $[\leftarrow]$ and $[\rightarrow]$ and [+1]-[+4] keys to select a *Channel* option for the data source.
- **4.** Use the $[\leftarrow]$ and $[\rightarrow]$ and [f1]-[f4] keys to specify the desired *Output Measurement* parameter.
- **5.** Enter the *Zero* value for the low end of the chosen output range. Press [ENT].
- **6.** Enter the *Full* value for the high end of the chosen output range. Press [ENT].
- 7. Press [F1]-[F2] to set up another output or press [EXIT] to select another slot for set up.

Setting up Alarms

1. Use the [F1]-[F3] keys to set up alarm relays A, B, or C, respectively.

Note: The set up of alarm A is used as an example. Identical procedures would be used to set up the other alarms.

- 2. Press [F1] = OFF to disable Alarm A and return to the previous prompt, or press [F2] = HIGH, [F3] = LOW or [F4] = FAULT to specify the type for Alarm A.
- **3.** Press [F1] = NO for standard operation or [F2] = YES for *Failsafe* operation.
- **4.** Use the $[\leftarrow]$ and $[\rightarrow]$ and [F1]-[F4] keys to select a *Channel* option for the data source.
- **5.** Do one of the following:
 - If you selected FAULT, proceed to step 6.
 - If you selected HIGH or LOW, complete the steps below.
 - **a.** Use the $[\leftarrow]$ and $[\rightarrow]$ and [F1]-[F4] keys to specify the desired *Output Measurement* parameter.
 - **b.** Enter a value for the trigger point of the alarm and press [ENT].
- **6.** To select the *Fault Type* that will trigger the alarm, press [F1] = FLOW, [F2] = OTHER (non-flow), or [F3]= ALL.
- 7. Press [F1]-[F3] to set up another alarm or press [EXIT] to select another slot for set up.

Setting up Totalizer/Frequency Outputs

- **1.** Press [F1]-[F4] to set up outputs A, B, C or D, respectively.
- 2. Press [F1] = OFF to disable output A and return to the previous prompt, or press [F2] = FREQ or [F3] = TTLZR to designate output A as a frequency or a totalizer output, respectively.

Note: The setup of output A is used as an example. Identical procedures would be used to set up the other outputs.

- **3.** Use the $[\leftarrow]$ and $[\rightarrow]$ and [F1]-[F4] keys to select a *Channel* option for the data source.
 - To program a frequency output, go to step 4 on the next page.
 - To program a totalizer output, go to step 5 on the next page.
- **4.** The FREQ output, [F2], produces a frequency pulse that is proportional to the output measurement. Complete the steps below to program the frequency output.
 - **a.** Use the $[\leftarrow]$ and $[\rightarrow]$ and [F1]-[F4] keys to specify the desired *Output Measurement* parameter.
 - **b.** Enter the *Base* value for the low end of the frequency output range and press [ENT].
 - **c.** Enter the *Full* value for the high end of the frequency output range. Press [ENT].
 - **d.** Enter a value between 1 and 10,000 for the *Full Scale Frequency*. Press [ENT]. Then skip to step 6 below.
- **5.** The TTLZR output, [F3], issues one pulse per selected volume of flow. The meter produces a pulse each time the programmed amount of flow passes through the pipe. Complete the steps below to program the totalizer output.
 - **a.** Press [F1] = +TOTL to totalize the forward flow, or [F2] = -TOTL to totalize the reverse flow.
 - **b.** Enter a value from 50 to 500,000 µsec for the *Minimum Pulse ON Time* and press [ENT].

Note: A complete pulse consists of equal amounts of ON and OFF times. Choose a value that is compatible with the frequency counter to be used.

- **c.** Enter a value for the number of measurement *Units/Pulse* and press [ENT].
- **6.** Press [F1]-[F4] to set up another totalizer/frequency output or press [EXIT] to select another slot for setup.

Setting up the Analog Inputs

1. Press [F1] to set up input A or [F2] to set up input B.

Note: The set up of input A is used as an example in this manual. Identical procedures would be used to set up input B. (An analog input option card may contain one standard analog input and one RTD analog input.)

- **2.** Enter a *Label* of up to eight characters for input A and press [ENT].
- **3.** At the *Input Measurement* prompt, press [F1] = OFF to disable input A and return to the previous prompt, or press [F2] = PRESR (pressure), [F3] = TEMP (temperature) or [F4] = SPEC (special) to designate the input. (To assign an input for steam quality, choose SPEC above.)
- **4.** Do one of the following:
 - If you selected PRESR or TEMP, proceed to step 5.
 - If you selected SPEC, complete the steps below.
 - **a.** Enter an *Input Name* and press [ENT].
 - **b.** Enter the *Input Units* of measurement and press [ENT].
- **5.** Enter the Zero Value for the low end of the chosen input range and press [ENT].
- **6.** Enter the *Full Scale Value* for the high end of the chosen input range and press [ENT].
- 7. Press [F1]-[F2] to set up another input or press [EXIT] to select another slot for setup.

Setting up the RTD Inputs

Option cards with RTD inputs have a temperature range of -100° to 350° C. Complete the following steps to set up the two RTD inputs of an option card installed in Slot x:

1. Press [F1] to set up RTD input A or [F2] to set up RTD input B.

Note: The setup of RTD input A is used as an example. Identical procedures would be used to set up RTD input B.

- **2.** Enter a label of up to eight characters and press [ENT].
- **3.** At the *Input Measurement* prompt, press [F1] = OFF to disable RTD input A and return to the previous prompt, or press [F2] = TEMP to enable RTD input A.
- **4.** Enter the Zero Value for the low end of the chosen input range and press [ENT].
- 5. Enter the Full Scale Value for the high end of the chosen input range and press [ENT].
- **6.** Press [F1]-[F2] to set up another input or press [EXIT] to select another slot for set up.

For instructions on setting up additional inputs and/or outputs, proceed to the appropriate section. Otherwise, press [EXIT] twice to return to the Global PROGRAM prompt.

Procedure Options

After completing the above steps, the meter returns to the Global I/O prompt. Continue as follows:

- To continue programming the meter, refer to the menu maps in Appendix A and navigate to the desired menu. Then, proceed to the appropriate section of this manual for instructions.
- To leave the *User Program* and retain the previous settings, press [EXIT] twice and then press [F1] = NO at the *SAVE* prompt. Any programming changes will be discarded and you will be returned to the data display.
- To leave the *User Program* and return to measurement mode, press [EXIT] twice and then press [F2] = YES at the *SAVE* prompt. Your programming changes will be entered into the meter's memory, and you will be returned to the data display.

1.8.4 Setting Up Serial Communications

The Model GS868 flowmeter can transmit stored data and displayed readings to a remote ANSI terminal or a personal computer by connecting the meter's RS232 interface to the serial port of the PC. In addition, the Model GS868 can receive and execute remote commands via this link. The meter can also be configured with a MODBUS option card for MODBUS (RS485) communications, a Foundation Fieldbus option card for Foundation Fieldbus communications, an Ethernet option card for Ethernet communications, or with a MODBUS/TCP option card for MODBUS communications over the Ethernet, if desired.

Note: To set Fieldbus communications parameters, see Appendix D, Foundation Fieldbus Communications.

Use the COMM submenu to set the RS232, MODBUS, Ethernet and MODBUS/TCP communications port parameters and to enter a network identification number. T A network identification number is required to use the GE *Instrument Data Manager* or *PanaView* software. While following the programming instructions, refer to the menu map in Figure 13 on page 97.

- 1. To enter the COMM submenu, press [F4] at the Global PROGRAM screen.
- 2. Use the $[\leftarrow]$ and $[\rightarrow]$ and [F1]-[F4] keys to select the desired *Baud Rate*. The available rates are 300, 600, 1200, 2400, 4800, 9600 and 19,200 baud.
- **3.** Use the $[\leftarrow]$ and $[\rightarrow]$ and [F1]-[F4] keys to select the number of *UART Bits*, as shown in Table 11 below.

Option Bar	# Data Bits	# Stop Bits	Parity
8,no	8	0	None
8,odd	8	0	Odd
8even	8	0	Even
7,odd	7	1	Odd
7even	7	1	Even

Table 11: UART Bits Options

4. Enter a *Network ID* number between 1 and 254 and press [ENT]. The default number is 1.

A network ID number is only necessary for communication with the GE *Instrument Data Manager* or *PanaView* software. See the software *User's Manual* for more information.

IMPORTANT: If the network ID number is changed, communication with the Instrument Data Manager or PanaView must be re-established with the new ID number.

1.8.4a MODBUS (RS485) Parameters

If your GS868 does not include an option card for MODBUS communications, you have completed programming the COMM submenu. However, if you have installed a MODBUS option card, the following additional prompts appear.

- 1. Press [F1]-[F4] to select the desired MODBUS Baud Rate from four selections: 2400, 4800, 9600 and 19,200.
- **2.** Press [F1]-[F3] to set the *MODBUS Parity* as none, odd or even.
- **3.** Press [F1] to select one *MODBUS Stop Bit*, or [F2] to select two stop bits.
- 4. Use the numeric keys to enter a MODBUS Address (from 1 to 247) and press [ENT].

1.8.4b MODBUS/TCP Parameters

If your GS868 does not include an option card for MODBUS/TCP communications, you have completed programming the COMM submenu. However, if you have installed a MODBUS/TCP option card, complete the following steps:

- 1. Press [F3]to select the appropriate MODBUS Baud Rate of 9600.
- **2.** Press [F1]-[F3] to set the *MODBUS Parity* as none, odd or even.
- **3.** Press [F1] to select one *MODBUS Stop Bit*, or [F2] to select two stop bits.
- **4.** Use the numeric keys to enter a *MODBUS Address* (from 1 to 247) and press [ENT].

Procedure Options

After completing the above steps, the meter returns to the Global PROGRAM prompt. Continue as follows:

- To continue programming the meter, refer to the menu maps in Appendix A and navigate to the desired menu. Then, proceed to the appropriate section of this manual for instructions.
- To leave the *User Program* and retain the previous settings, press [EXIT] twice and then press [F1] = NO at the *SAVE* prompt. Any programming changes will be discarded and you will be returned to the data display.
- To leave the *User Program* and return to measurement mode, press [EXIT] twice and then press [F2] = YES at the *SAVE* prompt. Your programming changes will be entered into the meter's memory, and you will be returned to the data display.

1.8.5 MODBUS Register Map

When equipped with the optional MODBUS output card, the GS868 flow transmitter can send flow data and diagnostic information to a flow computer (or SCADA) serially, using a Gould-type RTU protocol. In this case, only the MODBUS function command, 3 (read multiple registers), 6 (write multiple registers) is valid. The format for the data exchange is as follows:

• The **send** command (initiated by the host flow computer or controller) comes in the form:

```
[time delimiter]<Addr><3><First Register MSB></First Register LSB><Register Count MSB></Register Count LSB><CRC Low><CRC High>[time delimiter]
```

• The response (initiated by the host flow computer or controller) comes in the form:

```
[time delimiter]<Addr><3><Byte count><Data......>
<CRC Low><CRC High>[time delimiter]
```

The format for the returned data types is as follows:

- Integer (16 bit Integer) <MSB><LSB>
 1 Register 16 bit integer
- Integer (32 bit IntegerI) <MSB><LSB><LSB><LSB></LSB>
 2 Register 32 bit integer
- Floating Point (FP) <EXP><MAN><MAN><MAN>
 2 Registers 32 bit IEEE floating point number

To request specific parameters from the GS868 via the MODBUS, the control system must enter the appropriate register number. Only registers 1 through 90 are available for MODBUS communications, while registers 508 through 512 are used by the GS868 to store the MODBUS parameters. For details, see Table 12 on page 39.

Table 12: MODBUS Registers for a 2-Channel GS868

MODBUS Reg #	DPR Hex Addr	Description	Scaling (decimal places)	Size in Bytes
1	0	¹ "Clear Ch1 Totalizers"		2 (16 bit signed)
2	2	¹ "Clear Ch2 Totalizers"		2 (16 bit signed)
3	4	Ch1 Velocity	2	4 (2 16-bit int)
5	8	Ch1 Act Volumetric	#Q DIGITS	4 (IEEE 32 bit)
7	С	Ch1 Std Volumetric	#Q DIGITS	4 (IEEE 32 bit)
9	10	Ch1 Fwd Totals	#T DIGITS	4 (2 16 bit int)
11	14	Ch1 Rev Totals	#T DIGITS	4 (2 16 bit int)
13	18	Ch1 #Tot Digits	0	2
14	1A	Ch1 Mass Flow	#M DIGITS	4 (IEEE 32 bit)
16	1E	Ch1 Fwd Mass Totals	#MT DIGITS	4 (2 16-bit int)
18	22	Ch1 Rev Mass Totals	#MT DIGITS	4 (2 16-bit int)
20	26	Ch1 #Mass Tot Digits	0	2
21	28	Ch1 Timer	2	4 (2 16-bit int)
23	2C	Ch1 Error Code	0	2
24	2E	Ch1 Sound Speed	3	4 (2 16-bit int)
26	32	Ch1 Density	4	4 (2 16-bit int)
28	36	Ch1 Sig Strength Upstream	1	4 (2 16-bit int)
30	3A	Ch1 Sig Strength Downstream	1	4 (2 16-bit int)
32	3E	Ch1 Temperature	2	4 (2 16-bit int)
34	42	Ch1 Pressure	3	4 (2 16-bit int)
36	46	Ch2 Velocity	2	4 (2 16-bit int)
38	4A	Ch2 Act Volumetric	#Q DIGITS	4 (IEEE 32 bit)
40	4E	Ch2 Std Volumetric	#Q DIGITS	4 (IEEE 32 bit)
42	52	Ch2 Fwd Totals	#T DIGITS	4 (2 16 bit int)
44	56	Ch2 Rev Totals	#T DIGITS	4 (2 16 bit int)
46	5A	Ch2 #Tot Digits	0	2
47	5C	Ch2 Mass Flow	#M DIGITS	4 (IEEE 32 bit)
49	60	Ch2 Fwd Mass Totals	#MT DIGITS	4 (2 16-bit int)

Table 12: MODBUS Registers for a 2-Channel GS868 (cont.)

MODBUS Reg #	DPR Hex Addr	Description	Scaling (decimal places)	Size in Bytes
51	64	Ch2 Rev Mass Totals	#MT DIGITS	4 (2 16-bit int)
53	68	Ch2 #Mass Tot Digits	0	2
54	6A	Ch2 Timer	2	4 (2 16-bit int)
56	6E	Ch2 Error Code	0	2
57	70	Ch2 Sound Speed	3	4 (2 16-bit int)
59	74	Ch2 Density	4	4 (2 16-bit int)
61	78	Ch2 Sig Strength Upstream	1	4 (2 16-bit int)
63	7C	Ch2 Sig Strength Downstream	1	4 (2 16-bit int)
65	80	Ch2 Temperature	2	4 (2 16-bit int)
67	84	Ch2 Pressure	3	4 (2 16-bit int)
69	88	Avg Velocity	2	4 (2 16-bit int)
71	8C	Avg Act Volumetric	#Q DIGITS	4 (IEEE 32 bit)
73	90	Avg Std Volumetric	#Q DIGITS	4 (IEEE 32 bit)
75	94	Avg Fwd Totals	#T DIGITS	4 (2 16 bit int)
77	98	Avg Rev Totals	#T DIGITS	4 (2 16 bit int)
79	9C	Avg #Tot Digits	0	2
80	9E	Avg Mass Flow	#M DIGITS	4 (IEEE 32 bit)
82	A2	Avg Fwd Mass Totals	#MT DIGITS	4 (2 16-bit int)
84	A6	Avg Rev Mass Totals	#MT DIGITS	4 (2 16-bit int)
86	AA	Avg #Mass Tot Digits	0	2
87	AC	Avg Timer	2	4 (2 16-bit int)
89	В0	⁵ Avg Error Code	0	2
90	B2	Avg Sound Speed	3	4 (2 16-bit int)
508	3F6	² MODBUS baud rate	0	2
509	3F8	³ MODBUS parity	0	2
510	3FA	⁴ MODBUS stop bits	0	2
511	3FC	MODBUS meter addr	0	2
512	3FE	RESERVED		

Notes:

1. Clear Totalizers:

flag from the 8051 to clear either the Channel 1 or Channel 2 totalizers.

2. MODBUS baud rate:

5 = 2400, 6 = 4800, 7 = 9600, 8 = 19,200

3. MODBUS parity:

0 = none, 1 = odd, 2 = even

4. MODBUS stop bits:

1 = 1 stop bit, 2 = 2 stop bits

5. AVG Error Code:

0=Both Ch1 and Ch2 are in error.

1=Ch1 only is in error

2=Ch2 only is in error

3=Both channels are error free

6. You must scale measurements in the host system. For example, velocity scaling is two decimal places; thus, if the MODBUS card reports that the velocity is 100, the host system must interpret the number as 1.00 (two decimal places)

1.8.6 Activating Security

In order to prevent unauthorized tampering with the flowmeter's programming, the Model GS868 is equipped with a security feature that locks out the following menus:

- Program Menu [PROG]
- Calibration Menu [CAL]
- Log Menu [LOG]
- Clear Menu [CLR]

When the system is locked, access to the above menus will be denied unless the correct password is entered. The Model GS868 is shipped with a *default password*, which is given later in this section. For increased security, the default password should be changed.

IMPORTANT: Once the system has been locked, it can only be unlocked by entering the password, because access to the SECUR submenu is restricted.

To program the SECUR submenu, press $[\rightarrow]$ and [F1] at the Global PROGRAM prompt. Refer to Figure 13 on page 97.

IMPORTANT: It is recommended that all program parameters be recorded <u>before</u> changing the password. (This information should be recorded in Appendix B, Data Records, as a matter of routine.) If the password is lost, the site data is not retrievable and will have to be re-entered.

1. At the *Lock Out* prompt, press [F1] = UNIck to unlock the system and return to the Global PROGRAM prompt, or press [F2] = LOCK to lock the system.

Note: If the system was unlocked at the above prompt, the following three prompts do not appear.

- **2.** Enter the current Password (2719 is the default password) and press [ENT].
- **3.** At the *?Edit Password* prompt, press [F1] = NO to leave the password unchanged and return to the Global PROGRAM prompt, or press [F2] = YES to enter a new password.

1.8.6 Activating Security (cont.)

IMPORTANT: Since the default password is printed in this manual, a new password should be entered. If the password is ever lost, contact the factory for assistance.

4. *Enter* the *New Password* and press [ENT]. Any combination of letters and numbers up to a total of 21 characters may be used as a password.

Note: Keep in mind that the password may have to be entered frequently from the keypad. A long and/or complex password may soon become annoying to use.

5. Verify the New Password by entering it again and press [ENT]. Be sure to record the new password in a safe place.

Procedure Options

After completing the above steps, the meter returns to the Global PROGRAM prompt. Continue as follows:

- To continue programming the meter, refer to the menu maps in Appendix A and navigate to the desired menu. Then, proceed to the appropriate section of this manual for instructions.
- To leave the *User Program* and retain the previous settings, press [EXIT] twice and then press [F1] = NO at the *SAVE* prompt. Any programming changes will be discarded and you will be returned to the data display.
- To leave the *User Program* and return to measurement mode, press [EXIT] twice and then press [F2] = YES at the *SAVE* prompt. Your programming changes will be entered into the meter's memory, and you will be returned to the data display.

Note: See the SAVE submenu section on the following page for more information on this function

1.8.7 Saving Site Data

The currently programmed site data may be stored in the Model GS868's non-volatile memory by saving it as a site file. Up to ten site file names, consisting of up to five characters each, may be stored at any given time. To enter the SAVE menu, press [F4] at the initial *User Program* screen. Refer to Figure 13 on page 97.

1. Enter a new site file name and press [ENT], or use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select and overwrite an existing site file.

Note: The option bar will show only as many choices as there are existing site files.

If ten site files are already stored in memory, an existing site file must be deleted before a new site file name can be assigned. See Chapter 5, *Clearing Data*, for details.

When a site file is stored in memory, it becomes the active site file until another site file is created or retrieved. (See the next section for instructions on retrieving a site file.) To verify that the site file has been saved, use the $[\leftarrow]$ key to scroll back to the SITE NAME prompt and see if the name appears on the option bar (use the $[\leftarrow]$ and $[\rightarrow]$ keys to scroll through the list, if necessary). Whenever a new site file name is saved, it is automatically assigned to the next available function key.

IMPORTANT: The CLOCK and I/O data is <u>not</u> saved with the site file, while the SYSTM and COMM data <u>is</u> saved with the site file.

2. Use the $[\leftarrow]$ and $[\rightarrow]$ and [+1]-[+4] keys to select another menu, or press [+1] to leave the *User Program* and return to measurement mode.

1.8.8 Recalling a Site

Any site file currently stored in the Model GS868's non-volatile memory may be recalled at any time. Up to ten site file names, consisting of up to five characters each, may be stored at any given time. To enter the RECLL menu, press [? and [F1] at the initial *User Program* screen.

1. Use the $[\leftarrow]$, $[\rightarrow]$ and [f1]-[f4] keys to select and recall an existing site file.

Note: The option bar shows only as many choices as there are existing site files. The files are listed in chronological order by creation date.

Upon recall, the selected site file becomes active and all of its programmed parameters become current.

IMPORTANT: The CLOCK and I/O data is <u>not</u> recalled with the site file, while the SYSTM and COMM data <u>is</u> recalled with the site file.

Note: If you have loaded a site file into a GS868, but the option cards are not in the same slots or programmed the same way as when the site file was first saved, the GS868 displays a warning to review slot information. This display does not mean that the option cards have lost their program information!

Use the $[\leftarrow]$ and $[\rightarrow]$ and [F1]-[F4] keys to select another menu, or press [EXIT] to leave the *User Program* and return to measurement mode.

Chapter 2. Displaying Data

2.1 Introduction

This chapter explains how to display measurement data in various formats. Each of the two display screen panes may be programmed independently.

Note: The instructions in this chapter assume that the left display pane is active. If the right display pane is active, simply change all [F1]-[F4] designations to [F5]-[F8].


The following submenus are included in the *Display Menu*:

- BIG displays a single measurement in large size text
- DUAL permits the simultaneous display of two measurements, in the same screen pane, in standard size text
- GRAPH displays a graph of either velocity or volumetric flow versus time
- LOG displays the data stored in a log file either graphically or numerically
- SIGNL graphically displays any one of five transducer signals versus time
- BACKL sets the time that the LCD display backlight remains on before it is automatically turned off.
- SLEEP blanks out the display screen until a key is pressed.


Refer to Figure 15 on page 99 of Appendix A, *Menu Maps*, and proceed to the appropriate section to set up the Model GS868 display screen(s), using one of the listed submenus.

2.2 The BIG Format


The BIG format, which is the Model GS868's default power up format, displays one measurement in large print. To select the BIG format and the measurement to display in this format, follow the instructions in this section. Upon power up, a standard measurement mode display (similar to the one shown below) appears. Press the appropriate side of the [SCREEN] key to activate the desired pane of the display screen, and complete the following steps:

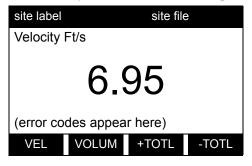

The default power up screen is already in BIG mode. If a different display mode is active, access the *Display Menu* by pressing the [DISP] key.

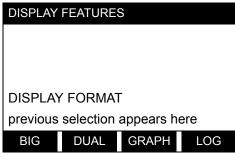

Press [F1] to select the BIG option. The measurement mode screen reappears with the display in the BIG format.

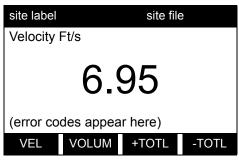

Use the [F1]-[F4], $[\leftarrow]$ and $[\rightarrow]$ keys to select the desired display parameter option. See Table 13 below for a complete description of the available options.

Table 13: Measurement Parameter Options

Option Bar Choice	Description
[F1] = VEL	Flow Velocity
[F2] = VOLUM	Volumetric Flow
[F3] = +TOTL	Forward Totalized Volume Flow
[F4] = -TOTL	Reverse Totalized Volume Flow
$[\rightarrow]$ + [F1] = TIME	Total Flow Measurement Time
$[\rightarrow]$ + [F2] = MDOT	Mass Flow
$[\rightarrow] + [F3] = +MASS$	Forward Totalized Mass Flow
$[\rightarrow] + [F4] = -MASS$	Reverse Totalized Mass Flow
$[\rightarrow] + [\rightarrow] + [F1] = DIAG$	Diagnostic

Note: See Chapter 3, Operation, of the Startup Guide for more details on selecting a measurement parameter to display.

2.3 The DUAL Format

The DUAL format displays two measurements simultaneously in normal print. To select the DUAL format and the measurements to display in this format, follow the instructions in this section.

Upon power up, a standard measurement mode display (similar to the one shown below) appears in BIG format. Press the appropriate side of the [SCREEN] key to activate the desired pane of the display screen, and complete the following steps:

- 1. To access the *Display Menu*, press the [DISP] key.
- 2. Press [F2] = DUAL. The measurement mode display reappears and the display is now in the DUAL format.
- 3. Use the [F1]-[F4], $[\leftarrow]$ and $[\rightarrow]$ keys to select the desired display parameter option. See Table 13 on page 46 for a complete description of the available options.

Note: See Chapter 3, Operation, of the Startup Guide for more details on selecting a measurement parameter to display.

With the DUAL format display screen active, when a measurement parameter is selected, the top line of the prompt area will be changed to show that parameter. The parameter previously displayed at the top of the display is moved to the bottom of the display, and the previous bottom parameter is no longer shown.

2.4 The GRAPH Format

The GRAPH submenu permits the display of either the flow velocity, mass flow or the volumetric flow on an XY bar graph, with a specified time interval on the x-axis. This section describes the procedures for setting up and using the graph format.

2.4.1 Setting Up the GRAPH Format


Press the appropriate side of the [SCREEN] key to activate the desired pane of the display screen, and complete the following steps:

- **1.** To access the *Display Menu*, press the [DISP] key.
- **2.** Press [F3] = GRAPH.
- **3.** Press [F1]-[F3] to graph the *Flow Velocity, Volumetric Flow* or *Mass Flow*, respectively.
- **4.** Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the desired *Time Increment*.
- **5.** Enter a maximum value for the *Y-axis* (vertical) scale that is larger than the maximum expected reading and press [ENT].
- **6.** At the *Y Range* prompt, press [F1] to graph only positive Y values or press [F2] to graph both positive and negative Y values.

After the YRANGE is entered, the Model GS868 automatically begins taking measurements and displays them in the specified graphical format. Proceed to the next section for a discussion of manipulating the graphical display.

2.4.2 Using the GRAPH Format

While viewing data in the GRAPH format, the function keys are programmed to permit a variety of actions. These options are described in detail below.

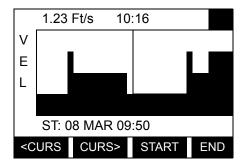

Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the desired option. See Table 14 on page 49 for a listing of the available choices.

At any given time, 120 data points will be shown on the GRAPH screen. The *cursor*, which is displayed as a vertical line that extends the full height of the graph window, can be used to select any one of these data points.

The typical screen shown above is for a *Velocity vs. Time* graph with only the positive y-axis displayed. The measurement parameter (VEL) is shown to the left of the y-axis and there is a *message line* below the graph that initially indicates the starting date and time of the graphed data. Notice that most of the locator bar has been replaced by a *status line* in standard video that shows the value, units and time of the measurement at the current cursor location. However, there is still an inverse video *pointer* at the far right of this line to indicate that additional option bar choices are available.

Note: The date in the message line includes only the day and the month (not the year), and the times in the status line and the message line includes only the hours and minutes (not the seconds).

Because the times displayed in the GRAPH format are in whole minutes only, movement of the cursor may not result in a visible change in the posted times. For example, if a TIME INCREMENT of 30 seconds has been programmed, two presses of either cursor movement key will be required to change the displayed time by one minute.

2.4.2 Using the GRAPH Format (cont.)

Table 14: Graph Display Options

Option Bar Choice	Description
[F1] = <curs< td=""><td>Moves the cursor to the left and displays the corresponding measurement value and time in the status line: (i.e. 6.85 Ft/s 10:38)</td></curs<>	Moves the cursor to the left and displays the corresponding measurement value and time in the status line: (i.e. 6.85 Ft/s 10:38)
[F2] = CURS>	Moves the cursor to the right and displays the corresponding measurement value and time in the status line: (i.e. 5.31 Ft/s 10:38)
[F3] = START	Moves the cursor all the way to the left side of the graph and posts the starting date and time in the message line: (i.e. ST: 08 MAR 10:38)
[F4] = END	Moves the cursor all the way to the right side of the graph and posts the ending date and time in the message line: (i.e. END 08 MAR 11:14)
[? + [F1] = YMAX	Displays the programmed maximum Y value in the message line: (i.e. YMAX 25.0 Ft/s)
[? + [F2] = T INC	Displays the programmed time increment value in the message line: (i.e. T INC 30 seconds)
[? + [F3] = EXIT	Leaves the GRAPH format and returns the display to the previous data format. (The [EXIT] key on the keypad will also perform this function.)


2.5 The LOG Format

The LOG submenu permits the display of the data in a log file either graphically or numerically. Although the Model GS868 can display all of the data in a log file, screen size limitations prevent the simultaneous display of the complete log file. Therefore, the function keys must be used to view the remaining data. Follow the instructions in this section to display a log file in the desired format.

2.5.1 Entering the LOG Submenu

Press the appropriate side of the [SCREEN] key to activate the desired pane of the display screen, and complete the following steps:

- 1. To access the *Display Menu*, press the [DISP] key.
- 2. Press [F4] = LOG.
- 3. Use the [←], [→] and [F1]-[F4] keys to select the desired log file to display. At the NAME prompt, the option bar will show the names of all log files that are currently stored in memory. If there are no log files currently stored in memory, the following prompt will appear instead:

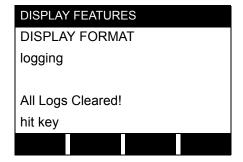

There are no log files currently stored in memory. Either all of the log files have been cleared or no log files have yet been created. Press any key to return to measurement mode.

If the All Logs Cleared! prompt appears, at least one log file must be created and stored in memory before the *Display Log* function can be accessed. See Chapter 3, *Logging Data*, for instructions on creating a log file. After at least one log file is stored in memory and selected at the NAME prompt of the LOG submenu, proceed to the next step.


- **4.** At the *Format* prompt, press [F1] to display the selected log in numeric format or press [F2] to display the selected log in graphical format.
- **5.** Do one of the following:
- If you pressed [F1], go to the next page.
- If you pressed [F2], go to page 52.

2.5.2 Numeric Format

The Model GS868 can log up to three parameters simultaneously. Each set of data values is called a *record*, and up to 120 consecutive records can be stored in a *page*. A *log file* can consist of up to 120 pages. The numeric log display, which shows one record at a time, includes the following components:

- page number
- record number
- time and date of creation
- measurement value set
- error messages (if any)

Upon choosing NUM at the FORMAT prompt, the first record of the selected log file is displayed in a screen similar to the following:

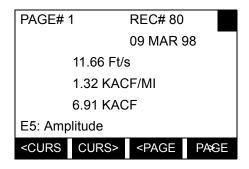

Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to view additional records or to exit the log display. The options are listed in Table 15 below.

In the numeric display screen, the locator bar (except for the inverse video pointer at the far right) is replaced by a standard video display of the page number and record number. The first line of the prompt area shows the time and date that the record was created, and the next three lines list the values for the three logged parameters. Finally, any error condition that existed at the time the record was taken is indicated by an error code in the bottom line of the prompt area.

Table 15: Numeric Log Display Options


Option Bar Choice	Description
[F1] = <curs< td=""><td>display the previous record on the current page</td></curs<>	display the previous record on the current page
[F2] = CURS>	display the next record on the current page
[F3] = <page< td=""><td>display the previous page</td></page<>	display the previous page
[F4] = PAGE>	display the next page
$[\rightarrow]$ + $[F1]$ = START	display the first record on the current page
$[\rightarrow]$ + $[F2]$ = END	display the last record on the current page
[→] + [F3] = EXIT	Leave the numeric LOG display and return to the previous data format. (The [EXIT] key on the keypad will also perform this function.)

2.5.3 Graphical Format

After choosing PLOT at the FORMAT prompt, the programming sequence continues as follows:

- **6.** Enter a maximum value for the *Y-axis* (vertical) scale that is larger than the maximum expected reading. Press [ENT].
- 7. At the *Y Range* prompt, press [F1] to graph only positive Y values or press [F2] to graph both positive and negative Y values.

After the YRANGE is entered, the Model GS868 automatically displays the chosen log file records in the specified graphical format.

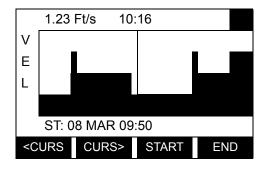

Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the desired option. See Table 16 on page 52 for the list of options.

At any given time, the 120 records stored in one page of the log file will be graphed on the display screen. The *cursor*, which is shown as a vertical line that extends the full height of the graph window, can be used to highlight any one of these records.

IMPORTANT: Only the first of the three logged parameters is displayed in the graphical format of the LOG submenu.

Therefore, when creating a log file, be sure to specify the parameter to be graphed at the 1st Value Logged prompt. See Chapter 3, Logging Data, for details on creating a log file.

Table 16: Graphical Loa Display Options

Option Bar Choice	Description
[F1] = <curs< td=""><td>Move the cursor one record to the left and display the value and time of that record in the status line: (i.e. 6.85 Ft/s 10:38)</td></curs<>	Move the cursor one record to the left and display the value and time of that record in the status line: (i.e. 6.85 Ft/s 10:38)
[F2] = CURS>	Move the cursor one record to the right and display the value and time of that record in the status line: (i.e. 5.31 Ft/s 10:38)
[F3] = <page< td=""><td>Display the previous page of records</td></page<>	Display the previous page of records
[F4] = PAGE>	Display the next page of records
[? + [F1] = START	Move the cursor to the first record on the current page and post the date and time of that record in the message line: (i.e. ST: 08 MAR 10:38)
[? + [F2] = END	Move the cursor to the last record on the current page and post the date and time of that record in the message line: (i.e. END 08 MAR 11:14)

Table 16: Graphical Log Display Options (cont.)

Option Bar Choice	Description
[? + [F3] = YMAX	Display the programmed maximum Y value in the message line: (i.e. YMAX 25.0 Ft/s)
[? + [F4] = T INC	Display the time increment value, as set when the log file was created, in the message line: (i.e. T INC 30 seconds)
[? + [F1] = EXIT	Leave the graphical LOG display and return the display to the previous data format. (The [EXIT] key on the keypad will also perform this function.)

2.5.3 Graphical Format (cont.)

In the typical graphical display shown, the first logged parameter (VEL) is shown to the left of the y-axis and there is a *message line* below the graph that initially indicates the starting date and time of the current page. Notice that most of the locator bar has been replaced by a *status line* in standard video that shows the value, units and time of the record at the current cursor location. However, there is still an inverse video *pointer* at the far right of this line to indicate that additional option bar choices are available.

Note: The date in the message line includes only the day and the month (not the year), and the times in the status line and the message line include only the hours and minutes (not the seconds).

Because the times displayed in the LOG graph are in whole minutes only, movement of the cursor may not result in a visible change in the posted times. For example, if a TIME INCREMENT of 30 seconds has been programmed, two presses of either cursor movement key will be required to change the displayed time by one minute.

2.6 Displaying the Transducer Signal

The SIGNL submenu permits the direct graphical display of several transducer signals. Specifically, the signals listed in Table 17 below may be viewed in this format.

Table 17: Available Transducer Signals

Transducer Signal	Description
	Skan Types
Sup	upstream Skan signal
Sdown	downstream Skan signal
Cup	upstream Skan correlation
Cdown	downstream Skan correlation
Measure Types	
Mup	upstream Measure signal
Mdown	downstream Measure signal

Note: The Measure type signals (Mup and Mdown) are only available 'f the S/M burst technique was selected in the ACTIV menu.

Refer to Figure 15 on page 99 and complete the following steps to display the transducer signals. Press the appropriate side of the [SCREEN] key to activate the desired pane of the display screen, then proceed as follows:


Note: For this discussion, it is assumed that the left pane of the display screen is active. If the right pane is active, it is only necessary to replace the [F1]-[F4] keys designations by the [F5]-[F8] keys.

- 1. To access the Display Menu, press the [DISP] key.
- 2. Press [? and [F1] = SIGNL.
- 3. Press [F1] to display the Skon type signals or press [F2] to display the Measure type signals.

Note: If the Skan burst technique was selected in the ACTIV menu, the Signal to Display prompt does not appear and the Measure type signals are not available. To access these signals, the S/M burst technique must be selected.

The signal graph is a plot of signal amplitude (y-axis) vs. time in microseconds (x-axis). When the SIGNL display screen first appears, it may briefly remain blank. As soon as the signal is acquired, processed and loaded into the display memory, the graph will appear. A *cursor*, which is displayed as a vertical line that extends the full height of the graph window, is used to highlight any point in time along the x-axis.

2.6 Displaying the Transducer Signal (cont.)

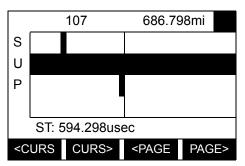

Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the desired option. Options are listed in Table 18 below.

The typical display screen shown has the Sup transducer signal listed to the left of the y-axis and there is a *message line* below the graph that initially indicates the starting date and time of the graphed signal. Notice that most of the locator bar has been replaced by a *status line* in standard video that shows the signal amplitude and the time (in microseconds) of the measurement at the current cursor location. However, there is still an inverse video *pointer* at the far right of this line to indicate that additional option bar choices are available.

Table 18: Graphical Log Display Options

Option Bar Choice	Description
[F1] = <curs< td=""><td>Move the cursor to the left and display the amplitude and time in the status line: (i.e. 107 686.798mi)</td></curs<>	Move the cursor to the left and display the amplitude and time in the status line: (i.e. 107 686.798mi)
[F2] = CURS>	Move the cursor to the right and display the amplitude and time in the status line: (i.e. 107 686.798mi)
[F3] = <page< td=""><td>Display the previous page</td></page<>	Display the previous page
[F4] = PAGE>	Display the next page
[→] + [F1] = START	Move the cursor to the start of the current page and post the starting date and time in the message line: (i.e. ST: 451.798usec)
[→] + [F2] = END	Move the cursor to the end of the current page and post the ending date and time in the message line: (i.e. END: 744.298usec)
[→] + [F3] = YMAX	Display the maximum Y value, which is set to 128 divisions in arbitrary units, in the message line.
[→] + [F4] = T INC	Display the time increment value in the message line. This is based on the frequency of the transducers and would equal 0.125 µsec for a 1 MHz transducer.
[→]+ [F1] = EXIT	Leave the graphical SIGNL display and return the display to the previous data format. (The [EXIT] key on the keypad will also perform this function.)

2.6 Displaying the Transducer Signal (cont.)

In addition to the functions available on the option bar, some of the numeric keys are used to specify which transducer signal is displayed and to scale the resulting graph. Table 19 below lists these functions.

Table 19: Numeric Key Functions

Key	Function
1	Scroll down the transducer signal list
2	Scroll up the transducer signal list
4	Expand the graph vertically
5	Return expanded graph to previous size
7	Compress graph horizontally
8	Return compressed graph to previous size

In summary, three basic functions are performed with the numeric keys:

- **Signal Selection:** use the "1" and "2" keys to select a transducer signal for display by scrolling through the list of available signals.
- **Vertical Scaling:** The "4" and "5" keys are used to scale the graph vertically. Each press of the "4" key doubles the height of the graph, while each press of the "5" key halves the height of the graph. The three available scale factors are 1x, 2x and 4x.
- **Horizontal Scaling:** The "7" and "8" keys are used to scale the graph horizontally. Each press of the "7" key doubles the T INC value (2x horizontal compression), while each press of the "8" key halves the T INC value (2x horizontal expansion). The four available compression ratios are 1x, 2x, 4x and 8x.

To return to the standard data screen, either select EXIT from the option bar or press the [EXIT] key on the keypad.

2.7 Setting the LCD Backlight

Use the BACKL submenu to specify the number of minutes the LCD display backlight remains on before it is automatically turned off. Press the appropriate side of the [SCREEN] key to activate the desired pane of the display screen, then proceed as follows:

Note: For this discussion, it is assumed that the left pane of the display screen is active. If the right pane is active, replace the [F1]-[F4] keys designations by the [F5]-[F8] keys.

- 1. To access the *Display Menu*, press the [DISP] key.
- 2. Press $[\rightarrow]$ and [F2] = BACKL.
- **3.** Use the numeric keys to enter a value from 1 to 60 minutes and press [ENT]. To keep the backlight on constantly, enter a value of 0 and press [ENT].

The Model GS868 will automatically return to the previous data display screen and the programmed backlight timeout interval will begin.

If no entries are made from the keypad before the backlight timeout interval expires, the backlight will automatically be turned off. At the next keypad entry, the backlight will be turned on and the specified timeout interval will begin again.

2.8 Activating Sleep Mode

During times when the display is not in use, use the SLEEP submenu to temporarily suspend LCD display activity, which allows the Model GS868 to process data more quickly. Press the appropriate side of the [SCREEN] key to activate the desired pane of the display screen, then proceed as follows:

Note: For this discussion, it is assumed that the left pane of the display screen is active. If the right pane is active, replace the [F1]-[F4] keys designations by the [F5]-[F8] keys.

- 1. To access the *Display Menu*, press the [DISP] key.
- 2. Press $[\rightarrow]$ and [F3] = SLEEP. The message "LCD SLEEP MODE -Press any key . . ." appears.
- **3.** To reactivate the display and return to the previous data screen, press any key on the keypad. The Model GS868 will automatically return to the previous data display screen.

Note: With BIG as the selected display format, exiting SLEEP mode may not erase the sleep mode message and the data screen will be superimposed on the message. If this occurs, simply enter the DISP menu and reselect the BIG format to refresh the screen. See the instructions earlier in this chapter.



[no content intended for this page]

Chapter 3. Logging Data

3.1 Introduction

This chapter explains how to use the Model GS868's data logging capability. The LOG menu, which is accessed by pressing the [LOG] key on the keypad, is divided into four submenus:

- STD used to log up to three of the available measurement data parameters
- MEM used to check the data logger memory to determine if the specified log will exceed the available memory
- STOP used to terminate current data logging activity
- ERROR used to log any generated error messages.

Up to twenty standard or error log files may be created and stored in battery-backed memory. Each log file contains up to three measurement parameters, the log start time and date, the log end time and date, the time interval between updates, and any error messages. Error logs record data only when an error message is generated.

The Model GS868 allocates up to 120 *pages* of memory, each of which can contain up to 120 *records*, for data logging. Each page is assigned a *header*, to distinguish one page from another. The header contains the log title, start date and time, end date and time, and the time increment. Each record contains the date and time of the measurement and the values for the three logged parameters.

Note: Each log file uses at least one page of memory, and the same page can not be shared by two different logs.

Since a fixed amount of memory is allocated for data logging, the number of active logs, the log time increments, and the length of the log runs will all affect how much memory is available for additional logging. For example, a log that updates every 5 seconds will use more memory than a log that updates every 6 minutes, assuming that they both run for the same length of time.

After a log file has been created, it may be displayed, printed, cleared or uploaded to a personal computer. Refer to the appropriate chapters of this manual for specific instructions.

Refer to Figure 17 on page 101 in Appendix A, *Menu Maps*, and proceed to the appropriate section for the desired LOG submenu. Each submenu may be followed in the sequence shown or the $[\leftarrow]$ and $[\rightarrow]$ keys may be used to scroll through the prompts.

3.2 Creating a Standard Log

Use the STD submenu to create a new standard log and to select the parameters to log, the log start time and date, the log end time and date, and the time increment. Also, any log file already stored in memory may be inspected and/or changed.

Press the appropriate side of the [SCREEN] key to activate the desired pane of the display screen, and complete the following steps:

- 1. To access the *Log Menu*, press the [LOG] key.
 - **a.** If you have activated the security feature (see Chapter 1, *Programming Site Data*, page 41 for details), enter the assigned password and press [ENT].
- **2.** Press [F1] = STD.
- 3. Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to inspect a completed log or to change an active log, or enter a new name (up to 5 characters) and press [ENT] to create a new log file.

Note: At the NAME prompt, the option bar will show the names of all completed or active log files that are currently stored in memory. Recall that a flashing asterisk (*) appears at the far right of the locator bar if the Model GS868 is currently logging data (see Chapter 3, Operation, of the Startup Guide).

- **4.** At the *Log Message* prompt, enter a brief description (up to 21 characters) of the log. Press [ENT].
- **5.** Use the $[\leftarrow]$, $[\rightarrow]$ and [f1]-[f4] keys to select the first parameter to be logged. See Table 20 below for a list of the available options.

IMPORTANT: Only the <u>first</u> parameter logged may be graphically displayed in the LOG Submenu of the Display Menu. Keep this in mind when selecting a parameter. See Chapter 2, Displaying Data, for instructions.

Option Bar Choice	Description
[F1] = VEL	Flow Velocity
[F2] = VOLUM	Volumetric Flow
[F3] = +TOTL	Forward Totalized Volume Flow
[F4] = -TOTL	Reverse Totalized Volume Flow
[? + [F1] = MDOT	Mass Flow
[? + [F2] = +MASS	Forward Totalized Mass Flow
[? + [F3] = -MASS	Reverse Totalized Mass Flow
[? + [F4] = DIAG	Diagnostic

Table 20: Measurement Parameter Options

Refer to Chapter 3, *Diagnostics*, of the *Service Manual* for a discussion of the many parameters accessible via the DIAG option.

Note: The units assigned to the parameters in Table 20 on page 60 are those selected in the User Program (SYSTM submenu).

6. Use the $[\leftarrow]$, $[\rightarrow]$ and [f1]-[f4] keys to select the second parameter to be logged.

3.2 Creating a Standard Log (cont.)

- 7. Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the third parameter to be logged.
 - If you selected a totalized value for display, go to step 8.
 - If you did not, go to step 9.
- **8.** At the *Set Log Totals to 0* prompt, press [F1] to leave the log totals at their present value or press [F2] to reset the log totals to zero. Choosing YES at this prompt only resets the log totals to zero and has no effect on the meter totals.

3.2.1 Log Type

9. Press [F1] to create a non-circular log or press [F2] to create a circular log.

A non-circular log automatically stops when the meter runs out of memory or the specified END TIME is reached. A circular log runs continuously until manually stopped, but only the data from the most recent log cycle is saved. At the start of each cycle, the oldest recorded data is overwritten by the new data from the current cycle.



<u>CAUTION!</u> If data from one circular log cycle exceeds the meter's memory capacity, the earliest logged data will be lost.

3.2.2 STARTTIME Prompt

- **10.** Press [F1] to accept the displayed start time or press [F2] to enter a different start time. To start logging immediately, press [F3].
 - If OK was selected, proceed to step 11.
 - If NOW was selected, proceed to step 12 if you selected a the non-circular log or to step 14 for a circular log.
 - If EDIT was selected, complete the steps listed on the next page.
 - **a.** Press [F1]-[F2] to select AM or PM. Then, enter the desired *Hour* (1-12) and press [ENT]. (Entry of a start time earlier than the current time will generate an error message.)
 - **b.** Enter the desired *Minutes* and press [ENT]. The acceptable range is 0 to 59.
 - **c.** Enter the desired *Seconds* and press [ENT]. The acceptable range is 0 to 59.

3.2.3 START DATE Prompt

- **11.** Press [F1] to accept the displayed *Start Date* or press [F2] to enter a different start date. To start logging today, press [F3].
 - If OK or TODAY was selected, proceed to step 12 for a non-circular log or to step 13 for a circular log.
 - Otherwise, complete the following steps to *Edit* the Start Date.
 - **a.** Enter the desired *Year* and press [ENT]. The acceptable range is 0 to 99.
 - **b.** Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the desired *Month*.
 - **c.** Enter the desired *Day* and press [ENT]. The acceptable range is 1 to the number of days in the selected month (28, 29, 30 or 31).

3.2.4 END TIME Prompt

- **12.** Press [F1] to accept the displayed *End Time* or press [F2] to enter a different end time. To select a specific time period for the log to run, press [F3].
 - If OK was selected, proceed to the END DATE prompt.
 - If TIMED was selected, proceed to the LOG TIME prompt.
 - If EDIT was selected, complete the steps on the next page.

Note: The log END TIME must exceed the log START TIME by at least five minutes. Failure to observe this restriction will result in an error message.

- **a.** Press [F1]-[F2] to select AM or PM. Then, enter the desired *Hour* (1-12) and press [ENT]. (Entry of a start time earlier than the current time will generate an error message.)
- **b.** Enter the desired *Minutes* and press [ENT]. The acceptable range is 0 to 59.
- **c.** Enter the desired *Seconds* and press [ENT]. The acceptable range is 0 to 59.

3.2.5 END DATE Prompt

- 13. Press [F1] to accept the displayed end date or press [F2] to enter a different end date. To end the log today, press [F3].
 - If OK or TODAY was selected, proceed to the TIME INCREMENT prompt. Refer to Figure 17 on page 101 for a flow diagram of the programming sequences.
 - Otherwise, complete the steps below.
 - **a.** Enter the desired *Year* and press [ENT]. The acceptable range is 0 to 99.
 - **b.** Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the desired *Month*.
 - **c.** Enter the desired *Day* and press [ENT]. The acceptable range is 1 to the number of days in the selected month (28, 29, 30 or 31). The program proceeds to step 15.

3.2.6 DURATION Prompt

If a circular log was specified, the programming sequence continues here after the log start time and/or start date is entered.

14. Press [F1] and enter a log duration in hours or press [F2] and enter a log duration in days. When the desired value has been entered, press [ENT]. The program proceeds to step 16.

3.2.7 LOG TIME Prompt

If TIMED was selected at step 12, the programming sequence continues here.

15. Use the $[\leftarrow]$, $[\rightarrow]$ and [f1]-[f4] keys to select the desired log duration. The available options are: 10min, 30min, 60min, 3 HR, 6 HR, 12 HR and 24 HR.

3.2.8 TIME INCREMENT Prompt

Regardless of which of the various options were selected during the previous programming steps, all of the paths converge at this point.

16. Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the desired *Time Increment*. The available options are: 5sec, 10sec, 30sec, 1min, 3min, 6min, 12min, 30min and 60 min.

The time increment is the frequency at which the Model GS868 takes and records data measurements. If any reading takes longer than the programmed time increment, the log is filled in with the next consecutive reading. For example, assume that a velocity value of 3 ft/sec is recorded at 12:00:00 in a log with a time increment of five seconds. If the next reading is 8 ft/sec and it takes the meter 12 seconds to read this value, then both of the missed readings (12:00:05 and 12:00:10) will be filled in with the 8 ft/sec value.

Procedure Options

You have completed entering data for a standard log. You can now do one of the following:

- Use $[\leftarrow]$ and $[\rightarrow]$ to review the previous menu prompts.
- Press [F1]-[F4] to select one of the LOG submenus.
- To return to the data screen and begin logging data, press the [ENT] key.

Although each log is restricted to only three logged parameters, it is still possible to log more than three parameters. Simply re-enter the STD submenu as many times as necessary to set up additional logs. Select the other desired parameters, and run these logs simultaneously with the first log.

3.3 Checking the Memory

Use the MEM submenu to verify that the available log memory is sufficient for the desired log. If the expected amount of logged data will exceed the remaining memory capacity, the Model GS868 suggests that some old logs be cleared to make room for the new log.

Press the appropriate side of the [SCREEN] key to activate the desired pane of the display screen, and complete the following steps:

- 1. To access the *Log Menu*, press the [LOG] key.
 - **a.** If you have activated the security feature (see Chapter 1, *Programming Site Data*, page 41 for details), enter the assigned password and press [ENT].
- **2.** Press [F2] = MEM.
- **3.** After noting the information, press [ENT] to return to the main *Log Menu* screen.

The MEM screen lists the number of remaining unused memory pages out of the total number of 120 available pages. Also, the number of pages expected to be used by all currently programmed logs is given. If the number of pending pages exceeds the number of free pages, additional memory may be made available by clearing some old logs (see Chapter 5, *Clearing Data*).

If it is undesirable to delete old logs to free up additional memory, the number of pages pending may be reduced by altering the parameters of one or more of the currently active logs. For example, either increasing the time increment or decreasing the total logging time will reduce the memory requirements for a log file. Use the following equations to calculate the number of pages used by a log:

number of records =
$$\frac{\text{length of log}}{\text{time increment}}$$
 (1)

number of pages =
$$\frac{\text{number of records}}{120}$$
 (2)

Consider a log that is set to run for 24 hours with a time increment of 3 minutes. From Equation 3-1, the number of records = $(24 \times 60)/3 = 480$ records. Then, from Equation 3-2 above, the number of pages = 480/120 = 4 pages. Thus, at least four pages of memory must be available for this log to run to completion. Notice that increasing the time increment to 6 minutes or decreasing the length of the log to 12 hours would reduce the memory requirement to only 2 pages.

3.4 Stopping a Log

Use the STOP submenu to terminate a logging process that is currently active. Press the appropriate side of the [SCREEN] key to activate the desired pane of the display screen, and complete the following steps:

- **1.** To access the *Log Menu*, press the [LOG] key.
 - **a.** If you have activated the security feature (see Chapter 1, *Programming Site Data*, page 41 for details), enter the assigned password and press [ENT].

Note: Once a log is stopped it cannot be restarted, but the log remains in memory. To clear the log from memory, refer to Chapter 5, Clearing Data, for instructions.

- **2.** Press [F3] = STOP.
- 3. Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select a log file to stop.

Note: At the NAME prompt, the option bar will show the names of all completed or active log files that are currently stored in memory. Recall that a flashing asterisk (*) appears at the far right of the locator bar if the Model GS868 is currently logging data (see Chapter 3, Operation, of the Startup Guide).

4. Press [F1] to continue logging and return to the initial *Log Menu* screen. Press [F2] to stop logging and return to the initial *Log Menu* screen.

Procedure Options

- Press [F1]-[F4] to enter another LOG submenu.
- Press [EXIT] to return to the data screen.

3.5 Creating an ERROR Log

Use the ERROR submenu to create a new error log and to select the logging parameters. An error log updates every 5 seconds (when the display updates), but only if a new error condition occurs. Error logs have a fixed length of 2 pages and contain sixty records per page. Each record shows the time of the error, the measurement parameter values at that time, and the error code message. The logged values of the chosen measurement parameters at the time of the error condition provide valuable troubleshooting information.

Press the appropriate side of the [SCREEN] key to activate the desired pane of the display screen, and complete the following steps:

- 1. To access the *Log Menu*, press the [LOG] key.
 - **a.** If you have activated the security feature (see Chapter 1, *Programming Site Data*, page 41 for details), enter the assigned password and press [ENT].
- 2. Press [F4] = ERROR.
- 3. Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to inspect a completed log or to change an active log, or enter a new *Name* (up to 5 characters) and press [ENT] to create a new log file.

Note: The option bar lists all error logs currently stored in memory. Recall that a flashing asterisk (*) appears at the far right of the locator bar if the Model GS868 is currently logging data (see Chapter 3, Operation, of the Startup Guide).

- **4.** At the Log Message prompt, enter a brief description (up to 21 characters) of the log. Press [ENT].
- **5.** Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the first parameter to be logged. See Table 21 below for a list of the available options.

IMPORTANT: Only the <u>first</u> parameter logged may be graphically displayed (see Chapter 2, Displaying Data).

Option Bar Choice Description Flow Velocity [F1] = VEL[F2] = VOLUMVolumetric Flow [F3] = +TOTLForward Totalized Volume Flow [F4] = -TOTLReverse Totalized Volume Flow Mass Flow [? + [F1] = MDOT[? + [F2] = +MASS]Forward Totalized Mass Flow Reverse Totalized Mass Flow [? + [F3] = -MASS][? + [F4] = DIAGDiagnostic

Table 21: Measurement Parameter Options

In addition, refer to Chapter 3, *Diagnostics*, of the *Service Manual* for a discussion of the many parameters accessible via the DIAG option.

Note: The units assigned to the parameters in Table 21 on page 66 are those selected in the User Program (SYSTM submenu).

3.5 Creating an ERROR Log (cont.)

- **6.** Use the $[\leftarrow]$, $[\rightarrow]$ and [f1]-[f4] keys to select the second parameter to be logged.
- 7. Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the third parameter to be logged.
 - If you selected a totalized value for display, go to step 8.
 - If you did not, go to step 9.
- **8.** At the *Set Log Totals to 0* prompt, press [F1] to leave the log totals at their present value or press [F2] to reset the log totals to zero. Choosing YES at this prompt only resets the log totals to zero and has no effect on the meter totals.

3.5.1 Log Type

9. Press [F1] to create a non-circular log or press [F2] to create a circular log.

A non-circular log automatically stops when the meter runs out of memory or the specified END TIME is reached. A circular log runs continuously until manually stopped, but only the data from the most recent log cycle is saved. At the start of each cycle, the oldest recorded data is overwritten by the new data from the current cycle.

3.5.2 STARTTIME Prompt



<u>CAUTION!</u> If data from one circular log cycle exceeds the meter's memory capacity, the earliest logged data will be lost.

- **10.** Press [F1] to accept the displayed start time or press [F2] to enter a different start time. To start logging immediately, press [F3].
 - If OK was selected, proceed to step 11.
 - If NOW was selected, you have finished setting up the error log. Proceed to *Procedure Options* on the next page.
 - If EDIT was selected, complete the steps listed on the next page.
 - **a.** Press [F1]-[F2] to select AM or PM. Then, enter the desired *Hour* (1-12) and press [ENT]. (Entry of a start time earlier than the current time will generate an error message.)
 - **b.** Enter the desired *Minutes* and press [ENT]. The acceptable range is 0 to 59.
 - **c.** Enter the desired *Seconds* and press [ENT]. The acceptable range is 0 to 59.

3.5.3 START DATE Prompt

- **11.** Press [F1] to accept the displayed *Start Date* or press [F2] to enter a different start date. To start logging today, press [F3].
 - If OK or TODAY was selected, you have finished setting up the error log. Proceed to *Procedure Options* below.
 - Otherwise, complete the following steps to *Edit* the Start Date.
 - **a.** Enter the desired *Year* and press [ENT]. The acceptable range is 0 to 99.
 - **b.** Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the desired *Month*.
 - **c.** Enter the desired *Day* and press [ENT]. The acceptable range is 1 to the number of days in the selected month (28, 29, 30 or 31).

Procedure Options

You have completed setting up the error log. Do one of the following:

- Use $[\leftarrow]$ and $[\rightarrow]$ to review the previous menu prompts.
- Press [F1]-[F4] to select one of the LOG submenus.
- To return to the data screen and begin logging data, press the [ENT] key. The * on the locator bar indicates that the Model GS868 is now compiling the specified error log.

The error log will continue to run until it is manually stopped, the meter runs out of memory (for a non-circular log), or the entire 120 records (2 pages x 60 records/page) have been logged.

Chapter 4. Printing Data

4.1 Introduction

The Model GS868 flowmeter has the capability to print any of the data stored in its memory via the built-in RS232 communications port. In order to use the function, the RS232 port must be connected to a printer with a serial port input. A printer with a parallel port input may be used with a third-party serial-to-parallel adapter.

Note: See Chapter 1, Installation, of the Startup Guide for instructions on wiring the RS232 port. For additional information, refer to the EIA-RS Serial Communications user's guide (916-054).

After connecting the Model GS868 to a printer, the *Print Menu* is used to print live or logged data in either numeric or graphical format. In addition, any site files stored in memory may be printed. The *Print Menu* is divided into the following submenus:

- DATA use to print live data in numeric or graphical format
- LOG use to print a log file in numeric or graphical format
- PROG use to print a site file
- STOP use to terminate any active print jobs
- PRNTR use to specify the printer currently connected
- SGNLS use to print transducer signal array data
- RTDs use to send the numeric point value of a connected RTD device to the RS232 port.

For purposes of this discussion it is assumed that the left pane of the data display screen is active. If the right pane of the data display screen is active, all of the instructions remain the same, except that any references to the [F1]-[F4] keys should be replaced by the [F5]-[F8] keys.

Refer to Figure 16 on page 100 in Appendix A, *Menu Maps*, and proceed to the desired section for detailed instructions. As an additional aid, the relevant portion of the full menu map is reproduced in each section of this chapter. Any submenu may be followed in the sequence shown or the $[\leftarrow]$ and $[\rightarrow]$ keys may be used to scroll through the prompts.

Note: *If a printer has not yet been set up, the instructions in* "The PRNTR Submenu" *must be completed before proceeding to any of the other submenus.*

4.2 Print Live Data

Use the DATA submenu to print live measurement data, as it is collected. The data may be printed in either numeric or graphical format, with a user specified time increment.

IMPORTANT: Make sure that a printer has been properly set up before proceeding with this section.

To print live measurement data, refer to Figure 16 on page 100, and complete the following steps:

1. To access the *Print Menu*, press the [PRNT] key.

Note: The Print Menu is <u>not</u> protected by the security feature and a password is never required to access this menu.

- **2.** Press [F1] to select the DATA option.
- 3. Press [F1] = NUM to print the data in numeric format or press [F2] = PLOT to print the data in graphical format.
 - If you press [F1], go to step 4.
 - If you press [F2], go to step 8.

4.2.1 Numeric Format

4. Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the first parameter to be printed. See Table 22 below for a list of the available options.

Option Bar Choice	Description	
[F1] = VEL	Flow Velocity	
[F2] = VOLUM	Volumetric Flow	
[F3] = +TOTL	Forward Totalized Volume Flow	
[F4] = -TOTL	Reverse Totalized Volume Flow	
$[\rightarrow]$ + [F1] = MDOT	Mass Flow	
$[\rightarrow] + [F2] = +MASS$	Forward Totalized Mass Flow	
$[\rightarrow] + [F3] = -MASS$	Reverse Totalized Mass Flow	
$[\rightarrow]$ + [F4] = DIAG	Diagnostic	

Table 22: Measurement Parameter Options

Refer to Chapter 3, *Diagnostics*, of the *Service Manual* for a discussion of the many parameters accessible via the DIAG option.

Note: The units assigned to the parameters in Table 22 above are those selected in the User Program (SYSTM submenu).

- 5. Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the second parameter to be printed.
- **6.** Use the $[\leftarrow]$, $[\rightarrow]$ and [f1]-[f4] keys to select the third parameter to be printed.
- 7. Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the desired time increment (the frequency at which measurements are taken). The available options are: 5sec, 10sec, 30sec, 1min, 3min, 6min and 12min.

4.2.1 Numeric Format (cont.)

After the time increment is chosen, the Model GS868 returns to the standard data display screen and continues to take measurements. The live data is printed at the specified time intervals, until a STOP command is issued (see the instructions for the STOP submenu). A portion of a typical printout is shown in Figure 3 below.

DATA_DUMP OF (SITE NAME) Site LABEL Site MESSAGE			
Start Date Start Time		20 OCT 97 03:08:40 PM	М
HH:MM:SS	VOLUM ACF/HR	+TOTL ACF	SNDSP FT/S
03:08:40 03:08:50 03:09:00 03:09:10 03:09:20 03:09:30 03:09:40 03:09:50 03:10:00	686.85 666.71 662.28 675.59 669.79 675.99 670.70 684.00 680.58	222.70 224.84 226.71 228.58 230.45	1039.003 1039.511 1039.509 1039.470 1039.137 1039.105 1039.082
03:10:00		234.46	

Figure 3: Typical Numeric Printout

4.2.2 Graphical Format

To print live data in graphical format, continue as follows:

8. Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the first parameter to be printed. See Table 23 on page 72 for a list of the available options.

rable 25: Measurement Parameter Options		
Option Bar Choice	Description	
[F1] = VEL	Flow Velocity	
[F2] = VOLUM	Volumetric Flow	
[F3] = +TOTL	Forward Totalized Volume Flow	
[F4] = -TOTL	Reverse Totalized Volume Flow	
$[\rightarrow]$ + [F1] = MDOT	Mass Flow	
$[\rightarrow] + [F2] = +MASS$	Forward Totalized Mass Flow	
$[\rightarrow] + [F3] = -MASS$	Reverse Totalized Mass Flow	
$[\rightarrow] + [F4] = DIAG$	Diagnostic	

Table 23: Measurement Parameter Options

Refer to Chapter 3, *Diagnostics*, of the *Service Manual* for a discussion of the many parameters accessible via the DIAG option.

Note: The units assigned to the parameters in Table 23 above are those selected in the User Program (SYSTM *submenu*).

9. Enter the desired maximum value for the Y (vertical) axis and press [ENT].

Note: Enter a Y AXIS MAX value that is larger than the largest expected measurement value.

- **10.** At the *Y Range* prompt, press [F1] to show only the positive Y axis or press [F2] to display both the positive and negative y axis.
- 11. Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the desired *Time Increment* (the frequency at which measurements are taken). The available options are: 5sec, 10sec, 30sec, 1min, 3min, 6min and 12min.

After the time increment is chosen, the Model GS868 returns to the standard data display screen and continues to take measurements. The live data is printed at the specified time intervals, until a STOP command is issued (see the instructions for the STOP submenu). A portion of a typical printout is shown in Figure 4 below.

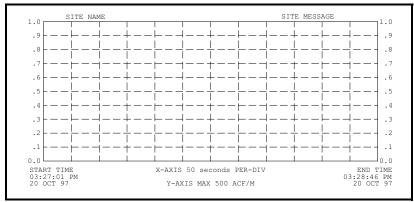


Figure 4: Typical Graphical Printout

4.3 Printing Logs

Use the LOG submenu to print logged measurement data, from a log file in the meter's memory. The data may be printed in either numeric or graphical format, with a user specified time increment.

IMPORTANT: Make sure that a printer has been properly set up before proceeding with this section.

To print logged measurement data, refer to Figure 16 on page 100, and complete the following steps:

1. To access the *Print Menu*, press the [PRNT] key.

Note: The Print Menu is <u>not</u> protected by the security feature and a password is never required to access this menu.

- 2. Press [F2] = LOG.
- 3. At the *Format* prompt, press [F1] to print the log in numeric format or press [F2] to print the log in graphical format.
- **4.** Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select a log file to print.

Note: At the NAME prompt, the option bar shows the names of all completed or active log files currently stored in memory. If an active log is selected for printing, only the data already accumulated at the time of the print command will be printed.

- **5.** Enter the number of the *First Page* of the log to print and press [ENT]. (This prompt does not appear if the log file is only one page long.)
- **6.** Enter the total number of log *pages* to print and press [ENT]. (This prompt does not appear if the log file is only one page long.)
 - If you chose [F1] (Numeric) at step 3, see the section below.
 - If you chose [F2] (Graphic) at step 3, go to the next page.

4.3.1 Numeric Format

After the numeric format (and starting page and number of pages, if applicable) is chosen, the Model GS868 returns to the standard data display screen and begins printing the log file. The printout continues until the entire log has been printed or until a STOP command is issued (see the instructions for the STOP submenu). A portion of a typical printout is shown in Figure 5 below.

LOG TITLE:	LOG1			
START:	9 SEP	97 11:50:43		
END:	9 SEP	97 11:54:45		
INTERVAL:	10 sec	onds		
DATE	TIME	ID#1 VOLUM	ID#2 +TOTL	ID#1 SNDSP
MM:DD:YY	HH:MM:SS	ACF/HR	ACF	FT/S
09-09-97	11:50:45	686.85	218.92	1039.147
09-09-97	11:50:55	666.71	220.83	1039.003
09-09-97	11:51:05	662.28	222.70	1039.511
09-09-97	11:51:15	675.59	224.84	1039.509
09-09-97	11:51:25	669.79	226.71	1039.470
09-09-97	11:51:35	675.99	228.58	1039.137
09-09-97	11:51:45	670.70	230.45	1039.105

Figure 5: Typical Numeric Printout

4.3.2 Graphical Format

After the graphical format (and starting page and number of pages, if applicable) is chosen, complete the following additional steps:

7. Enter the desired maximum value for the Y (vertical) axis and press [ENT].

Note: Enter a Y AXIS MAX value that is larger than the largest logged measurement value.

8. At the Y Range prompt, press [F1] to show only the positive Y axis or press [F2] to display both the positive and negative y axis.

The Model GS868 returns to the standard data display screen and begins printing the log file. The printout continues until the entire log has been printed or until a STOP command is issued (see the instructions for the STOP submenu). A portion of a typical printout is shown in Figure 6 below.

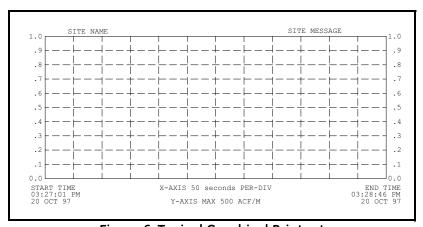


Figure 6: Typical Graphical Printout

4.4 Printing a Site File

Use the PROG submenu to print the data in a site file that was set up and saved as described in Chapter 1, *Programming Site Data*. To print a site file, refer to Figure 16 on page 100 and complete the following steps:

IMPORTANT: Make sure that a printer has been properly set up before proceeding with this section.

1. To access the *Print Menu*, press the [PRNT] key.

Note: The Print Menu is <u>not</u> protected by the security feature and a password is never required to access this menu.

- **2.** Press [F3] = PROG.
- **3.** Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the desired *Site File* to print.

Note: All site files currently in memory appear on the option bar. The active site file is always listed as the first choice (Work).

The Model GS868 returns to the standard data display screen and generates a site file printout similar to the one shown in Figure 7 below. The printout continues until the entire file has been printed or until a STOP command is issued (see the instructions for the STOP submenu on the next page.

```
PROGRAM PARAMETERS of SITE NAME
 Model GX868G3G
 With 1K FIFO and 1113 receiver board.
 At 9:54:39 AM on 11 FEB 99
ACTIVE PARAMETERS:
 Site status
                     Burst
 Skan/measure mode Skan Only
SYSTEM PARAMETERS:
 site LABEL site MESSAGE
System Units ENGLIS
                  ENGLISH
 Totalizer Option Automatic
 Equation
                     Standard Equation
 Supercompress?
                    No
                    Thousands ACF
 Volumetric Units
 Volumetric Time
                     /min
 VOL Decimal Digits 0
 Totalizer Units
                    Actual cubic ft
 TOT Decimal Digits 0
PIPE PARAMETERS:
 Transducer number
                     12.000 inches
 Pipe OD
 Pipe Wall
                     0.200 inches
 Path Length
                     16.97 inches
 Axial Dimension L
                     12.00 inches
```

Figure 7: Typical Site File Printout

4.5 Stopping Printing

Use the STOP submenu to terminate the printing of live, logged or site data. To stop any active printing activity, see Figure 16 on page 100, and complete the following steps:

IMPORTANT: Make sure that a printer has been properly set up before proceeding with this section.

1. To access the *Print Menu*, press the [PRNT] key.

Note: The Print Menu is <u>not</u> protected by the security feature and a password is never required to access this menu.

- **2.** Press [F4] = STOP.
- **3.** Press [F1] to continue printing or press [F2] to *Stop* the currently active printing job.

Note: After the STOP command has been issued, the printer will complete the printing of any data already in the printer buffer. Either wait for the printer to finish or turn the printer off to empty the buffer immediately.

The Model GS868 returns to the standard data display screen and normal measurement taking.

4.6 Setting Up a Printer

Use the PRNTR submenu to specify the type of printer connected to the Model GS868. To set up a printer, refer to Figure 16 on page 100, and complete the following steps:

IMPORTANT: A printer must be properly set up before proceeding to any of the other sections in this chapter

1. To access the *Print Menu*, press the [PRNT] key.

Note: The Print Menu is not protected by the security feature and a password is never required to access this menu.

- 2. Press the $[\leftarrow]$ or $[\rightarrow]$ key to display the option bar shown, and then press [F1] to select the PRNTR submenu.
- 3. Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select the desired *Printer Type*. See Table 24 below for a complete list of the available options.

Note: For compatibility with the Model GS868, the printer must have an RS232 serial interface. To use a printer with a parallel interface, a serial-to-parallel adapter must be used.

Key(s) **Printer Type** Description [F1] **DP411** Seiko Model DPU-411 Type II [F2] Extech Mini Serial Printer 42 XTECH [F3] **EPSON** Epson or Epson-compatible [F4] **KODAK** Kodak Diconix 150 Plus SP401 Syntest SP-401 $[\rightarrow]$ +[F1]

Table 24: Available Printer Options

After the desired printer type has been selected, the meter returns to the standard data display screen and normal measurement taking.

4.6.1 Printing Signal Array Data

Use the SGNLS submenu to print signal array data, to help diagnose certain problems. To print signal data, see Figure 16 on page 100, and complete the following steps:

IMPORTANT: Make sure that a printer has been properly set up before proceeding with this section.

1. To access the *Print Menu*, press the [PRNT] key.

Note: The Print Menu is <u>not</u> protected by the security feature and a password is never required to access this menu.

- 2. Press the $[\leftarrow]$ or $[\rightarrow]$ key to display the option bar shown, and then press [F2] to select the SGNLS submenu.
- **3.** Press the [F1]-[F3] keys to select the desired *Signal Array* data to print. To abort the procedure, press the [EXIT] key.

Note: The SIGNL option causes the raw signal array data to print, while the CROSS option causes the cross-correlation data to print. The BOTH option prints both sets of data.

After the desired print selection has been made, the Model GS868 returns to the standard data display screen and normal measurement taking. The specified signal array data is printed continuously, until it is manually stopped. To terminate signal array printing, use the STOP submenu, as described earlier in this chapter. A portion of a typical printout is shown in Figure 8 below.

CH1	SKAN	SIGNAL
0	2	0
1	2	0
2	2	0
3	2	0
4	2	0
5	2	0
	•	•
•	•	•
•	•	•
510	867	965
511	880	950
512	893	942
	•	•

Figure 8: Typical Signal Array Printout

The data printed via the SIGNL submenu consists of 1024 lines, each of which lists the following three values:

- Index this is the printout line number, which locates the data point within the complete body of data.
- **Upstream** this is the amplitude of the signal from the upstream transducer at the listed index number.
- **Downstream** this is the amplitude of the signal from the downstream transducer at the listed index number.

4.6 Printing Signal Array Data (cont.)

Note: The printouts generated from the CROSS and BOTH submenus will appear after the SIGNL printout, as separate listings.

The data printed in this array permits a comparison of the relative signal strengths of the upstream and downstream transducers, which are used to calculate a single flow measurement.

4.7 Printing RTD Data

Use the RTDs submenu to send the numeric point value of a connected RTD device to the RS232 port for display on a terminal or RS232 printer. By viewing the point value of the meter at a given temperature, you can calculate the points at the Set Temperature, and the slope of the RTD input in points/degree. (See Chapter 1, *Calibration*, of the *Service Manual* for more details.)

1. To access the *Print Menu*, press the [PRNT] key.

Note: The Print Menu is <u>not</u> protected by the security feature and a password is never required to access this menu.

- 2. Press the $[\leftarrow]$ or $[\rightarrow]$ key to display the option bar shown, and then press [F3] to select the RTDs submenu.
- **3.** At the *Dump RTD Data* prompt, press [F1] to leave the PRINT menu without dumping data, or [F2] to send the RTD data to the RS232 port.

After the selection has been made, the Model GS868 returns to the standard data display screen and normal measurement taking. If you have selected YES at the *Dump RTD Data* prompt, the meter continues to send data until you reenter the PRINT menu and select the STOP option.

Chapter 5. Clearing Data

5.1 Introduction

This chapter explains how to purge the Model GS868's memory of various measurement totals and/or files. The *Clear Menu*, which is accessed by pressing the [CLR] key on the keypad, is divided into three submenus:

- TOTAL used to reset totalized measurement values
- SITE used to remove site parameter files from memory
- LOG used to clear log files from memory.

Note: For detailed information on creating a log file, see Chapter 3, Logging Data. For detailed information on creating a site file and for setting up the stopwatch totalizer, see Chapter 1, Programming Site Data.

For purposes of this discussion it is assumed that the left pane of the data display screen is active. If the right pane of the data display screen is active, all of the instructions remain the same, except that any references to the [F1]-[F4] keys should be replaced by the [F5]-[F8] keys.

IMPORTANT: None of the clearing procedures available via the Clear Menu can be undone. Be very sure that the exact consequences of a selected option are thoroughly understood before proceeding.

Refer to Figure 17 on page 101 in Appendix A, *Menu Maps*, and proceed to the desired section for detailed instructions. Each submenu may be followed in the sequence shown or the $[\leftarrow]$ and $[\rightarrow]$ keys may be used to scroll through the prompts.

5.1.1 Resetting Totals

The TOTAL submenu permits the user to reset volumetric totals to zero and to reset the stopwatch totalizer. Press the appropriate side of the [SCREEN] key to activate the desired pane of the display screen, and complete the following steps:

- 1. To access the *Clear Menu*, press the [CLR] key.
 - **a.** If you have activated the security feature (see Chapter 1, *Programming Site Data*, page 41 for details), enter the assigned password and press [ENT].
- **2.** Press [F1] = TOTAL.
- **3.** Press [F1] to abort the procedure or press [F2] to clear all volumetric totals and reset the stopwatch totalizer. In either case, the initial *Clear Menu* prompt returns.

Procedure Options

- Press [F1]-[F3] to enter one of the CLR submenus.
- Press the [EXIT] key to return to the data measurement display.

5.2 Deleting Site Files

Use the SITE submenu to clear site files from the GS868's memory. Use the [SCREEN] key to activate the desired display pane, and complete the following steps:

- 1. To access the *Clear Menu*, press the [CLR] key.
 - **a.** If you have activated the security feature (see Chapter 1, *Programming Site Data*, page 41 for details), enter the assigned password and press [ENT].
- 2. Press [F2] = SITE.
- 3. At the *Site Name* prompt, use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select a site file for deletion. To leave the SITE submenu, press the [EXIT] key.

Note: At the Site Name prompt, the option bar shows the names of all site files currently stored in memory.

4. Press [F1] to abort the procedure or press [F2] to *Clear* the specified site file. If any site files remain in memory, the *Site Name* prompt repeats.

When all of the stored site files have been cleared or the [EXIT] key has been pressed at the SITE NAME prompt, the programming sequence resumes at this point.

Procedure Options

- Press [F1]-[F3] to enter one of the CLR submenus.
- Press the [EXIT] key to return to the data measurement display.

5.3 Deleting Log Files

Use the LOG submenu to clear log files from the Model GS868's memory. Press the appropriate side of the [SCREEN] key to activate the desired pane of the data display screen, and complete the following steps:

- 1. To access the *Clear Menu*, press the [CLR] key.
 - **a.** If you have activated the security feature (see Chapter 1, *Programming Site Data*, page 41 for details), enter the assigned password and press [ENT].
- 2. Press [F3] = LOG.
- 3. At the *Name* prompt, the option bar shows the names of all log files currently stored in memory. Use the $[\leftarrow]$, $[\rightarrow]$ and [F1]-[F4] keys to select a log file for deletion. To leave the LOG submenu, press the [EXIT] key.
- **4.** Press [F1] to abort the procedure or press [F2] to *Clear* the specified log file. If any log files remain in memory, the *Name* prompt repeats

When all of the stored log files have been cleared or the [EXIT] key has been pressed at the *Name* prompt, the programming sequence resumes at this point.

Procedure Options

- Press [F1]-[F3] to enter one of the CLR submenus.
- Press the [EXIT] key to return to the data measurement display.



[no content intended for this page]

Chapter 6. Serial Communications

6.1 Introduction

The Model GS868 flowmeter is equipped with a standard RS232 serial interface. By using this interface, any log files stored in the GS868's memory may be easily uploaded to a personal computer. In order to accomplish this, the following steps must be completed:

- Connect the GS868 to the personal computer
- Check the GS868 baud rate setting
- Set up the personal computer's terminal software
- Transfer the log files to the personal computer.

6.2 Wiring the RS232 Interface

The first step is to connect the built-in RS232 port in the GS868 to one of the serial ports (COM1 or COM2) on the personal computer. Table 25 below lists the standard cables available from the factory for this purpose.

Table 25: GE Serial Cables

Part Number	PC Connector	GS868 Connector
704-659	DB25 Male	Flying Leads (5)
704-660	DB9 Male	Flying Leads (5)
704-661	DB25 Female	Flying Leads (5)
704-662	DB9 Female	Flying Leads (5)

Each of the cables listed in Table 25 above is available in several standard lengths. However, a user-supplied cable may be used, if preferred. In either case, wire the GS868 end of the serial cable in accordance with the pin designations listed in Table 26 below

Table 26: RS232 Pin Connections


GS868 Pin #	GE Cable Color	DB25 Cable Pin #	DB9 Cable Pin #
1 (RTN)	Green	7	5
2 (TX)	Black	3	2
3 (RX)	Red	2	3
4 (DTR)	White	20	4
5 (CTS)	Yellow	5	8

Note: For basic serial communications between a single GS868 and a single personal computer, no connections are required to pins 4 and 5 of the GS868's serial connector. However, these pins should be jumpered together to ensure proper operation.

6.3 Checking the GS868 Baud Rate

For successful serial communications, the GS868 and the personal computer must be set up to send/receive data at the same speed. To verify/change the *baud rate* setting of the GS868, proceed as follows:

Access the *User Program*, by pressing the [PROG] key on the keypad. The standard measurement mode screen is replaced by the following initial programming mode screen:

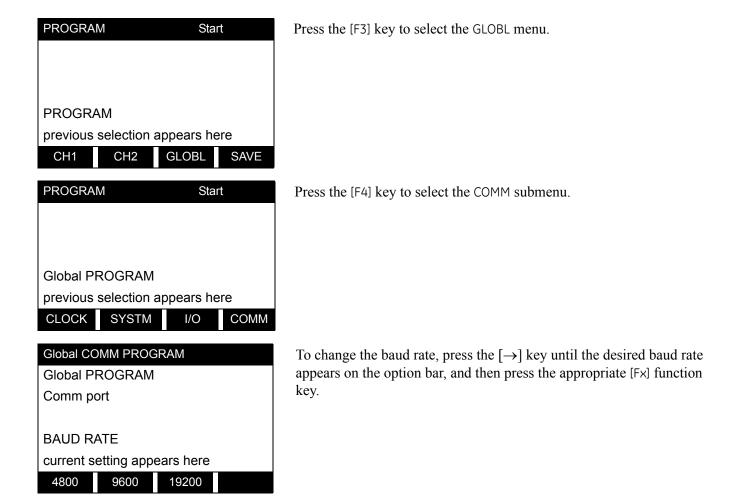

The available rates are 300, 600, 1200, 2400, 4800, 9600 and 19200 baud. After verifying or changing the baud rate setting, press the [EXIT] key three times to return to standard measurement mode.

Note: Refer to Chapter 1, Programming Site Data, for a detailed description of using the COMM submenu.

6.4 Setting Up the Terminal Software

Specific instructions are given in this manual for communicating with personal computers running under either the Windows 3.X or Windows 9X/NT operating systems. Proceed to the appropriate section for detailed set up procedures.

Note: For computers operating under other operating systems, contact the factory for assistance or consult the operating system manual supplied with the computer.

6.4.1 Windows 3.X Systems

To set up serial communications with a personal computer running under Windows 3.X, make sure the GS868 is powered on and complete the following steps:

- 1. In Windows 3.X, select the Terminal Function, which is usually located in the Accessories window.
- 2. The Terminal Screen appears, with six menus located at the top of the screen. Using the Settings Menu, select the Communications option.
- **3.** When the Communications Screen appears, make the following selections:
 - Baud Rate set to the same value as the GS868 setting
 - Data Bits 8
 - Stop Bits 1
 - Parity None
 - Flow Control Xon/Xoff
 - Connector select the correct communications port
 - Parity Check not checked
 - Carrier Detect not checked
- 4. Using the Transfer Menu, select the Receive Text File option.
- **5.** A window appears asking for a file name. Select the desired directory and file name (with .prt extension) and then click on OK.
- **6.** From the keypad on the GS868, enter the PRINT menu and select the log file to be uploaded to the computer in numeric format. See Chapter 4, *Printing Data*, for detailed instructions on this procedure.
- 7. The logged data will begin appearing on the computer screen. After the transfer has been completed, the uploaded file may be used in any software program, just like any other text file.

Note: If the RS232 link does not function, switching the leads to pins 2 (TX) and 3 (RX) at the RS232 connector on the meter often solves the problem.

6.4.2 Windows 9X/NT Systems

Windows 9X/NT systems use a program called *Hyperterminal* to access the serial ports. To set up serial communications with a personal computer running under Windows 95, Windows 98 or Windows NT, make sure the GS868 is powered on and complete the following steps:

- From the Windows START menu, select PROGRAMS>ACCESSORIES>HYPERTERMINAL>HYPERTERMINAL.
- 2. The NEW CONNECTION window should appear (if it does not, select it from the FILE menu). After entering the desired CONNECTION NAME and selecting an ICON, click on OK.
- **3.** When the CONNECT TO window appears, select the serial communications port (COM1 or COM2) to which the GS868 is connected and click on OK.
- **4.** When the COMx PROPERTIES window appears, make sure the settings are as follows:
 - Bits per Second: 9600 (must match the GS868 setting)

• Data Bits: 8

• Parity: None

• Stop Bits: 1

• Flow Control: Xon/Xoff

After making any necessary changes, click on OK.

- **5.** Open the TRANSFER menu and select CAPTURE TEXT. Enter the desired DRIVE:\DIRECTORY\FILENAME for the file about to be transmitted, and click on OK.
- **6.** From the keypad on the GS868, enter the PRINT menu and select the log file to be uploaded to the computer in numeric format. See Chapter 4, *Printing Data*, for detailed instructions on this procedure.
- 7. The logged data will begin appearing on the computer screen. When the transfer has been completed, open the TRANSFER menu and select CAPTURE TEXT>STOP. The uploaded file may now be used in any software program, just like any other text file.

Note: If the RS232 link does not function, switching the leads to pins 2 (TX) and 3 (RX) at the RS232 connector on the meter often solves the problem.

6.5 Optional RS485 Serial Interface

Although the standard RS232 serial interface included with the Model GS868 is adequate for most applications, GE offers an optional RS485 serial interface upgrade for special situations. The Model GS868 is easily modified to provide RS485 communications, and this section describes the wiring and use of the special RS232 to RS485 converter.

IMPORTANT: This section refers to the PC communications port (labelled "RS232" on the main board). If you have a MODBUS card installed, the terminal block on that card will always be RS485. The MODBUS card only sends MODBUS data and cannot be used to set up the GS868. IDM communication always passes via the RS232 port described here.

Note: For compliance with the European Union's Low Voltage Directive, this unit requires an external power disconnect device such as a switch or circuit breaker. The disconnect device must be marked as such, clearly visible, directly accessible, and located within 1.8 m (6 ft) of the electronics console.

6.5.1 Interface Converter Mounting

A special bracket containing the serial interface converter and a three-terminal barrier strip is mounted inside the Model GS868, just below the RS232 terminal block (see Figure 9 below). The standard RS232 terminal block is wired to the input of the serial interface converter, and the RS485 output of the serial interface converter is wired to the barrier strip.

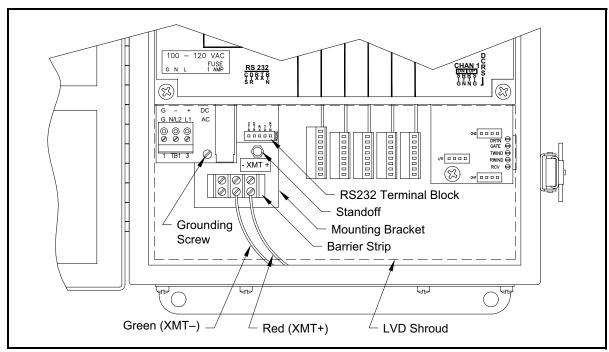


Figure 9: Interface Converter Mounting

6.5.2 Point-To-Point Wiring

Standard factory wiring of the RS485 serial interface is configured for point-to-point wiring. That is, a single Model GS868 may be wired directly to a single personal computer. To connect the RS485 serial interface, refer to Figure 9 on page 87 and complete the following steps:

Note: For compliance with the European Union's Low Voltage Directive, a transparent plastic shroud protects the electrical connections. The shroud must remain in place, except while wiring the unit. Reinstall the shroud after the wiring has been completed.

1. Disconnect the *main power* to the electronics console and open the cover.



<u>WARNING!</u> Dangerous voltages exist within the electronics console. Do not perform any wiring operations until the main power to the unit has been disconnected.

- 2. Remove the clear plastic *shroud* that covers the electrical connectors.
- 3. Using a *twisted-wire pair*, connect the XMT+ terminal of the barrier strip to the XMT+ terminal of the personal computer and connect the XMT- terminal of the barrier strip to the XMT- terminal of the personal computer.

Note: The XMT+ terminal on the barrier strip is the screw opposite the red wire connection and the XMT- terminal on the barrier strip is the screw opposite the green wire connection.

4. Reinstall the clear plastic shroud, close the cover to the electronics console and reconnect the main power.

The RS485 serial interface is now ready for point-to-point operation.

6.5.3 Multi-Point Wiring

The standard point-to-point wiring configuration for the serial interface converter may be modified to permit the use of a multi-point wiring arrangement. In a multi-point RS485 system, one flowmeter (the master) is connected to the personal computer, while a number of additional flowmeters (the slaves) are chained together and connected to the master flowmeter. In order to implement such a system, the DIP switch settings inside each serial interface converter must be changed.

IMPORTANT: The serial interface converter in the <u>last</u> slave unit in the chain should not be reconfigured.

6.5.3a Reconfiguring a Serial Interface Converter

To reconfigure a serial interface converter for multi-point wiring, complete the following steps:

1. Disconnect the *main power* to the electronics console and open the cover.



<u>WARNING!</u> Dangerous voltages exist within the electronics console. Do not perform any wiring operations until the main power to the unit has been disconnected.

- 2. Remove the clear plastic *shroud* that covers the electrical connectors.
- **3.** Remove the serial interface converter *mounting bracket* by removing the standoff located just below the RS232 terminal block and the grounding screw to its left (see Figure 9 on page 87).
- **4.** Loosen the two screws that fasten the DB9 connector to the mounting bracket, and remove the *serial interface converter* from the bracket.
- **5.** Use a small screwdriver to pry open the *plastic case* of the serial interface converter, as shown in Figure 10 on page 90.

The serial interface converter contains a main printed circuit board and a daughter printed circuit board. The daughter board has a small terminal block attached to it and the main board has a DIP switch (SW1) mounted near the center of the board.

6. Locate the switch assembly on the main board, and move the switch in position 1 from ON to OFF. The standard ON state for this switch is for point-to-point operation, while the OFF state is needed for multi-point operation. See Table 27 on page 90 for the proper settings of all four switches on the switch assembly.

6.5.3a Reconfiguring a Serial Interface Converter (cont.)

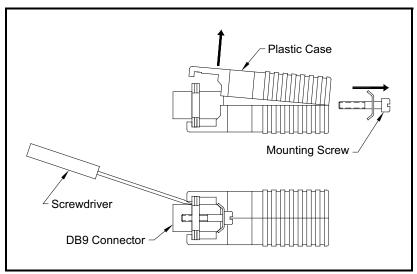


Figure 10: Opening the Converter Case

Tuble 27. Switch Assembly Settings			
Position #	Point-To-Point	Multi-Point	
1	ON	OFF	
2	ON	ON	
3	ON	ON	
4	OFF	OFF	

Table 27: Switch Assembly Settings

- 7. Reassemble the serial interface converter and secure it to the mounting bracket with the two mounting screws.
- **8.** Reinstall the mounting bracket into the electronics enclosure and secure it with the standoff and the grounding screw.

6.5.3b Wiring the System

After the serial interface converters have been configured for multi-point operation, the system can be wired.

1. Using *twisted-wire pairs*, connect the XMT+ terminals of all the flowmeters together and connect the XMT- terminals of all the flowmeters together.

IMPORTANT: Make sure that the flowmeter with the non-modified converter is wired as the last unit in the chain.

2. Using a *twisted-wire pair*, connect the XMT+ terminal of the barrier strip to the T+/R+ terminal of the PC's RS485 adapter and connect the XMT- terminal of the barrier strip to the T-/R- terminal of the PC's RS485 adapter (see the documentation provided with the RS485 adapter for details).

Note: The XMT+ terminal on the barrier strip is the screw opposite the red wire connection and the XMT- terminal on the barrier strip is the screw opposite the green wire connection.

3. Reinstall the clear plastic shroud, close the cover to the electronics console and reconnect the main power.

The RS485 serial interface is now ready for multi-point operation.

6.6 Setting Up an Ethernet Connection

A modified GS868 can use the Ethernet interface to communicate with an internal network. An optional Ethernet card with a unique MAC (IP) address (installed only in slots 5 or 6) includes an RJ45 connector. To connect the Ethernet-enabled GS868 to the network, insert the jack of an RJ45 cable into the RJ45 connector, route the cable through the bottom of the GS868, and wire the other end of the cable to the LAN according to the manufacturer's instructions.

To establish Ethernet communications with the GS868, you must install the Ethernet Device Discovery software utility (available with your modified GS868) on a PC connected to the LAN. Once installed and running, the software displays all Ethernet devices currently connected to the subnet. You can identify the GS868 by its MAC address, supplied as part of customer documentation. The default IP Port is 2101.

The default IP addressing for the GS868 is DHCP (dynamic). If you need to assign a static IP address to the GS868, complete the following steps:

IMPORTANT: To assign a static IP address, the GS868 must be connected to an Ethernet network with a dynamic address assignment mechanism (DHCP) first.

- 1. Run Ethernet Device Discovery software, and identify the GS868's current IP address.
- 2. Open your Internet browser (Internet Explorer, Netscape, or other) and type the GS868 IP address in the Address box.
- 3. The Connect ME Configuration and Management window opens. Two text boxes ask for the user name and password.
 - **a.** In the Username text box, type root.
 - **b.** In the Password text box, type dbps.
- **4.** At the left of the window, click on Network.
- **5.** The IP Settings window opens. In the text boxes for IP Address, Subnet Mask, and Default Gateway, type in the new information.
- **6.** Click Apply. The software applies the new address.

6.7 Setting Up a MODBUS/TCP Connection

A modified GS868 can use the MODBUS/TCP interface to communicate with an internal network. An optional MODBUS/TCP card with a unique MAC (IP) address (installed only in slots 5 or 6) includes an RJ45 connector. To connect the MODBUS/TCP-enabled GS868 to the network, insert the jack of an RJ45 cable into the RJ45 connector, route the cable through the bottom of the GS868, and wire the other end of the cable to the LAN according to the manufacturer's instructions.

To establish MODBUS/TCP communications with the GS868, you must install the Ruiping software utility (available with your modified GS868) on a PC connected to the LAN. Once installed and running, the software displays all Ethernet devices currently connected to the subnet. You can identify the GS868 by its MAC address, supplied as part of customer documentation. The default TCP Port is 502.

The default IP addressing for the GS868 is DHCP (dynamic). If you need to assign a static IP address to the GS868, complete the following steps:

IMPORTANT: To assign a static IP address, the GS868 must be connected to an Ethernet network with a dynamic address assignment mechanism (DHCP) first.

1. Run Ruiping software, and identify the GS868's current IP address.


Note: "Ruiping-e" will return the found IP address as well as the MAC address.

- 2. From a DOS command prompt, type: telnet "ip address" 10000
- **3.** The "Welcome to Net+Works Configuration Utility" opens. Type in the login name and password.
 - **a.** Login: type root.
 - **b.** Password: type Netsilicon.
- 4. In the Main Menu:


92

- a. Select IP Parameters (1). Enter the desired IP changes and return to the Main Menu.
- **b.** Select Enable DHCP Client (3). Select N (2) to disable, then select 4 for Main Menu.
- c. At the Main Menu, select 4 for Quit. Power cycle the GS868 (i.e., turn the meter off and on) to apply the changes.


Appendix A. Menu Maps

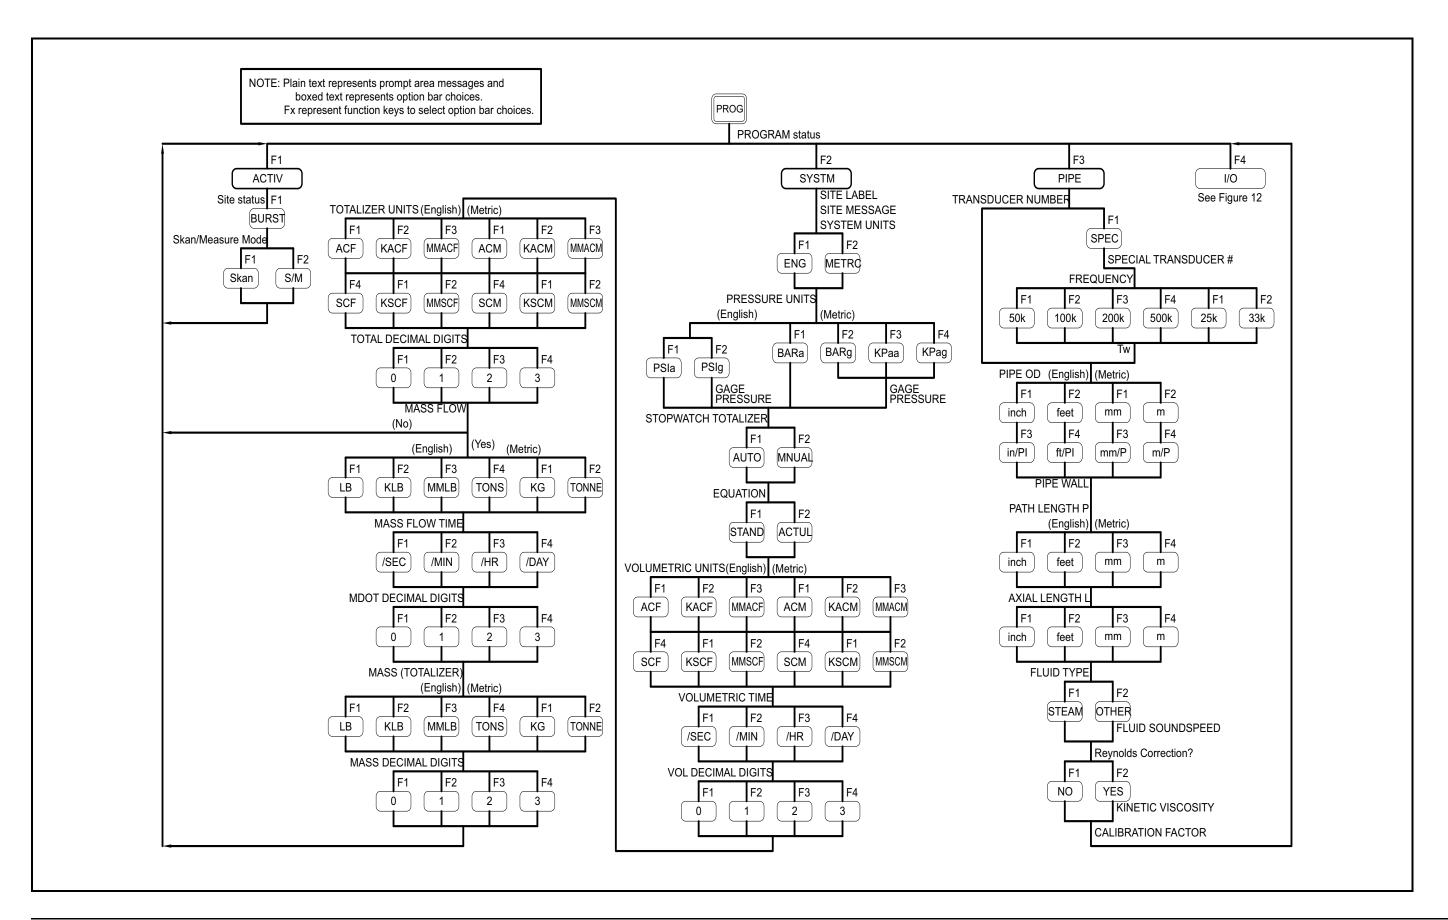



96

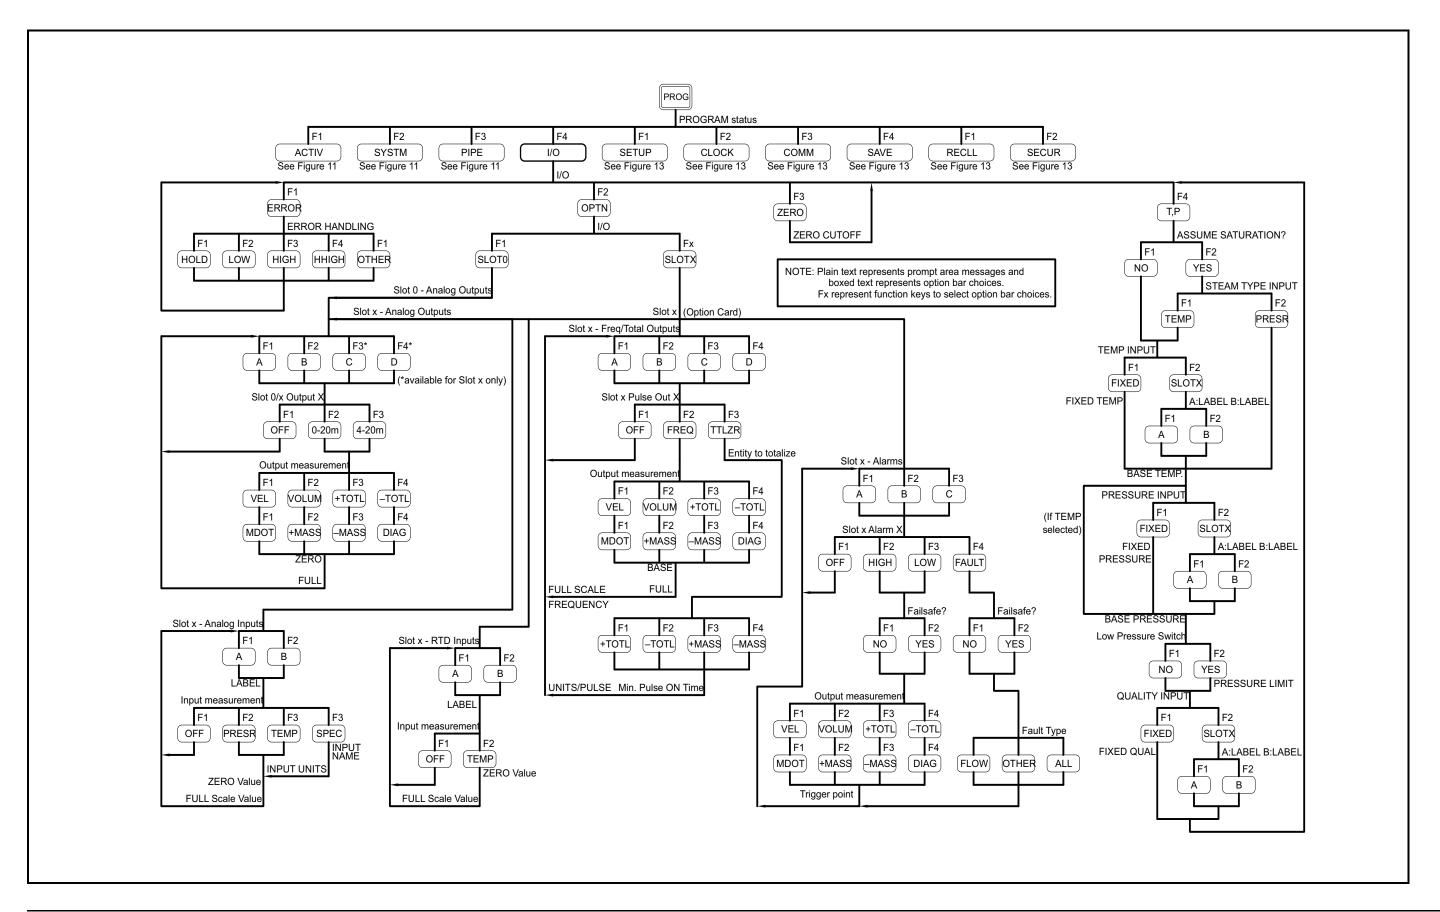


DigitalFlow™ GS868 Programming Manual (2-Channel)

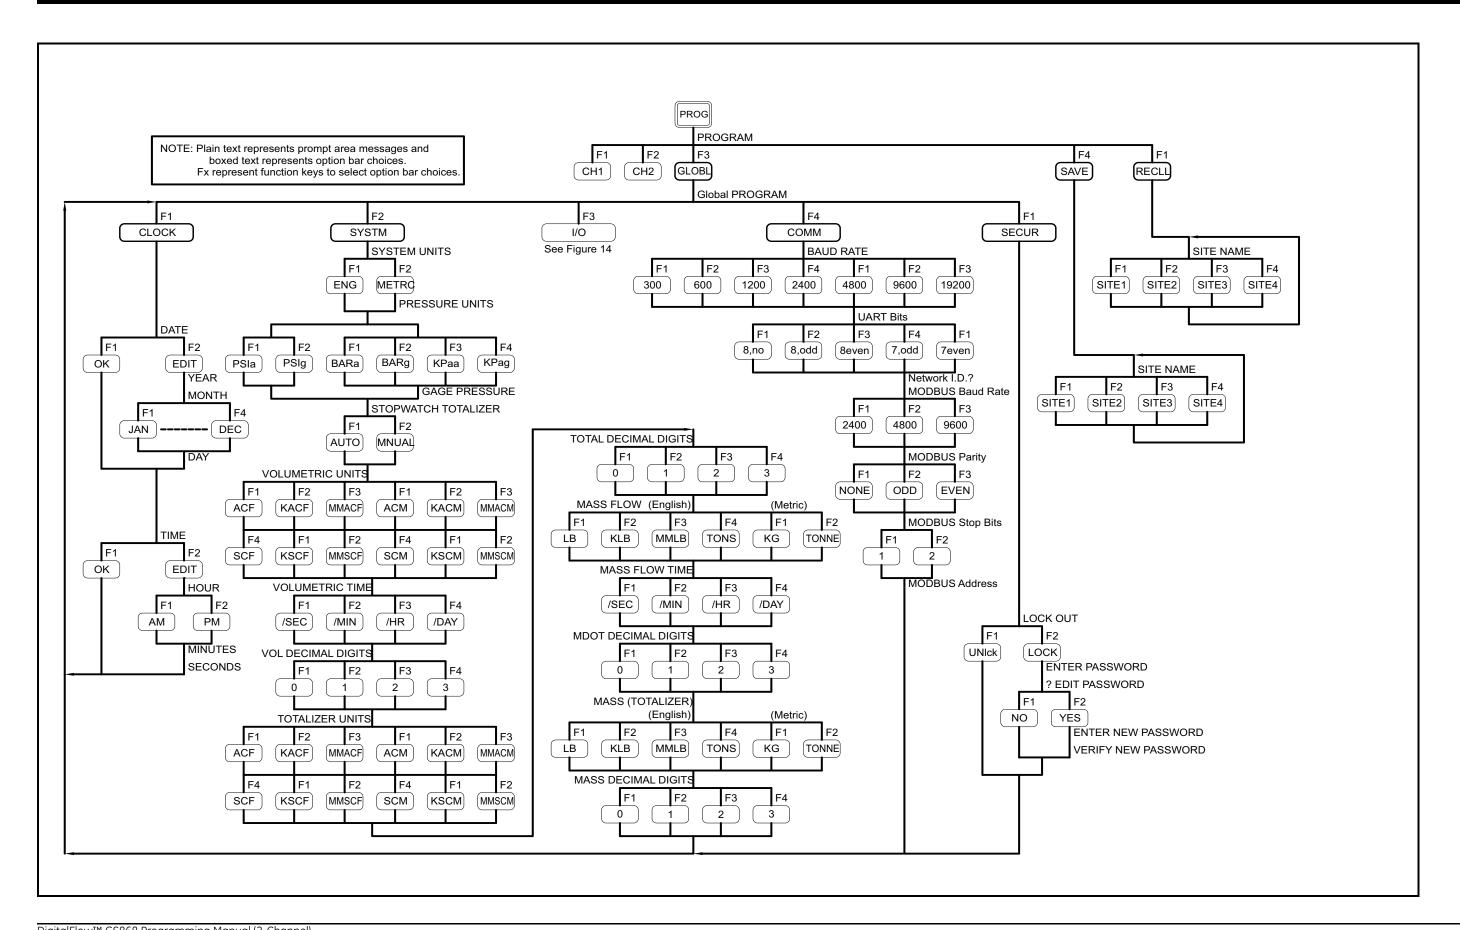

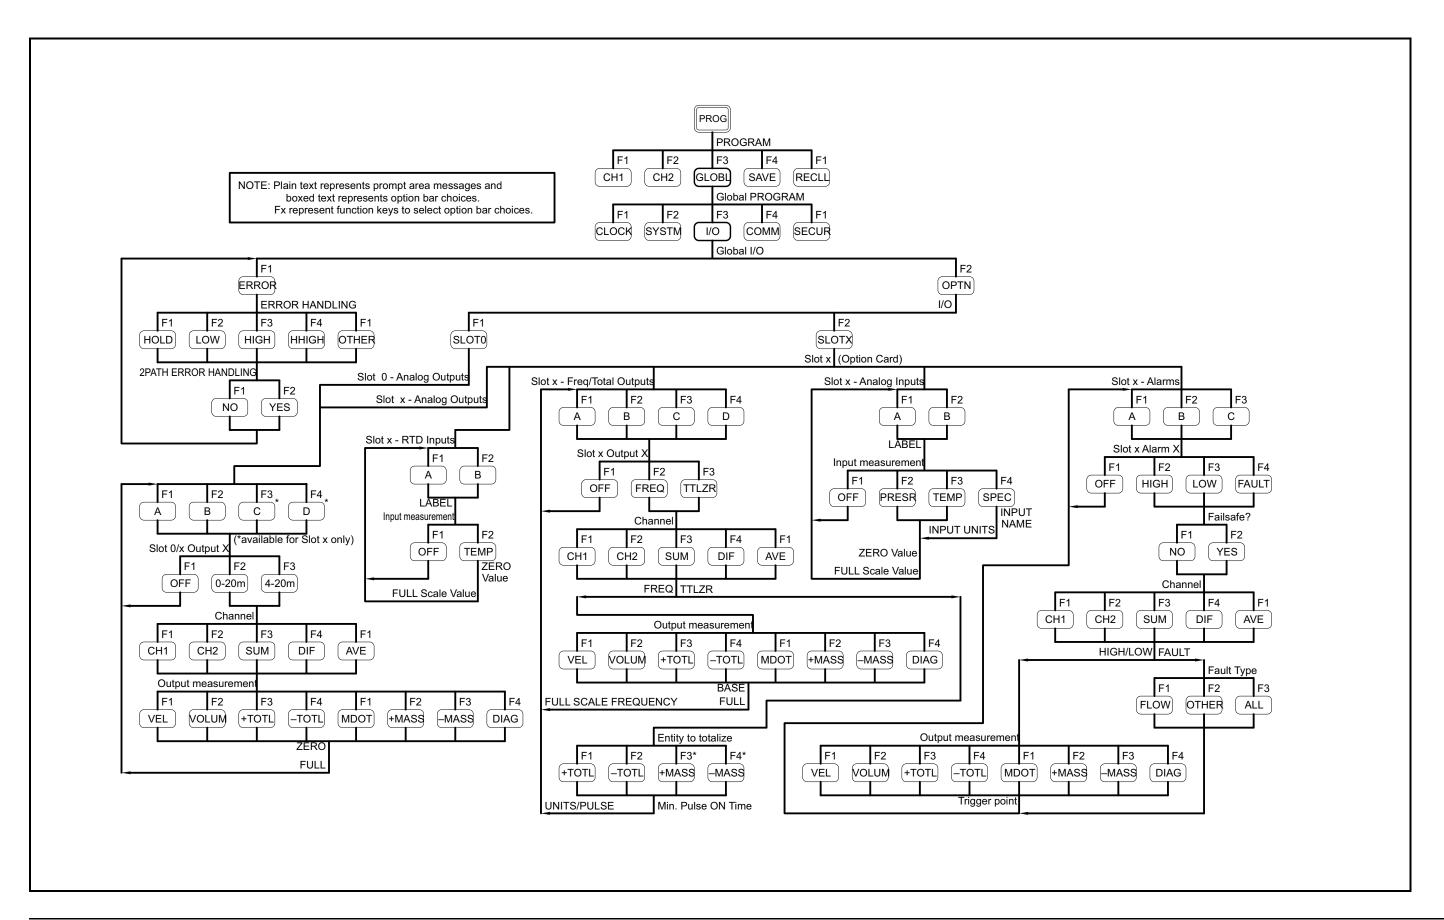


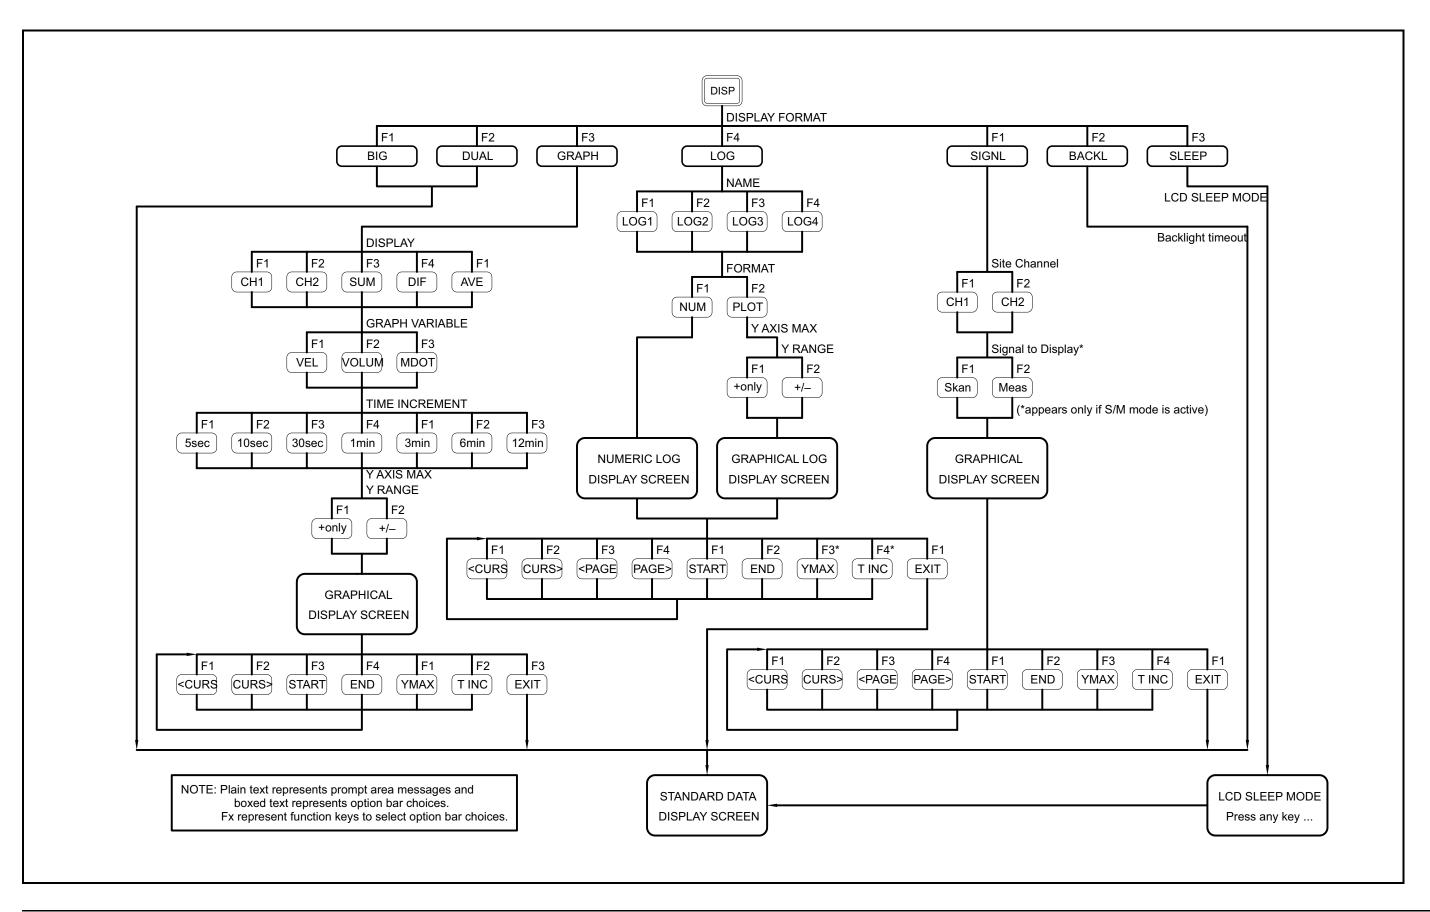

DigitalFlow™ GS868 Programming Manual (2-Channel)

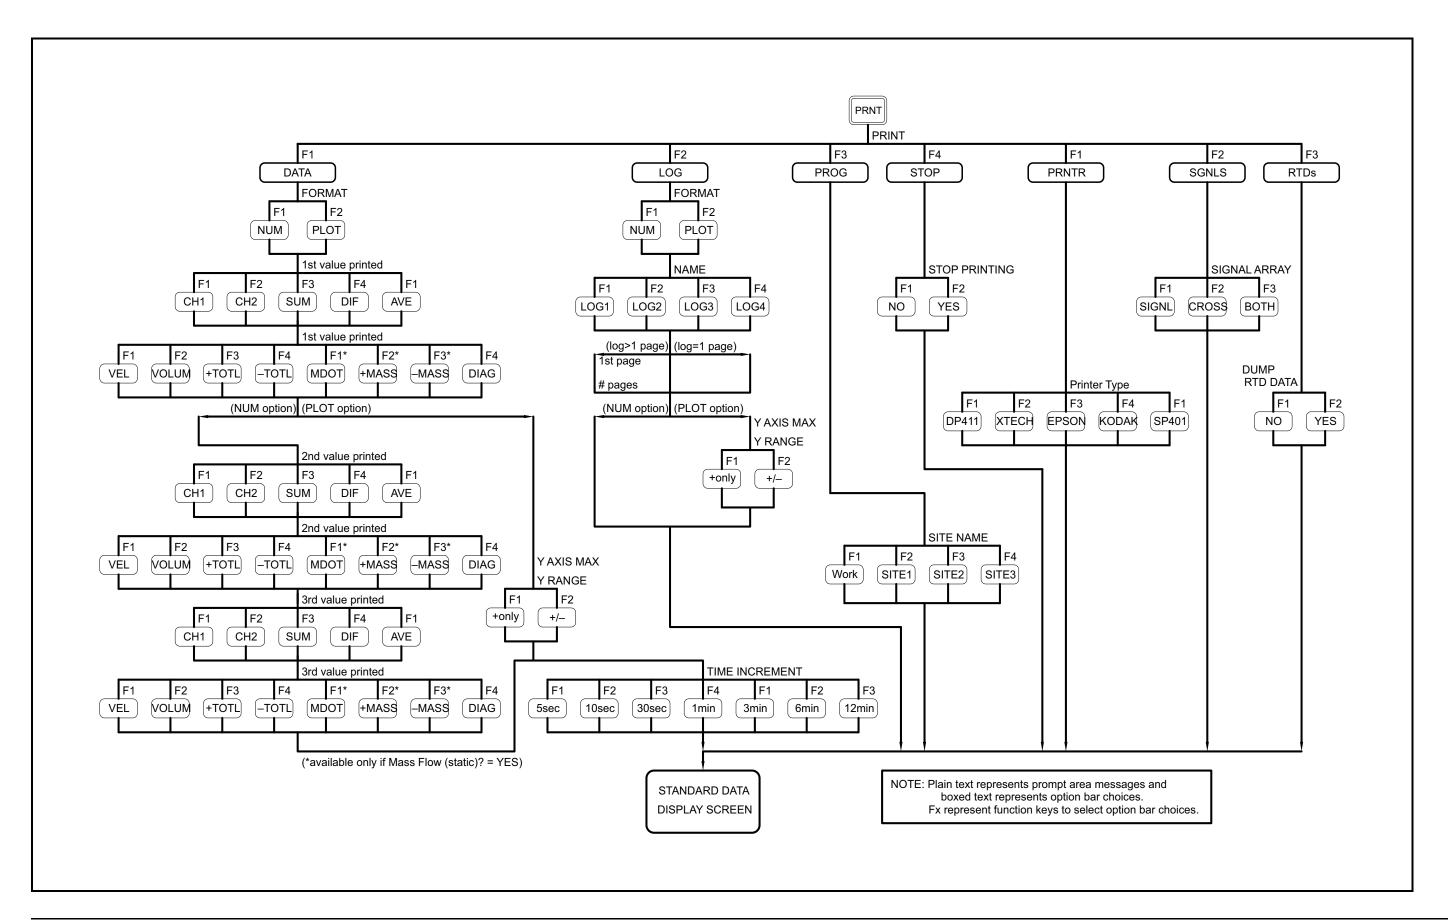

DigitalFlow™ GS868 Programming Manual (2-Channel)

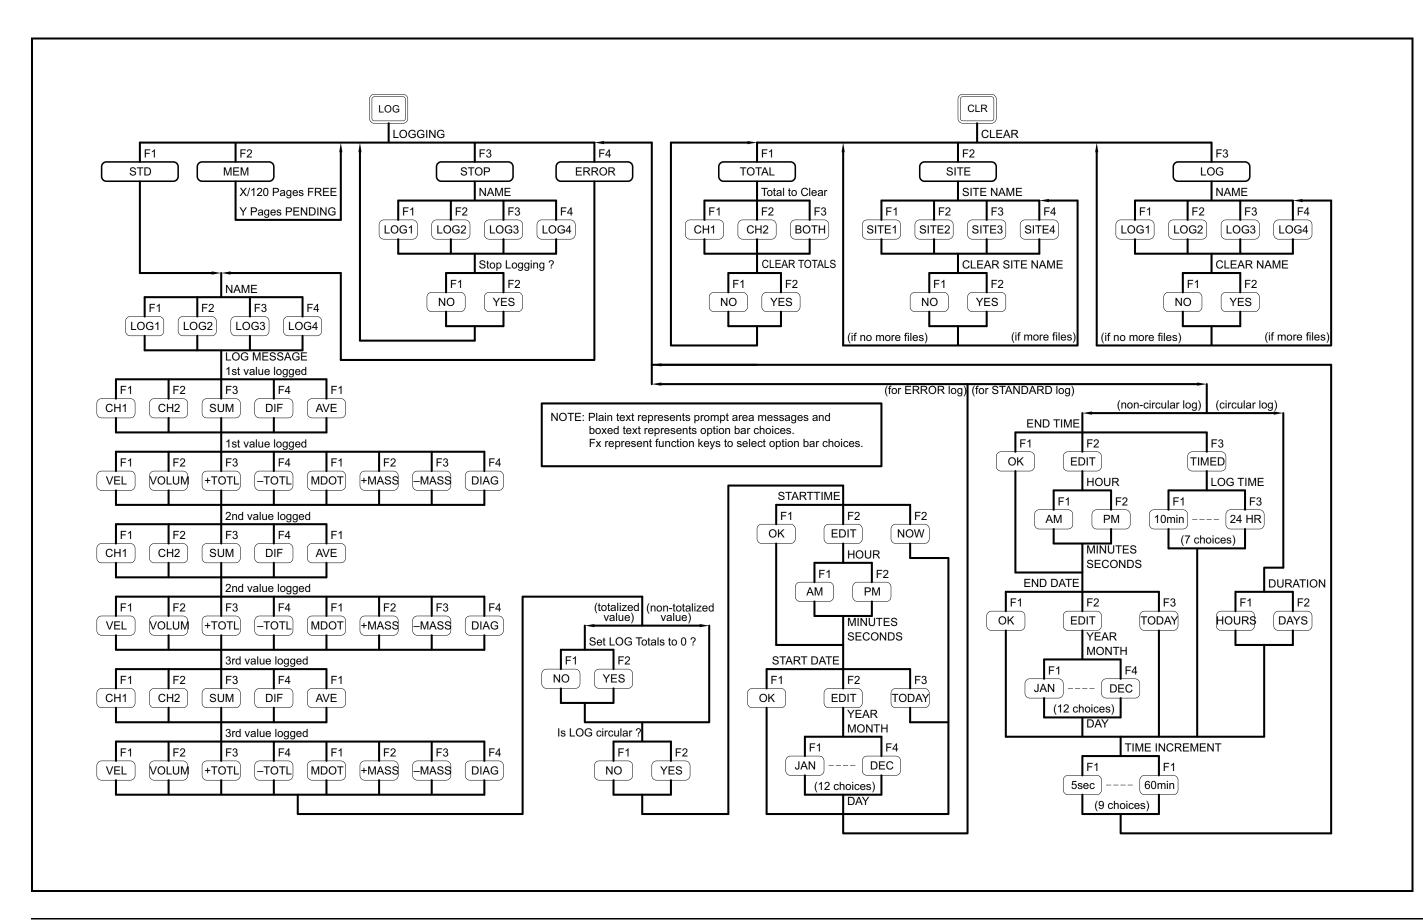

Appendix B. Data Records

B.1 Option Cards Installed

Whenever an option card is installed in one of the Model GS868's expansion slots, record the type of card and any additional setup information in the appropriate row of Table 28 below.

Table 28: Option Cards Installed

Slot#	Table 28: Option (Type of Option Card	Additional Setup Information
0	Analog Outputs (A, B)	
1		
2		
3		
4		
5		
6		

B.2 Initial Setup Data

After the Model GS868 flowmeter has been installed, some initial setup data must be entered via the *User Program*, prior to operation. Record that information in Table 29 below.

Table 29: Initial Setup Data

Table 29: Initial Setup Data						
		General	Info	ormation		
Model #				Reference		
Software Vers.				Date		
Serial #				Z Dimension		
		surement Me	tho	d (CH1/CH2-ACTIV)		
(Channel 1			Cha	annel 2	
Channel Status	Off	Burst		Channel Status	Off	Burst
Measure Mode	Skan	S/M		Measure Mode	Skan	S/M
		nnel Paramet	ers	(CH1/CH2-SYSTEM)		
(Channel 1			Cha	annel 2	
Channel Label				Channel Label		
Channel Message				Channel Message		
Equation	Standard	Actual		Equation	Standard	Actual
Vol. Units				Vol. Units		
Vol. Time Units				Vol. Time Units		
Vol. Dec. Digits				Vol. Dec. Digits		
Totalizer Units				Totalizer Units		
Tot. Dec. Digits				Tot. Dec. Digits		
Mass Flow				Mass Flow		
Mass Flow Time				Mass Flow Time		
MDOT Dec. Dig.			MDOT Dec. Dig.			
Mass (TOT.)				Mass (TOT.)		
Mass Dec. Dig.				Mass Dec. Dig.		
		System Par	ame	ters (GLOBL)		
System Units	English	Metric		Totalizer Units		
Pressure Units				Tot. Dec. Digits		
Gage Pressure				Mass Flow		
Stopwatch Total.	Auto	Manual		Mass Flow Time		
Vol. Units				MDOT Dec. Dig.		
Vol. Time Units				Mass (TOT.)		
Vol. Dec. Digits				Mass Dec. Dig.		
ERROR Submenu						
Error Handling				2-Path Error	NO	YES
	COMM Submenu					
Baud Rate				MODBUS Baud		
				Rate		
UART Bits				MODBUS Parity		
Network ID				MODBUS Address		

Table 29: Initial Setup Data (cont.)

	Pipe/T		ameters (CH1/CH2-PIPE)		
C	hannel 1			annel 2	
Std. Trans. #			Std. Trans. #		
Spec. Trans. #			Spec. Trans. #		
Spec. Trans. Hz			Spec. Trans. Hz		
Spec. Trans. Tw			Spec. Trans. Tw		
Pipe O.D.			Pipe O.D.		
Pipe Wall			Pipe Wall		
Path Length (P)			Path Length (P)		
Axial Length (L)			Axial Length (L)		
Fluid Type	Steam	Other	Fluid Type	Steam	Oth
Other Sndspd			Other Sndspd		
Static Density	No	Yes	Static Density	No	Ye
Fluid Density			Fluid Density		ı
Multi K Factors	Off	On	Multi K Factors	Off	Oı
Edit Table	No	Yes	Edit Table	No	Ye
KF	actor Table	1	K Fac	ctor Table	
K-Factor #	Velocity	K-Factor	K Factor #	Velocity	K-Fa
1			1		
2			2		
3			3		
4			4		
5			5		
6			6		
7			7		
8			8		
9			9		
10			10		
11			11		
12			12		
13			13		
14			14		
15			15		
16			16		
17			17		
18			18		
19			19		
20			20		
Cal. Factor			Cal. Factor		•

Appendix C. Programming with PanaView

C.1 Introduction

The PanaViewTM graphical user interface offers interactive communications between Windows-based PCs and GE instruments compatible with the company's IDM protocol, such as the GS868 ultrasonic gas flowmeter. PanaView is compatible with 32-bit Windows operating systems such as Windows 98SE, NT 4.0 (with Service Pack 6), 2000, XP and ME. With PanaView, you can:

- load and save site file data
- create and save graph and log files
- display text output and graphs of live measurement data
- create custom templates for displaying text, graph and log data
- interface with multiple GE instruments.

This document focuses on particular applications suitable for the GS868. For general PanaView applications such as creating graph and log files, displaying live measurement data, and creating custom templates, please refer to the general PanaView *User's Manual* (910-211).

C.2 Wiring the RS232 Interface

All IDM-protocol instruments utilize an RS232 interface to communicate with a PC. For details on wiring your RS232 interface, please refer to the *Installation* chapter of your instrument's User's Manual, and to the document *EIA-RS Serial Communications* (916-054).

C.3 Setting Up the Communications Port

Use the steps below to establish communications with the GS868.

- 1. Open the "New Meter Browser" window and expand the network tree. Then, highlight the My Computer(Name) branch by clicking on it.
- 2. Pull down the "Edit" menu by clicking on it in the menu bar.
- 3. Click on the "New" menu option to select it, and a submenu opens with two choices on it (see Figure 18 below).

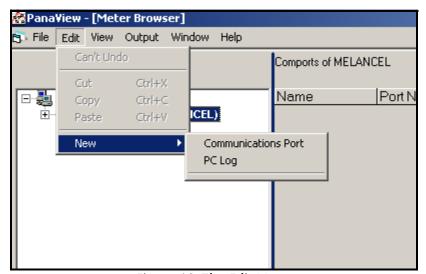


Figure 18: The Edit Menu

C.3 Setting Up the Communications Port (cont.)

4. Click on the "Communications Port" option to select it. The Setup Communications screen appears similar to Figure 19 below.

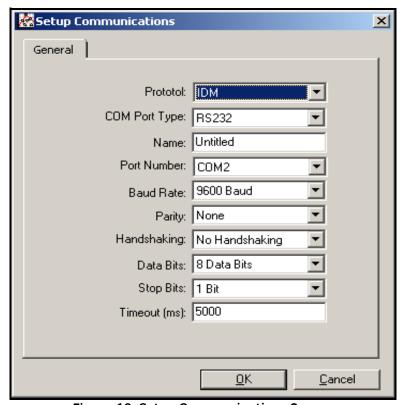


Figure 19: Setup Communications Screen

- 5. Open the Protocol menu (the first of the drop-down menus) and click on *IDM*.
- **6.** Open the COM Port Type menu and click on the desired type (or on *TCP/IP*, if the GS868 is using an Ethernet connection).

Note: If you select TCP/IP, the menu changes. Proceed to the next page.

7. Select any suitable available baud rate. A baud rate of 19,200 is appropriate for almost all applications. However, if you experience periodic communication reliability problems, you may wish to consider lowering the baud rate on your instrument and in PanaView.

IMPORTANT: Be sure all the communications port settings match those made in setting up the meter's serial port.

8. Click [OK] to complete data entry.

C.3.1 Setting up Ethernet Communications

If you have selected TCP/IP in step 6 on the previous page, the Setup Communications window appears similar to Figure 20 below.

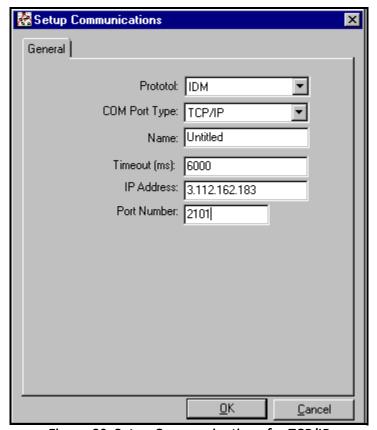


Figure 20: Setup Communications for TCP/IP

- 7. Type in the desired *Name* and *Timeout* (in milliseconds).
- **8.** In the *IP Address* text box, enter the IP address. If the IP address is unknown, run the Device Discovery software utility. All units found will be identified by their MAC address and the assigned IP address. In the *Port Number* box, enter 2101 (the default value).
- **9.** Click [OK] to complete data entry.

IMPORTANT: If you are using Ethernet communications, be sure the GS868 is set up with the default communications parameters: 9600 baud, no parity, no handshaking, 8 data bits and 1 stop bit. The port number must match the "Enable Raw TCP access using TCP Port" assignment shown under the Device Discovery "TCP Server Settings" menu (Configuration>Serial Ports>Port).

C.4 Adding the GS868

To add the GS868 on the IDM-configured communications port, complete the following steps:

- 1. Highlight the communication port to which the meter will be added by clicking on it, and then open the "Edit" menu on the menu bar (if the communication port is not highlighted first, the "New Meter" option is not active in the "Edit" menu).
- 2. Click on the "New" option in the "Edit" menu (see Figure 21 below).

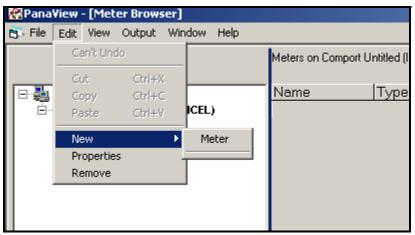


Figure 21: "New" Option in the "Edit" Menu

- 3. After clicking on the "New" option, the "Meter" menu option appears. Click on this option to select it.
- **4.** The "New IDM Meter" screen (shown in Figure 22 below) opens. Enter the Network ID number for the meter, and click [OK].

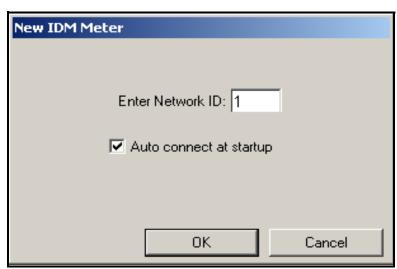


Figure 22: New IDM Meter Screen

C.4 Adding the GS868 (cont.)

IMPORTANT: The Network ID number must match the Network ID programmed in the meter's Communications menu.

If the initialization is successful, the Meter Browser shows a listing similar to Figure 23 below.

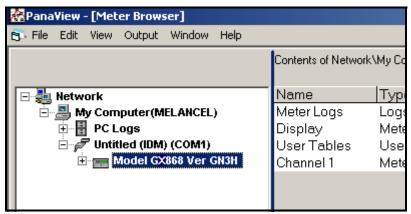


Figure 23: The Updated Network Tree

Note: The model number and version that appear will vary with your particular meter and software version.

However, if the settings do not match, or there is some other difficulty, a screen appears similar to Figure 24 below.

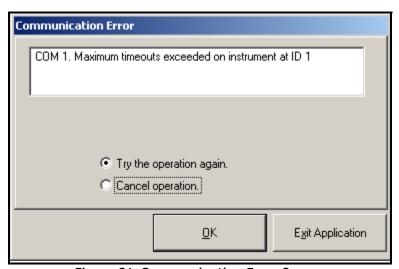


Figure 24: Communication Error Screen

The screen offers the options of trying again or of canceling the operation. Click on the desired choice, and then on [OK] to confirm the choice or on [Exit Application] to close PanaView.

Note: *If you cannot resolve the problem, contact the factory for help.*

C.5 Editing Meter Properties

Through PanaView, you can edit the properties of your GS868. You can:

- Set the meter clock, or synchronize it with the PC clock
- Read, plot and save transducer signals
- Clear totalizers
- Save site files to the meter or PC
- Clear sites from the meter
- Print site files to the PC

To edit the properties of your GS868:

- 1. Highlight the meter (as shown in Figure 23 on page 112).
- 2. Open the "Edit" menu and select the "Properties" option, as shown in Figure 25 below.

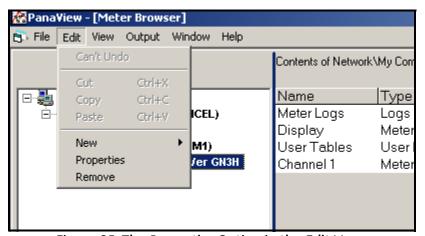


Figure 25: The Properties Option in the Edit Menu

C.5 Editing Meter Properties (cont.)

The window appears similar to Figure 26 below. To perform a specific task, refer to the appropriate section on the following pages.

- Setting the Meter Clock (page 115)
- Reading Transducer Signals (page 116)
- Plotting Transducer Signals (page 116)
- Saving Transducer Signals (page 117)
- Clearing Totalizers (page 117)
- Handling Site Files (page 118)

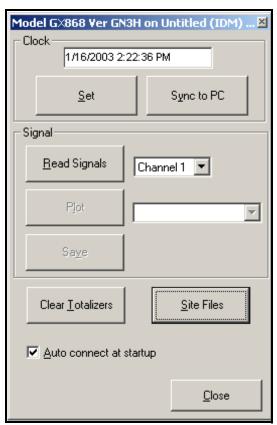


Figure 26: Properties Window for IDM-Based Meter

Note: For illustration purposes, the meter shown here is a one-channel GX868 flowmeter. Specific parameters will vary with your particular meter.

C.5.1 Setting the Meter Clock

The meter's *Time* may be reset in three different ways:

- manually enter the time and date in the text box, or
- click on the [Sync to PC] option button to have PanaView set the time and date to the current PC setting, or
- click on the [Set] option button to open the dialog box shown in Figure 27 below. Set the desired date and time as indicated, and click on the [OK] option button.



Figure 27: Time and Date Selection Window

C.5.2 Reading Transducer Signals

To read a *Signal* from the meter:

1. Click on the *Read Signals* button. (If the meter is a multi-channel instrument, open the Channel drop-down menu and click on the desired channel.) After a moment, the *Properties* window appears similar to Figure 28 below.

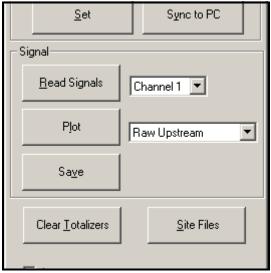


Figure 28: Active Signal Options

2. To select a different signal type, open the signal menu at the right (shown here with *Raw Upstream* highlighted) and click on the desired signal.

C.5.3 Plotting Transducer Signals

To *plot* the selected signal, click on *Plot*. A graphical window opens, as shown in Figure 29 below.

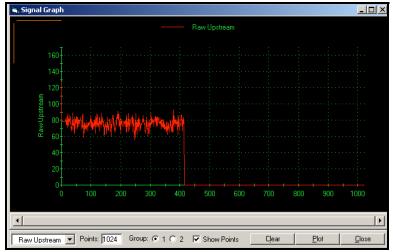


Figure 29: Signal Graph Window

C.5.4 Saving Transducer Signals

To *save* the raw signal, click *Save*. A window opens similar to that shown in Figure 30 below. Enter the desired name, and click *Save* to save the signal as a text file.

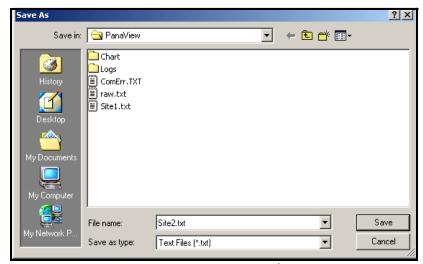


Figure 30: Save As Window

C.5.5 Clearing Totalizers

To clear the meter totalizers, click on the *Clear Totalizers* button in the *Properties* window. The meter totalizers are reset to 0.

C.5.6 Handling Site Files

To access site files, click on the *Site Files* button in the *Properties* window. The *Site File Operations* window (shown in Figure 31 below) opens.

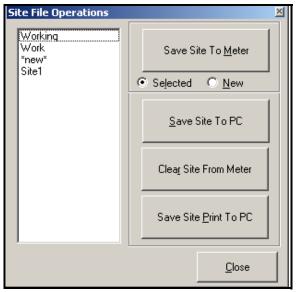


Figure 31: The Site File Operations Window

C.5.6a Saving an Existing Site to the Meter

To save an existing site to the meter:

- 1. Select the radio button for *Selected* and highlight an existing site in the left pane.
- 2. Then click on the Save Site to Meter button. A screen opens similar to Figure 32 below.

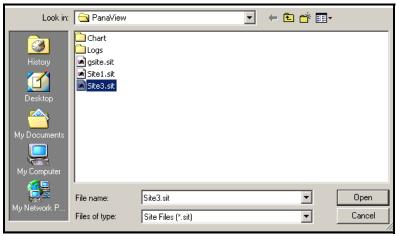


Figure 32: Site File Selection

3. Highlight the desired site and click *Open*. PanaView sends the site to the meter.

C.5.6b Saving a New Site to the Meter

To save a new site to the meter:

- 1. Select the radio button for *New* and click on the *Save Site to Meter* button.
- 2. A window opens similar to Figure 33 below. Enter the desired name, and click [OK].

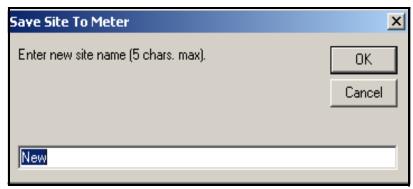


Figure 33: Site Name Entry Window

3. The *Site File Selection* window (Figure 32 on page 118) opens. Highlight a site with the desired settings, and click [Open]. PanaView saves the site in the meter with the new name and the desired settings.

C.5.6c Saving a Site to the PC

To save a site to the PC:

- 1. Highlight the desired site in the left pane. (See Figure 31 on page 118.)
- 2. Click Save Site to PC. A window opens similar to Figure 30 on page 117.
- **3.** Enter the desired site name and click [Sove]. PanaView saves the site in the PanaView folder unless otherwise specified.

Note: If you have created a site on the meter after opening the Site File Operations window, you must close and reopen the window to click on the new site.

C.5.6d Clearing a Site from the Meter

To clear a site from the meter:

- 1. Highlight the site in the left pane. (See Figure 31 on page 118.)
- 2. Click Clear Site From Meter.
- **3.** The program asks for confirmation. Click [OK]. The meter deletes the designated file.

C.5.6e Saving a Site in Text Form

To store the data from a site file as a text file for display or printout:

- 1. Highlight the site in the left pane. (See Figure 31 on page 118.)
- **2.** Click Save Site Print to PC.
- 3. The *Site File Selection* window (shown in Figure 32 on page 118) opens. Enter the desired site name (now with a .prt suffix) and click [Sove]. PanaView displays a text version of the site, as shown in Figure 34 below.

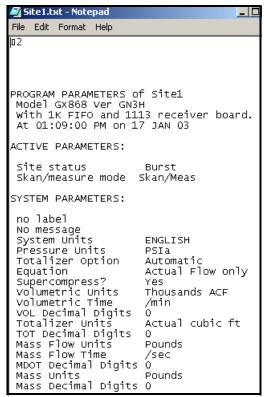


Figure 34: Printout of Site File

4. Click [Close] once to close the *Site File Operations* window, and a second time to close the *Properties* window and return to the *Meter Browser*.

C.6 Changing Meter Settings

Through PanaView, GS868 users can handle remote programming of the meter. They can:

- Program and change a meter's operating parameters;
- Set up, start, and stop logs;
- Calibrate and test inputs and outputs;
- Clear various files.

To access meter programming:

- 1. Enter the *New Meter Browser* option from the "File" menu.
- **2.** Expand the network tree until you reach the desired meter.
- **3.** Then expand the meter tree as shown in Figure 35 below.

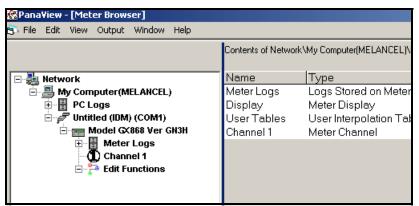


Figure 35: New Meter Browser with Meter Branch

C.6 Changing Meter Settings (cont.)

4. From the meter tree, expand the *Edit Functions* option. The window now appears similar to Figure 36 below, with a list of available menus. The menus listed are those available on the meter.

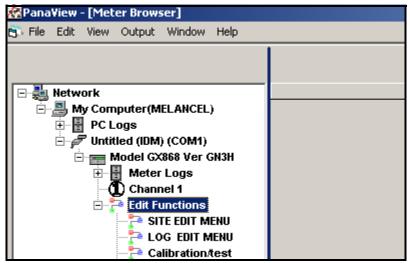


Figure 36: Meter Tree with Edit Functions Option

5. To open a particular menu, double-click on that menu on the tree. For example, if you double-click on the Site Edit Menu, a window opens similar to Figure 37 below.

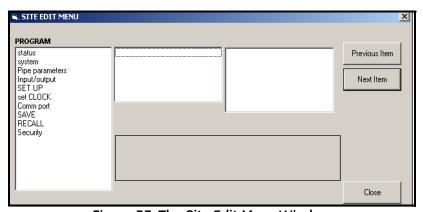


Figure 37: The Site Edit Menu Window

Note: The options listed in the left pane correspond to the options available in the GX868 PROGRAM menus. For more information about the options in your instrument program and about appropriate parameters for the GS868, consult the previous chapters in this manual.

C.6 Changing Meter Settings (cont.)

- **6.** To enter a particular option:
 - **a.** Highlight and double-click on the desired option in the left pane. Figure 38 below shows the first entry (Transducer Number) in the *Pipe parameters* option. The title above the center pane lists the current entry, while the center pane displays the available selections for that entry.
 - **b.** Click on the desired choice; if the entry requires a numeric value, change the value displayed in the right pane.

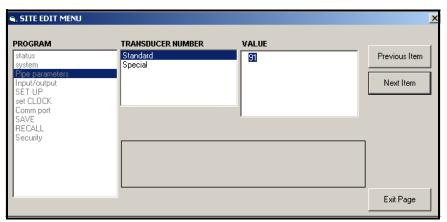


Figure 38: Pipe Parameters Option in Site Edit Menu

c. Do one of the following:

Click on [Next Item] to proceed to the next menu item,

or

Click on [Previous Item] to return back through the menu to a previous item.

Note: *If you click on either* [Next Item] *or* [Previous Item] *without changing the settings, the current settings remain unchanged.*

As you step through the menu, the bottom panel lists the current settings you have modified or left unchanged (see Figure 39 on page 124). If you modify or step through more than five items, a scroll bar at the right of the panel lets you review the earlier settings.

C.6 Changing Meter Settings (cont.)

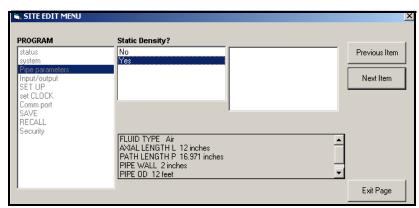


Figure 39: Site Edit Menu with Current Settings

7. When you have completed entering parameters in a given option, click [Exit Page] to close the option. You can then double-click on another option, or click [Close] to close the window.

You can double-click on another menu to modify its settings, or return to the *New Meter Browser*. For additional PanaView functions, refer to the PanaView *User's Manual*.

Appendix D. Foundation Fieldbus Communications

D.1 Optional Measurements

Foundation Fieldbus provides a means of communicating with the flowmeter. The patent numbers which apply are 5,909,363 and 6,424,872.

This Foundation Fieldbus device supports 6 Analog Input (AI) blocks, which can be configured to supply the following measurements on the network (see Table 30 below).

Table 30: Available Measurements for the GS868

Channel 1	Units	Channel 2	Units	Average	Units
Ch1 Velocity	ft/s or m/s*	Ch2 Velocity	ft/s or m/s*	Avg Velocity	ft/s or m/s*
Ch1 Act Volumetric	VOL_U	Ch2 Act Volumetric	VOL_U	Avg Act Volumetric	VOL_U
Ch1 Std Volumetric	VOL_U	Ch2 Std Volumetric	VOL_U	Avg Std Volumetric	VOL_U
Ch1 Fwd Totals	TOT_U	Ch2 Fwd Totals	TOT_U	Avg Fwd Totals	TOT_U
Ch1 Rev Totals	TOT_U	Ch2 Rev Totals	TOT_U	Avg Rev Totals	TOT_U
Ch1 #Tot Digits**	none	Ch2 #Tot Digits**	none	Avg #Tot Digits	none
Ch1 Mass Flow	MASS_U	Ch2 Mass Flow	MASS_U	Avg Mass Flow	MASS_U
Ch1 Fwd Mass Totals	MTOT_U	Ch2 Fwd Mass Totals	MTOT_U	Avg Fwd Mass Totals	MTOT_U
Ch1 Rev Mass Totals	MTOT_U	Ch2 Rev Mass Totals	MTOT_U	Avg Rev Mass Totals	MTOT_U
Ch1 #Mass Tot Digits	none	Ch2 #Mass Tot Digits	none	Avg #Mass Tot Digits	none
Ch1 Timer	sec	Ch2 Timer	sec	Avg Timer	sec
Ch1 Error Code	none	Ch2 Error Code	none	Avg Error Code	none
Ch1 SSUP	none	Ch2 SSUP	none	Avg SSUP	none
Ch1 SSDN	none	Ch2 SSDN	none	Avg SSDN	none
Ch1 Sound Speed	ft/s or m/s*	Ch2 Sound Speed	ft/s or m/s*	Avg Sound Speed	ft/s or m/s*
Ch1 Density***	see note	Ch2 Density***	see note		
Ch1 Temperature	Deg F or C*	Ch2 Temperature	Deg F or C*		
Ch1 Pressure	PRESS_U	Ch2 Pressure	PRESS_U		_

^{*}Metric or English units are determined by the setup of the flowmeter.

^{**}Totalizer digits are available for informational purposes only. Respective totals are automatically scaled by the Tot Digits value selected in the flowmeter setup.

^{***}If the meter is outputting Mole Weight, the unit is "mw", otherwise it is the programmed pressure unit.

VOL_U, TOT_U, MASS_U, MTOT_U and PRESS_U are determined by the units chosen for these measurements in the flowmeter setup. See the instrument User's Manual for the setup of these parameters.

D.2 Configuration Utility Setup

The following is an example setup using National Instruments Configuration Utility v3.1.

Figure 40 below shows the Configuration Utility with a flowmeter on the network (GE Flow-XMT).

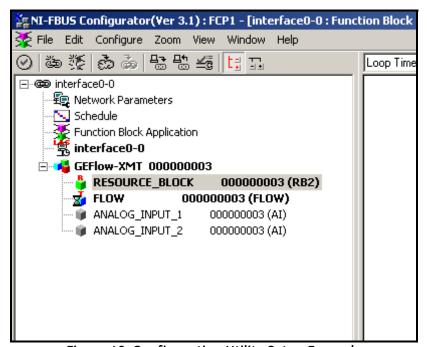


Figure 40: Configuration Utility Setup Example

Note: The following procedures assume that the device has been placed in the OOS (out-of-service) mode before executing.

D.3 Selecting the Desired Measurements

To set the measurement unit for each AI:

- 1. Double click on the FLOW Transducer Block (in the tree under GEFlow-XMT).
- 2. Select the **Others** tab and open the drop down list for the PRIMARY_SELECTOR and SECONDARY_SELECTOR (refer to Figure 41 on page 127).
- **3.** Choose the unit from the list (see Figure 41 on page 127).

This unit will correspond to the unit that is available in the AI block for network connection. The PRIMARY_SELECTOR unit will correspond to ANALOG_INPUT_1 and the SECONDARY_SELECTOR will correspond to ANALOG_INPUT_2.

D.3 Selecting the Desired Measurements (cont.)

4. After the desired measurements have been selected for the PRIMARY and SECONDARY SELECTOR, choose the unit system (UNIT_SELECTOR above the PRIMARY_SELECTOR) that has been programmed in the flowmeter (English or SI).

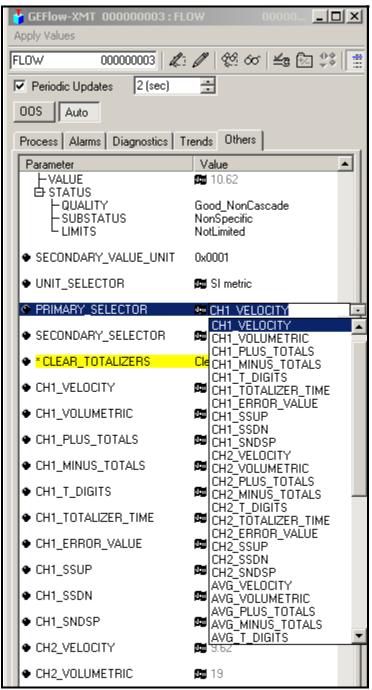


Figure 41: Primary Selector Drop Down List

D.4 Selecting Units for AI Blocks

To select the units for the individual AI blocks:

- 1. Double click on the AI block for which you wish to set the units (ANALOG_INPUT_1 or ANALOG_INPUT_2 in the tree under GEFlow-XMT; see Figure 40 on page 126).
- 2. Select the **Scaling** tab and set the unit for the measurement based on the flowmeter settings.

For example, if the flowmeter was set to use the metric unit system and the PRIMARY_SELECTOR was set to use VELOCITY you would choose **m/s** for the unit as shown in Figure 42 below.

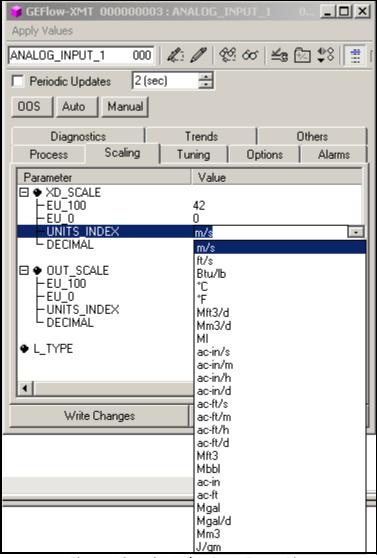


Figure 42: Units Index Drop Down List

D.5 Resetting Instrument Totalizers

To reset the instrument totalizers:

- 1. Double click on the FLOW transducer block (in the tree under GEFlow-XMT; see Figure 40 on page 126).
- 2. Select the **Others** tab and scroll down to the CLEAR_TOTALIZERS listing.
- **3.** Select **Clear** from the drop down list box (see Figure 43 below).
- **4.** After the totals have been reset, select **Normal** from the drop down list box to resume total accumulation.

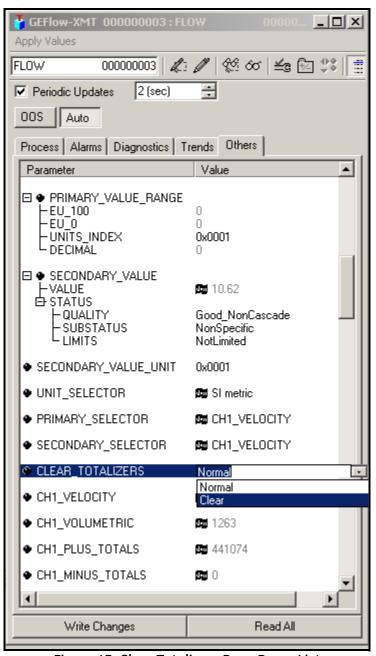


Figure 43: Clear Totalizers Drop Down List

D.6 Function Block Application

Figure 44 below is an example setup using the Function Block Application editor. The flowmeter AI blocks, along with the AO and PID of another device on the network, are displayed. We have connected the AI_1 OUT of the flowmeter to the CAS IN of the AO block. We have also connected the AI_2 OUT of the flowmeter to the CAS IN of the PID block.

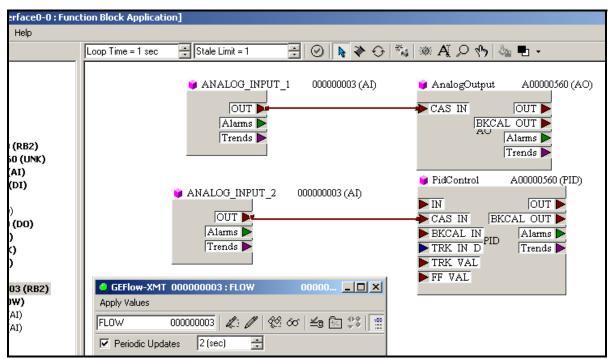


Figure 44: Function Block Application

Appendix E. Foundation Fieldbus Tables

Table 31: GE Fieldbus Device Capability, XGX868 Family of Meter Types

Model		GF868, GS868, GM868, XGF868i, XGM868i, and XGS868i
1Genero	ıl	
1.1	Is the Device registered at the Fieldbus Foundation (Yes/No)	Yes
1.2	Is the Unit released to production, and if not, when?	Yes
1.3	Is there any special functionality that device supports (e.g., display blocks, diagnostic blocks)?	No
1.4	Manufacturer Name	GE Measurement & Control
1.5	Model	GE Measurement & Control Gas Flowmeter
1.6	Device Type	0002
1.7	FF Device Revision	02
1.8	Does the device require special programming software to configure a 'good' status on the PV?	Yes
1.9	Does the Device feature a Non-Volatile Memory protection feature? If so, what are the steps to disable/enable from the Resource or Transducer block.	No
1.10	HOST System registered	Yokogawa (TBD), Emerson, Honeywell (TBD), ABB (TBD)
1.11	Design Concept	Entity Concept
1.12	FISCO Compliant?	No
1.13	FNICO Compliant?	Yes: models XGM868i, XGS868i, XGF868i; No: others
1.14	Hazardous Location Certs	GF868, GM868, GS868: CSA for non-incendive Div 2, Class 1, Gr A, B, C, & D. IP66
		Optional: Div 1, Class 1, Gr C & D or
		ATEX II 2 G Ex d IIC T6 IP66 or
		IECEx II2 G Ex d IIC T6 Gb IP66
		XGM868i, XGS868i, XGF868i: CSA Div 1, Class 1, Gr B, C, & D and ATEX II 2 G D Ex d IIC T5 IP66 and IECEx II 2 G Ex d IIC T6 Gb IP66
1.15	FF Liquid PCB p/n: XMT868i / DF868	
1.16	FF Gas PCB p/n: XGx868i / Gx868	703-1475-04 (rev J)/ 703-1491-04

Table 31: GE Fieldbus Device Capability, XGX868 Family of Meter Types (cont.)

1 1 7	Mater Coffrage version (minimum and higher)	
1.17	Meter Software version (minimum and higher)	GF868: GF3S; GM868:GM3Q; GS868: GS3N; GC868: GC4C; XGM868i: Y4DM; XGS868: Y4DS; XGF868i:Y4DF
1.18	Firmware on FF card version	868_GAS_FF_206
1.19	Interoperability Test Kit (ITK) revision	6.1.1
1.2	Protocol	H1
1.21	Protocol Baud (bps)	31.25k
2 - DD and	CFF	
2.1	Device Description File Name (.ffo and .sym) and rev	0203
2.2	Capabilities File Name and rev	020101.cff
2.3	Methods (list all methods available)	none
3- Physica	İ	
3.1	Polarity Sensitive (Yes / No)	Yes (Protected from failure if installed incorrectly)
3.2	Quiescent Current Draw (mA)	10 mA idle / 18 mA max
3.3	Startup Current Draw (ma)	18 mA
3.32	Working voltage	9-32 VDC
3.33	Device Minimum Voltage	9 VDC
3.41	Device Resistance (Ohms) fieldbus terminal (+) to (-)	30 Mega Ohms increasing
3.42	Device Resistance (Ohms) fieldbus terminal (+) to Ground	open circuit > 20 MOhm
3.43	Device Resistance (Ohms) fieldbus terminal (-) to Ground	open circuit > 20 MOhm
3.51	Capacitance (microF) (+) to (-)	1 pF
3.52	Capacitance (microF) (+) to Ground	634.7 pF
3.53	Capacitance (microF) (-) to Ground	635.7 pF
3.6	4-wire Device (if so, what AC/DC Voltage, Single or 3-phase	Yes, (85-250 VAC 50/60 Hz, single phase or 12-28 VDC)
3.7	Connection type	Terminal block, 2-wire twisted pair
4 - Comm		
4.1	Stack Manufacturer	National Instruments
4.2	Does the Device support Backup LAS functionality? (If it does, then the functionality will be tested.)	No
4.3		
4.4	Total Number of VCRs	20
4.5	Number of Fixed VCRs for user configuration	1 fixed for System Management,
	(Publisher, Subscriber, Alarming, and Trending)	19 variable for user configuration

Table 31: GE Fieldbus Device Capability, XGX868 Family of Meter Types (cont.)

	Table 31: GE Fieldbus Device Capability, XGX868	s ramily of Meter Types (cont.)
5 - User l	Layer General	
5.1	Function Block Application Manufacturer	Fieldbus Inc.
5.2	Function Blocks (list all type, but not including transducer)	6 - Al(e), 1 - PID(e), 2 -TB(c), 1 - RB2(e)
5.3	Device support block instantiation (Yes/No)	No
5.4	Number of Link Objects	20
5.5	Device support firmware upgrade over fieldbus segment? (Yes/No)	No
5.6	Configuration write protect?	Hardware jumper only
5.7	Zero trim, sensor trim, factory recall/ Upgrade device master reset	None
6 - Resou	ırce Block	
6.1	Block Class (Std, Enhanced, Custom)	Enhanced
6.2	Special Features	Detailed errors, supported modes, revision id and date
7 - Trans	ducer Blocks	
7.1	Transducer Blocks based on which latest version of the FF spec	FF-902 FS 1.4
7.2	Block Type	Flow/Display
7.3	Block Class (Std, Enhanced, Custom)	Custom/Custom
	Does the Device support Methods in the Resource and Transducer Blocks? (If it does, then the functionality will be tested.)	No
7.4	Special Features besides Methods (multiple VIEWS, etc.)	Multiple View3s and View4s
	Device specific advanced diagnostics	Yes
8 - Funct	ion Blocks	
8.1	Does the Device support Custom Function Blocks? An example of custom block has Profile Number equal to or greater than 0x8000. A standard enhanced block has Profile Revision with 0xXXXX, where Enhancement Number upper byte is non-zero (e.g. 0x5500 is en	No
8.2	Block Type	AI/PID
8.3	Number Available	6/1
8.4	Execution Time (ms)	50/100
8.5	Block Class (Std, Enhanced, Custom)	Enhanced
8.6	Function Block Special Features (e.g., Configuration required for non-standard parameters by host)	None

Table 31: GE Fieldbus Device Capability, XGX868 Family of Meter Types (cont.)

9 - Channels	XD_SCALE and CHANNEL value	List by Channel, Unit Code, Enumerated description, and Function Block Type (if applicable)
9.1	Channel 0	n/a
9.2	Channel 1	Channel 1 - "Primary Value"/"Secondary Value"
		AI Block
		Units -
		1001 - degree Celsius
		1002 - degree Fahrenheit
		1034 - cubic meter (removed)
		1043 - cubic feet
		1053 - standard cubic foot
		1061 - m/s
		1067 - ft/s
		1088 - kilogram
		1092 - metric ton
		1094 - pound (mass)
		1095 - short ton
		1097 - kilograms per cubic meter
		1107 - pounds per cubic foot
		1142 - pounds per square inch absolute
		1143 - pounds per square inch gauge
		1324 - kilogram per hour
		1360 - standard cubic feet per minute
		1361 - standard cubic feet per hour
		1526 - Standard cubic meter (20° 1 atm)
		1547 - kilopascal absolute
		1548 - kilopascal gauge
		1590 - bar gauge (replaced with 34002)
		1597 - Bar absolute (replaced with 34001)
		1653 - cubic Megafeet per day (replaced with 34005)
		33010 - thousands of actual cubic feet (changed to 34028)
		33015 - thousands of actual cubic meters (changed to 34033)
		33022 - thousands of standard cubic feet (changed to 34038)

Table 31: GE Fieldbus Device Capability, XGX868 Family of Meter Types (cont.)

Table 31: GE Fleiabus Device Capability, XGX868 Family of Meter Types (cont.)				
	33026 - thousands of standard cubic meters (changed to 34043)			
	33037 - millions of actual cubic feet (changed to 34004)			
	33042 - millions of actual cubic meters (changed to 34009)			
	33049 - millions of pounds (changed to 34003)			
	33054 - millions of standard cubic feet (changed to 34014)			
	33058 - millions of standard cubic meters (changed to 34023)			
	33063 - standard cubic feet per day (changed to 34025)			
	33064 - standard cubic feet per second (changed to 34026)			
	33065 - thousands of pounds (changed to 34027)			
	33066 - mole weight (changed to 34024)			
	33067 - thousands of kilograms (removed)			
	1322 - kilogram per second			
	1323 - kilogram per minute			
	1325 - kilogram per day			
	1326 - metric ton per second			
	1327 - metric ton per minute			
	1328 - metric ton per hour			
	1329 - metric ton per day			
	1330 - pound per second			
	1331 - pound per minute			
	1332 - pound per hour			
	1333 - pound per day			
	1334 - short ton per second			
	1335 - short ton per minute			
	1336 - short ton per hour			
	1337 - short ton per day			
	1347 - cubic meter per second			
	1348 - cubic meter per minute			
	1349 - cubic meter per hour			
	1350 - cubic meter per day			
	1356 - cubic feet per second			

1357 - cubic feet per minute 1358 - cubic feet per hour 1359 - cubic feet per day 1497 - cubic kilometer per second 1498 - cubic megameter per second 1501 - cubic kilometer per minute 1502 - cubic megameter per minute 1505 - cubic kilometer per hour 1506 - cubic megameter per hour 1509 - cubic kilometer per day 1510 - cubic megameter per day 1527 - Standard cubic meter per second (20°, 1atm) 1528 - Standard cubic meter per minute(20°, 1atm) 1529 - Standard cubic meter per hour (20°, 1atm) 1530 - Standard cubic meter per day (20°, 1atm) 34000 - Actual cubic meters 34001 - Bar absolute 34002 - bar gauge 34003 - million pounds 34004 - millions of actual cubic feet 34005 - Millions of actual cubic feet per day 34006 - Millions of actual cubic feet per hour 34007 - Millions of actual cubic feet per minute 34008 - Millions of actual cubic feet per second 34009 - millions of actual cubic meters 34010 - Millions of pounds per day 34011 - Millions of pounds per hour 34012 - Millions of pounds per minute 34013 - Millions of pounds per second 34014 - millions of standard cubic feet 34015 - Millions of Standard cubic feet per day 34016 - Millions of Standard cubic feet per hour 34017 - Millions of Standard cubic feet per minute

,	Table 31: GE Fieldbus Device Capability, XGX868	
		34018 - Millions of Standard cubic feet per second
		34019 - Millions of Standard cubic meter per day
		34020 - Millions of Standard cubic meter per hour
		34021 - Millions of Standard cubic meter per minute
		34022 - Millions of Standard cubic meter per second
		34023 - millions of standard cubic meters
		34024 - mole weight
		34025 - Standard cubic feet per day
		34026 - Standard cubic feet per second
		34027 - thousand pounds
		34028 - Thousands of actual cubic feet
		34029 - Thousands of actual cubic feet per day
		34030 - Thousands of actual cubic feet per hour
		34031 - Thousands of actual cubic feet per minute
		34032 - Thousands of actual cubic feet per second
		34033 - Thousands of actual cubic meters
		34034 - Thousands of pounds per day
		34035 - Thousands of pounds per hour
		34036 - Thousands of pounds per minute
		34037 - Thousands of pounds per second
		34038 - Thousands of standard cubic feet
		34039 - Thousands of Standard cubic feet per day
		34040 - Thousands of Standard cubic feet per hour
		34041 - Thousands of Standard cubic feet per minute
		34042 - Thousands of Standard cubic feet per second
		34043 - Thousands of standard cubic meters
		34044 - Thousands of Standard cubic meters per day

Table 31: GE Fieldbus Device Capability, XGX868 Family of Meter Types (cont.)

		34045 - Thousands of Standard cubic meters per hour
		34046 - Thousands of Standard cubic meters per minute
		34047 - Thousands of Standard cubic meters per second
9.3	Channel 2	Channel 2 - "Primary Value"/"Secondary Value" Al Block Units - same as channel 1

Α	Data Records
Abbreviations, Volumetric Units	Date, Programming
ACTIV	DISP
Submenu9	Menu
AVRG Option	Display
AVRG Submenu	Metric or English
	Displaying Data
В	BIG Format
BACKL	Display Menu
Automatic Timeout	DUAL Format
Submenu	Graphical Format
Backlight	Log File
See BACKL	Log File Display Options 51, 52
Basic Programming Data	Log File, Graphical Format
Baud Rate	Log File, Numeric Format
Available Options	Numeric Key Functions
Setting	SLEEP Mode
BIG	Transducer Signals54
Measurement Parameter Options 46	Typical SIGNL Display Screen
Screen Format	DUAL
Submenu	Screen Format
Burst Mode	Submenu
С	F
Cables, RS232 Interface	_
CH1/CH2 Menu	Edit Functions Option
Channel	Edit Menu
Label	ERROR
Message	Submenu
Clear Site from Meter	Error Handling
Clear Totalizers	2-Path
Clearing Data	Ethernet
CLOCK	Setting up with PanaView
Menu Map	Ethernet, Setting Up91
Submenu	F
CLR Menu Map	Foundation Fieldbus
COMM	Available Measurements
Menu Map	Communications
Submenu	Function Keys, GRAPH Screen Format
Communications Port, Setting Up	•
Communications Fort, Setting Op 100, 109	G
D	GLOBL
DATA	Menu
Submenu70	Submenus

GRAPH	Logging Data
Screen Display Options	Calculating Number of Pages 64
Screen Format	Calculating Number of Records 64
Setting Up	Circular
Submenu	Measurement Parameter Options 60
Typical Display Screen	Menu
Using Function Keys	Non-Circular 61
	Time Increment
Н	
Help, On-Line 6	M El H.
1	Mass Flow Units
I/O (CH1/CH2)	Available Options
Menu Map	Setting
Submenu	Measure Mode
I/O (GLOBL)	Measurements, Foundation Fieldbus
Submenu	MEM Submenu
IDM-Compatible Meters	Menu
INIT Submenu	See Menu Name
Instrument Data Manager (IDM)	Menu Map
<u> </u>	CLR
K	LOG Submenu
Keypad	PRNTR Submenu
Description	SGNLS Submenu
Using	STOP Submenu
Keys	Menus, Edit
Audio Alarm Volume	Meter Settings, Changing
Console Control	MODBUS
Display Backlight	Register Map for
Display Contrast	MODBUS/TCP
Stopwatch Totalizer	Setting Up
Table of Functions	N
L	Network ID Number
LOG	Numeric Keys, Displaying SIGNL Data
Entering the Submenu	0
Menu Map	•
Submenu	On-Line Help
Log File	Option Card
Header	RTD Inputs
Pages of Memory	Setup Information Table
Records	OPTN Menu
12000130	P
	PanaView, Applications of

Password	RS232 Interface	
Default	Baud Rate	. 84
Entering	Cable Connections	. 83
PIPE	COM Ports	. 83
Submenu	Hyperterminal	. 86
Pipe OD	Pin Assignments	
Available Units	Terminal Software	
Pipe OD, Programming	Windows 3.X Systems	
Pipe Wall, Programming	Windows 9X/NT Systems	
Plotting Signal	Wiring	
Printer	RS485 Interface	. 02
Acceptable Models	Conveter Switch Settings	. 90
Interface	Multi-Point Wiring	
Setting Up	Point-To-Point Wiring	
Printing Data	Reconfiguring Converter	
Live Data, Graphical Format	RS232 Converter	
Logged Data, Graphical Format	RTD Inputs Card, Setting Up	
Logged Data, Numeric Format	RTD Submenu.	
Measurement Parameter Options70	RTD Submend	. 70
Sample Printout, Live Graphical	S	
Sample Printout, Live Numeric71	SAVE	
Sample Printout, Logged Graphical	Menu	. 43
Sample Printout, Logged Numeric	Menu Map	. 43
Sample Printout, Signal Array	Save Site Print to PC	120
Sample Printout, Site Data	Save Site to Meter	118
Serial Port	Save Site to PC	119
Site File	SECUR	
PRNT	Menu	. 41
Menu	Submenus	. 41
PRNTR	Serial Communications	
Menu Map	Baud Rate	. 36
Submenu	COMM Menu	. 36
PROG	Network ID Number	. 36
Menu Map	UART Bits	. 36
Submenu	Serial Interface	
Programming Mode, Entering	RS485 Interface Converter	. 87
Properties Option in Edit Menu	SETUP	
	Submenu	. 18
R	SGNLS	
RECLL	Menu Map	
Menu	Submenu	. 77
Menu Map		

Signal	V
Graph	Volumetric Units
Plot116	Abbreviations
Reading116	Selecting
Save	Table of Options
Type	•
Signal Array Data, Printing	Z
SIGNL	ZERO
Submenu	Entering Cutoff Value
Typical Display Screen	Submenu
SIGNL Option	
Site Edit Menu	
Site File Operations	
Site Files, Handling	
SITE Submenu	
Skan Mode	
SLEEP Submenu	
STD Submenu	
STOP	
Menu Map	
Submenu	
Submenu	
See Submenu Name	
SYSTM (CH1/CH2)	
Submenu11	
SYSTM (GLOBL)	
Submenu	
Т	
TOTAL Submenu	
Transducer	
Special	
Transducer Signals	
Display Options	
Displaying	
U	
UART Bits	
Available Options	
Setting	
User Program	
Accessing	
Exiting	
Sub-Menus	

GE Infrastructure Products Used in Hazardous Locations

Installation and operation manuals in their complete forms, along with product specific certification and safety statement sheets are included on the CD provided with the product documentation shipped with each instrument. Please read and follow all provided manufacturer's instructions prior to installation and the application of power to your equipment. Always observe the following:

- Field wiring shall be rated at least 10°C above rated ambient.
- Connecting cables shall be mounted securely and protected from mechanical damage, pulling and twisting.
- Cable entry thread types are identified on the equipment label.
- Cable glands of an approved flameproof design are required for **Ex d** rated equipment. These must be installed according to the manufacturer's instructions. Where the cable glands are provided by GE, the manufacturer's instructions, as supplied to GE, will be included in the documentation.
- Unused cable entries must be sealed using a suitably certified threaded plug.
- Modifications to any flameproof enclosure are not permitted.
- The apparatus must be de-energized before opening, servicing and conducting any routine maintenance.
- Installation shall be in accordance with the installation instructions and the National Electrical Code[®]
 ANSI/NFPA 70, the Canadian Electrical Code C22.1, or IEC/EN 60079-14, as applicable.
- The product contains no exposed parts which produce surface temperature infrared, electromagnetic ionizing, or non-electrical dangers.
- The product must not be subjected to mechanical or thermal stresses in excess of those permitted in the certification documentation and the instruction manual.
- The product cannot be repaired by the user. It must be replaced by an equivalent certified product. Repairs should only be carried out by the manufacturer or by an approved repairer.
- Only trained, competent personnel may install, operate and maintain the equipment.
- The product is an electrical apparatus and must be installed in the hazardous area in accordance with the requirements of the EC Type Examination Certificate. The installation must be carried out in accordance with all the appropriate international, national and local standard codes and practices and site regulations for flameproof apparatus and in accordance with the instructions contained in the manual. Access to the circuitry must not be made during operation.



Special Conditions for Safe Use

- 1 Consult the manufacturer if dimensional information on any flameproof joint is necessary.
- 2 Follow the manufacturer's instructions to reduce the potential of an electrostatic charging hazard.
- 3 Consult the manufacturer for genuine replacement flange fasteners. M10x35 hexagon socket cap screws of ISO 12.9 DIN912 grade steel (zinc-plated) or better with a minimum yield strength of 135,000 psi are acceptable alternatives.
- 4 The sensor body temperature code rating is dependent on the process temperature. It is assumed that the external surface of the sensor body will be, at worse case, equal to the process temperature (up to 140°C). In all cases, the electronics assembly will be marked **T6** as it will be locally mounted for process temperatures up to 85°C and will be remotely mounted for process temperatures exceeding 85°C.

Markings

Markings appear on the instrument label which identifies the product model, serial number, operating ranges, hazardous area ratings, entry thread type, and warning and caution information.

EU / EEA Installation Compliance

The use of this apparatus is subject to the EU directive on minimum requirements for improving the safety and health protection of workers potentially at risk from explosive atmospheres, **Council Directive 1999/92/EC**. The installer is required to be familiar with this document or the National transposing legislation.

Increased Safety Wiring Connections

Power Connection:

Maximum Size [‡]: Solid - 4.0 mm² (12 AWG)

Stranded – 2.5 mm² (14 AWG)

Number of conductors[†]: 2 Solid – max 1.5mm² (16 AWG)

2 Stranded – max 1.0 mm² (18 AWG)

All Other Screw Terminal Connections:

Maximum Size [‡]: Solid - 4.0 mm² (12 AWG)

Stranded – 2.5 mm² (14 AWG)

Number of conductors[†]: 2 Solid – max 1.5mm² (16 AWG)

2 Stranded - max 1.0 mm² (18 AWG)

‡ - Single conductor

† - Multi-conductors of same cross-section

CSS-0013, Rev. A 2 of 2

EC DECLARATION OF CONFORMITY

DOC-0013, Rev. B

We,

GE Sensing 1100 Technology Park Drive Billerica, MA 01821 USA

declare under our sole responsibility that the

DigitalFlow™ DF8688 Liquid Ultrasonic Flowmeter
DigitalFlow™ GC868 Clamp-On Gas Ultrasonic Flowmeter
DigitalFlow™ GF868 Flare Gas Mass Ultrasonic Flowmeter
DigitalFlow™ GM868 General-Purpose Gas Ultrasonic Flowmeter
DigitalFlow™ GS868 Steam Mass Ultrasonic Flowmeter

to which this declaration relates, are in conformity with the following standards:

- EN 60079-0: 2007
- EN 60079-1: 2004
- EN50281-1-1: 1998
- II 2 G EEx d IIC T6: ISSeP03ATEX113 (ISSeP, B7340 Colfontaine, Belgium NoBo 492)
- EN 61326-1: 2006, Class A, Table 2, Industrial Locations
- EN 61326-2-3: 2006
- EN 61010-1: 2012, Overvoltage Category II

Other standards Used:

- EN 50014: 1997 +A1, A2
- EN 50018: 2000 +A1

following the provisions of the 2004/108/EC EMC, 2006/95/EC Low Voltage and 94/9/EC ATEX Directives.

Where products were initially assessed for compliance with the Essential Health and Safety Requirements of the ATEX Directive 94/9/EC using earlier harmonized standards, a subsequent review has determined that "technical knowledge" is unaffected by the current harmonized standards listed above.

The unit listed above and any ancillary equipment supplied with it do not bear CE marking for the Pressure Equipment Directive, as they are supplied in accordance with Article 3, Section 3 (sound engineering practices and codes of good workmanship) of the Pressure Equipment Directive 97/23/EC for DN<25.

Billerica - October 31, 2013

Issued

Mr. Gary Kozinski Certification & Standards, Lead Engineer

Hanykoznik





Customer Support Centers

U.S.A.

The Boston Center 1100 Technology Park Drive Billerica, MA 01821 U.S.A.

Tel: 800 833 9438 (toll-free) 978 437 1000 E-mail: sensing@ge.com

Ireland

Sensing House Shannon Free Zone East Shannon, County Clare Ireland

Tel: +353 (0)61 470200

E-mail: gesensingsnnservices@ge.com

An <u>ISO 9001:2008 Certified</u> Company www.ge-mcs.com/en/about_us/quality.html

www.ge-mcs.com

©2015 General Electric Company. All rights reserved. Technical content subject to change without notice.